



# 5.0 SPEAKER MOUNT USER'S GUIDE


 
GB

## REQUIRED TOOLS

- A. 5/32" hex wrench (supplied)
- Drill bits:
  - B. Wood 5/32"
  - C. Drywall - 1/4"
  - D. Masonry - 5/16" carbide tipped
- E. Crescent or 7/16" (11mm) open end wrench
- F. Phillips screwdriver
- G. Electric drill
- H. Hammer (masonry only)

## KIT SPECIFICATIONS

- Spécifications de l'ensemble
- Especificaciones del Kit
- Spezifikation des Montagesatzes
- Caratteristiche tecniche
- Specificaties van de kit

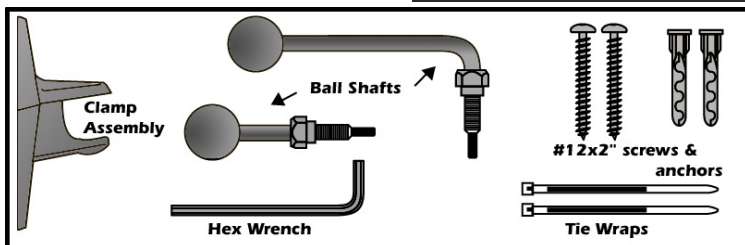


## MOUNTING OPTIONS

- Possibilités de montage
- Possibilidades de instalación
- Montagemöglichkeiten
- Opzioni di montaggio
- Montageopties




## CLAMP ASSEMBLY ORIENTATION

- Orientation du bloc d'attache
- Orientación de la sujeción
- Ausrichtung des Halterungssatzes
- Orientamento della mensola
- Oriëntatie van klemstuk

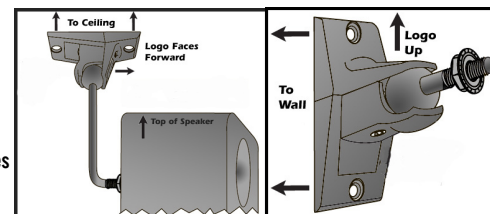


## ATTACHING THE BALL SHAFT

- Fixation du raccord à tête sphérique
- Atornillar el eje giratorio
- Anbringen der Kugelgelenkstange
- Collegamento del braccio
- Vastmaken van kogelgas

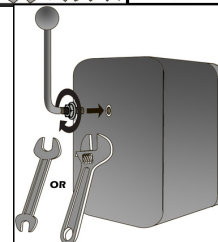


## 1. MOUNTING THE CLAMP ASSEMBLY


- A) Mark Location  
Mark mounting holes with pencil
- B) Mounting onto Wooden Stud. Use 5/32" drill bit  
Minimum mounting hole depth: 2" (51mm)

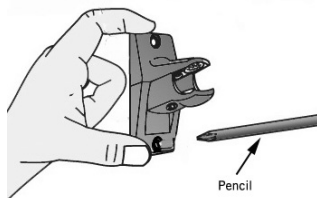


- C) Drywall Mounting  
Use 1/4" drill bit  
Insert anchor into hole

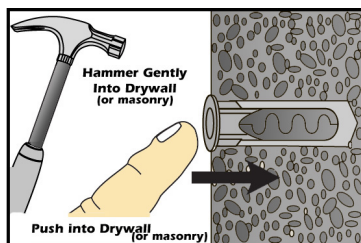

- D) Mounting into Masonry  
5/16" (8mm) carbide tipped bit and masonry or hammer drill.  
Wear eye protection.  
Minimum mounting hole depth: 2" (51mm)  
Insert anchor into hole

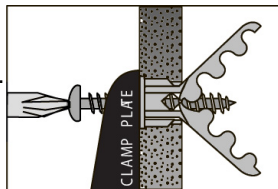

- E) Mount Clamp Assembly  
Attach clamp assembly with supplied screws.

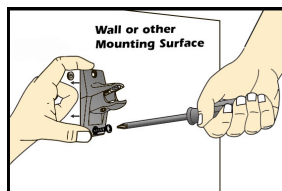

## 2. JOINING BALL SHAFT AND CLAMP ASSEMBLY


Open clamp assembly enough to accept ball.

"Pop" ball into the clamp assembly.

Set speaker to desired position.

Tighten clamp assembly until snug.

Note: Speaker weight must be fully supported during the tightening process.

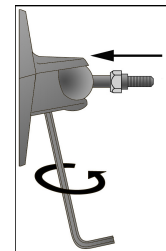


## 3. FINAL ADJUSTMENTS

Use tool to tighten in 1/2 turn increments.  
Do not over tighten.

To change speaker angle, loosen tension screw, re-position speaker, then re-tighten tension screw.

To rotate speaker cabinet, loosen jam nut, rotate speaker into desired position, then re-tighten jam nut

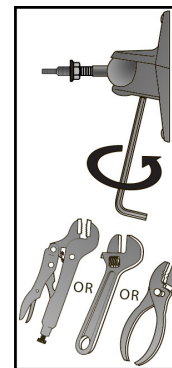

## 4. SECURING THE SPEAKER WIRE

