

188mm

156mm

**CHROMATIC TUNER
T-02 OWNER'S MANUAL**


Thank you for purchasing the Brighton CHROMATIC TUNER T-02.

Brighton

Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

Controls and functions

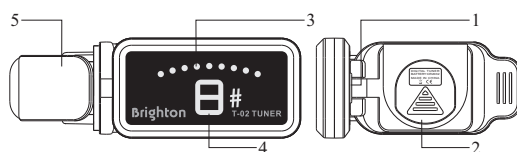

1. Power button (press and hold 2 seconds) & Display mode switch
2. Battery Compartment
3. LED Indicator
4. Note name
5. Clip

Specifications

Tuning item : Chromatic
Pitch range : 440Hz
Tuning way : Clip (tune by vibration)
Detection accuracy: ± 0.5 cent
Power supply : one 2032 coin battery
Dimensions : 83mm \times 26mm \times 9mm


Weight : 20g
Included items : Owner's Manual, one 2032 coin battery

Button Functions And Operations

Button	Press	Press and hold 2 seconds
	Switch Display Mode	Power ON / OFF

Tuning procedure

1. Press the power button and hold 2 seconds to turn on (off) the tuner. Please note that the brightening of the leftmost LED light shows the good condition of the tuner before tuning.
2. Clip the tuner onto your instrument.
3. Press the power button again slightly as needed to switch the display mode for best viewing. Please read above 'Button And Operations' for reference. (Selection of the display mode depends on the physical placement of the clip, i.e. when placed on the back of a headstock or on a left handed guitar / bass, etc.)
4. When tuning your instrument, please play each single string as shown and adjust the string in tune according to the results shown Repeat these steps for each string to be tuned.

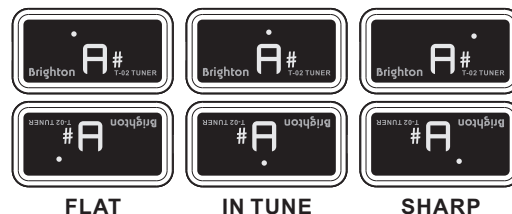

Power saving function

If there is no signal inputs in 2 minutes after the power is on, the tuner will turn off automatically.

Installing the battery

Pressing on the cover as marked in the back of the product, open the case, insert a CR2032 coin battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not resolve the problem, please remove and wait for 5 minutes to reinstall the battery.

54mm

37mm

54mm

37mm

17mm

Brighton
T-02 Chromatic Tuner



Brighton
T-02 Chromatic Tuner

MADE IN CHINA
www.brighton-music.cn

17mm