

156mm

188mm

**CHROMATIC \ GUITAR \ BASS \ UKULELE VIOLIN TUNER**

**T-03 OWNER' S MANUAL**


Thank you for purchasing the Brighton CHROMATIC \ GUITAR \ BASS \ UKULELE \ VIOLIN TUNER T-03.

# Brighton

### Precautions

- Avoid use in direct sunlight, extreme temperature or humidity, excessive dust, dirt or vibration or close to magnetic fields.
- Be sure to power off the unit when not in use and remove the battery for extended periods of inactivity.
- Radios and televisions placed nearby may experience reception interference.
- To avoid damage, do not apply excessive force to the switches or controls.
- For cleaning, wipe with a clean, dry cloth. Do not use flammable liquid cleaners such as benzene or thinner.
- To avoid damage fire, or electrical shock, do not place liquids near this equipment.

### Controls and functions

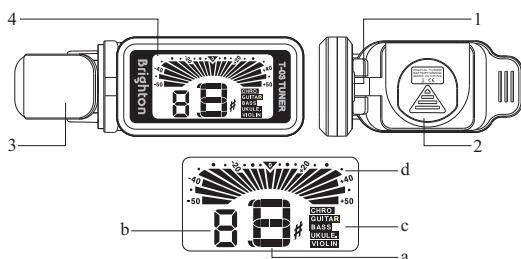

1. Power button ( on back of machine ) & Tuning items switch
2. Battery Compartment
3. Clip
4. Display: **a.** Note name ( for tuning modes of Chromatic / Guitar / Bass / Ukulele / Violin) **b.**String number ( for tuning modes of Guitar / Bass / Ukulele / Violin ) **c.**Tuning mode **d.** Meter

### Specifications

- Tuning item : Chromatic, Guitar, Bass, Ukulele, Violin
- Pitch range : 440Hz
- Tuning way : Clip ( tune by vibration )
- Detection accuracy: ± 0.5 cent
- Power supply : one 2032 coin battery
- Dimensions : 83mm×26mm×9mm
- Weight : 25g
- Included items : Owner' s Manual, one 2032 coin battery

### Tuning procedure

1. Press the power button and hold 2 seconds to turn on ( off ) the tuner.
2. Press the power button continuously to select tuning item out of Chromatic, Guitar, Bass, Ukulele and Violin .
3. Clip the tuner onto your instrument.
4. Play a single note on your instrument, the note name will appear in the display and the meter moves.
  - \* The left red meters appear: flat note
  - \* The center green meter appears: note in tune
  - \* The right yellow meters appear: sharp note
  - \* The screen shows only note name under tuning item of Chromatic, and shows both string number and note name under tuning items of Guitar, Bass, Ukulele and Violin.

### Power saving function

If there is no signal inputs in 2 minutes after the power is on, the tuner will turn off automatically.

### Installing the battery

Pressing on the cover as marked in the back of the product, open the case, insert a CR2032 coin battery being careful to observe the correct polarity. Battery life may differ according to the conditions of use. If the unit malfunctions, and turning the power OFF and then ON does not

成品尺寸：183\*188mm

