
82-20725

Quick Start Guide

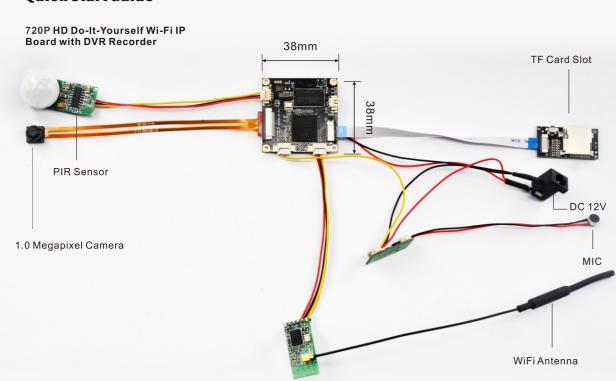

Parameter 1.0 HD Megapixel Image Sensor H.264 high profile, Video compression JPEG snapshot HD 1280*720P Resolution 30fps NTSC, 25fps Pal Frame rate 0.6m Lens Brightness, contrast, & saturation Video adjustment Video bit rate 32Kbps ~ 2.5Mbs IR cut filter Yes Night vision Nο Min.Illumination 15 Lux Built-in (for audio monitoring Microphone and 2-way audio communication). Effective up to 5m (16ft) 2-way audio Yes Motion detection, manual, and schedule Recording mode Playback via SD reader; real Playback time remote playback Motion detection VMD (video motion detection) PIR motion sensor Support Alarm photo email; record photo Alarm reactions to FTP; record video/photo to SD Wi-Fi 802.11 b/g/n Wireless network Dynamic IP address; static IP IP mode address

iPhone, Android

DC12V 1 A

Microsoft Win98 SE, ME, 2000,

XP, Vista, or Windows 7

Mobile surveillance

System requirement

Power

2

05

08

Main Features:

- Small Board size ,you can do what you want to do.
- WIFI function,,TF card DVR,HD720P camera all in one smart device:
- Build-in WIFI module, to view by phone (will update the software to be suitable in PC /tablet soon);
- 720Pvideo record (1280*720P) motion detect camera , PIR sensor detect about 8 meters;
- Support PAL/NTSC,max 32Gb TF card

Please see below for the detailed manual for your HD Do-It-Yourself Wi-Fi IP Board with DVR Recorder. Instructions are for the iPhone, but Android operation is the same as the iPhone.

Visit www.hd265.com to download client software for both Windows and MAC!

Insert Micro SD Card

Insert any brand new 2-32GB Micro SD card to the device.

Install App


03

In the Apple Store or Google Play search and install the "BSTCAM" application.

Smartlink(Wi-Fi setup)


Notice: Please finish it in 5 minute when it was power

1. Open the "Wi-Fi" menu from your iPhone settings. Then tap your own Wi-Fi Router Network, Then the Wi-Fi signal will be selected from your iPhone's Wi-Fi network, See PIC#1, Next open the "BSTCAM" applications(PIC#2)

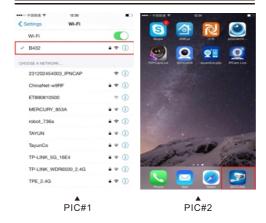


- 2. Click "More" button (PIC#3), then tap "Quick configured WIFI" (PIC#4)
- 3. Type the correct password of your Wi-Fi router network, click "OK" (PIC#5) to enter to sonic wave Wi-Fi setup (PIC#6). At this moment, please put your phone close to the microphone of your device to let it setup Wi-Fi, once the device Wi-Fi network was connected to your Wi-Fi router network, the speaker will play a short sound of music. The device will be restarted automatically.
- 4. Back to "Local Cameras" window (PIC#7), you can click the "refresh icon" (PIC#8) to bring up all available cameras.
- 5. Tap the camera ID (PIC#9) to start monitoring (PIC#10)

04

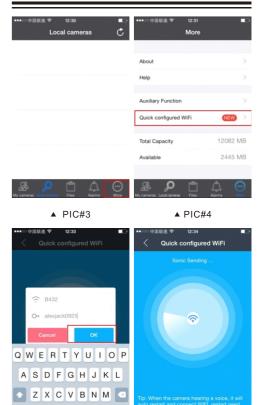

▲ PIC#5 ▲ PIC#6

space @

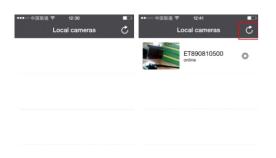





If the above Smartlink was not worked properly, please refer below Wi-Fi setup via AP.

- 1. Open the "Wi-Fi" menu from your iPhone settings. Then tap "ET890810500" (PIC#11), Then the "ET890810500" Wi-Fi signal will be selected from your iPhone's Wi-Fi network (PIC#12)
- 2. Open the "BSTCAM" applications (PIC#13), and one camera ID (PIC#14) will be listed. Tap the camera ID (PIC#14) to start monitoring (PIC#15).

Notice: ET890910500 is just an example for demonstrating only. You can find your own camera ID from Wi-Fi settings of your Smartphone

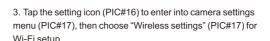


4. Enable "WiFi", Choose your "SSID" by clicking the icon on the right side. Type the correct "Password" (PIC#18). Click "Done" (PIC#19) to save the WiFi settings, a window will pop up with "Configure Success" (PIC#19). The device will be rebooted to finish the Wi-Fi set up. This will be complete within 2 mintues. During the reboot period, the camera ID will disappear from "Local Cameras" window (PIC#20), you can click the "refresh icon" (PIC#21) to bring up all available cameras.

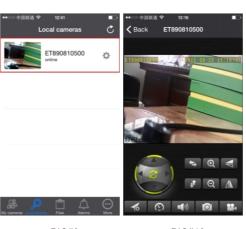


▲ PIC#9







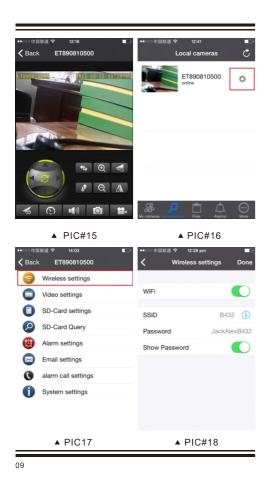

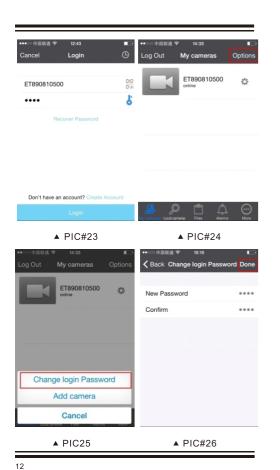



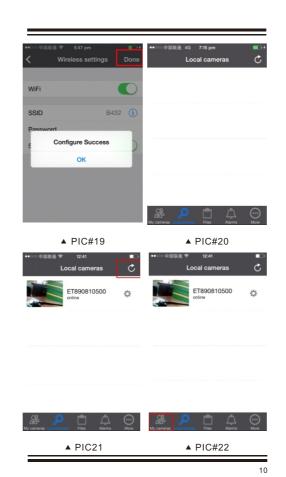

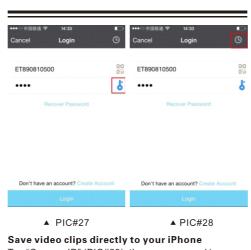

Tap "Camera ID" (PIC#29), then press record icon (PIC#30) to start video recording

Save photos directly to your iPhone

Tap "Camera ID" (PIC#29), then press the photo icon (PIC#31) to take a picture


Two Way Audio Enable

Please tap "Speaker" icon (PIC#32) to enable two way audio, and tap "headset" icon or "Microphone" icon (PIC#32) to start two way audio or just audio.

Playback videos and photos from phone

Open local cameras window (PIC#33), select "Files" (PIC#34), then choose the right date "files" (PIC#35). Select the right video or photo to start playback (PIC#35). To go back to other date files, just click back icon (PIC#36)

13

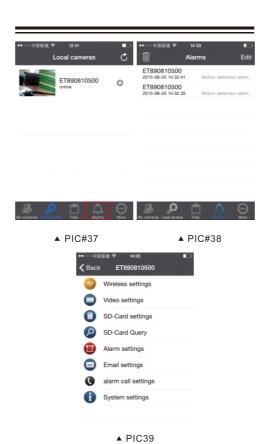

Remotely Access the Device from Phone

Click "My cameras" (PIC#22), and type the camera ID and password (PIC#23) to login the account. Then tape the Camera ID to start video surveillance remotely!

Notice: each camera came with unique ID like ET8908XXXXX, password: 9999(default)

You can also create an account for adding the camera to access live video remotely by clicking "Create Account" (PIC#23) If you registered an account, and forget the password, you can click "Recover Password" (PIC#23) to retrieve your password

How to change the default password?

Please login the account with Camera ID and Password, then tap the "Option" (PIC#24), choose "Change login Password" (PIC#25), then type the new password, click "Done" (PIC#26) to save the new password

Remember or disable the remember status of Camera ID/Password and History of Login

Tap "Key" icon (PIC#2) to remember or disable the remember status of Camera ID/Password.


Gray out means disable the remember status of Camera ID/Password

 $\textbf{Highlight} \ \text{means remember the status of Camera}$

Notice: Remember the status of Camera ID/Password

Tape "Clock" icon (PIC#28) to find the entire Camera ID login in the past, and you can delete the login history

11

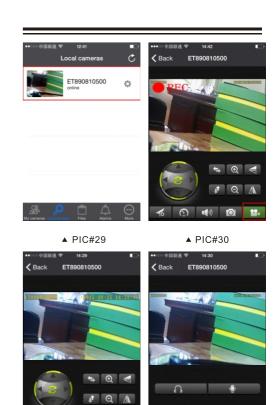

Motion detection alarm notification

(I)

▲ PIC31

Tap "Alarms" menu (PIC#37) to go to all the motion detect events alarm notifications (PIC#38) when there is any motion trigger from device. You can also delete all the notifications here.

₹ ① **□ □ □ □**

▲ PIC#32

Camera setting instructions (PIC#39)

Wireless settings: in this section, you can setup the Wi-Fi of router or turn off the Wi-Fi of router (only worked in local LAN)

Video settings: in this section, you can turn on the main stream or extra stream

SD-Card settings: in this section, you can set manual video recording, disable/enable audio recording, and change the video recording duration of each files, check SD card capacity, and also format SD card

SD-Card Query: in this section, you can playback/delete all the video clips from micro SD

Alarm settings: in this section, you can disable/enable motion detection, alarm sensitivity and record the motion video to micro SD card etc.

Email settings: in this section, you can setup snapshot alarm by email notification.

Alarm call settings: It is not applied for this device.

System settings: in this section, you can reboot

15