
OEM 1B-LED

PRODUCT DESCRIPTION

This low cost sub-miniature LED voltmeter module is ideally suited for high volume applications. It features an exceptionally large display in a miniature package and includes auto-zero and user-selectable decimal points. The use of low current display technology means this LED product can be considered for battery powered applications. The OEM 1B-LED is dimensionally compatible with its LCD counterpart, the OEM 1B. Connection to the module is via two rows of pins.

FEATURES

- 8mm (0.31") Digit Height
- 200mV d.c. Full Scale Reading
- 50mA (typ) @ +5V d.c. Power Supply
- Auto-zero and Auto-polarity
- User Selectable Decimal Points
- DIL Pin Connection
- Size compatible with OEM 1B (LCD module)

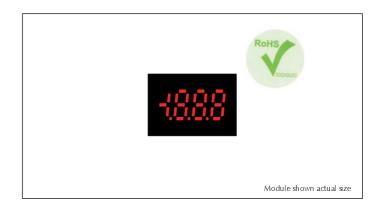

TYPICAL APPLICATIONS

- High Volume, Low Cost Systems
- Power Supply Monitoring
- Handheld Indication
- Panel-Mount Indication

ELECTRICAL SPECIFICATIONS

Specification	Min.	Тур.	Max.	Unit
Accuracy (overall error) *		0.05	0.1	% (±1 count)
Linearity			±1	count
Sample rate		2.5		samples/sec
Operating temperature range	0		50	°C
Temperature stability		150		ppm/°C
Warm-up time		10		minutes
Supply voltage	4.75	5	5.25	V d.c.
Supply current **		50	100	mA
Input leakage current		1	10	рА

* To ensure maximum accuracy, re-calibrate periodically.

** Depends on reading and temperature.

Unless otherwise noted, specifications apply at $T_A = 25^{\circ}$ C, $V_{supply} = 5$ Vd.c. ($f_{dock} = 40$ kHz) and are tested with the module configured for floating input mode.

SAFETY

To comply with the Low Voltage Directive (LVD 93/68/EEC), input voltages to the module's pins must not exceed 60Vdc. The user must ensure that the incorporation of the panel meter into the user's equipment conforms to the relevant sections of BS EN 61010 (Safety Requirements for Electrical Equipment for Measuring, Control and Laboratory Use).

Specifications liable to change without	ıt prior warning	OEM 1B-LED	Issue 3	January/2007	M.C.	Applies to OEM 1B-LED/1
E-mail: sales@lascar.co.uk	E-mail:	us-sales@lascarelectror	nics.com			E- mail:purchasing@lascar.com.hk
FAX: +44 (1794) 884616		FAX: +1 (814) 838 814				FAX: +852 2389 6535
TEL: +44 (1794) 884567		TEL: +1 (814) 835 062	1			TEL: +852 2389 6502
UK		U SA				HONGKONG
WILTSHIRE SP5 2SJ,		PA 16506,				KWUN TONG, KOWLOON,
WHITEPARISH,		ERIE,				111-113 HOW MING STREET,
module house,	3	750 WEST 26th STREE	Τ,		UI	NIT NOS. 6-8, 19/F FUTURA PLAZA,
LASCAR ELECTRONICS LTD.	LA	SCAR ELECTRONICS IN	NC.			LASCAR ELECTRONICS (HK) LIMITED




www.lascarelectronics.com


No.: 695 - Page 1 of 4


Standard Meter

ORDERING INFORMATION

Stock Number OEM1B - LED

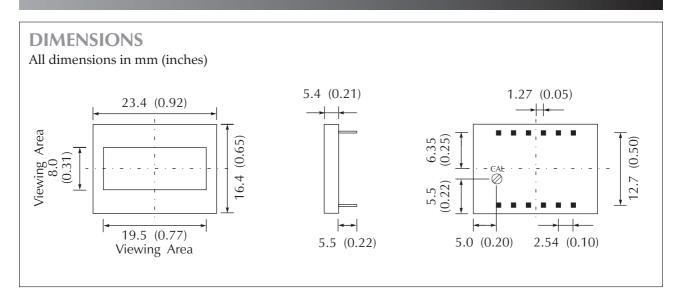

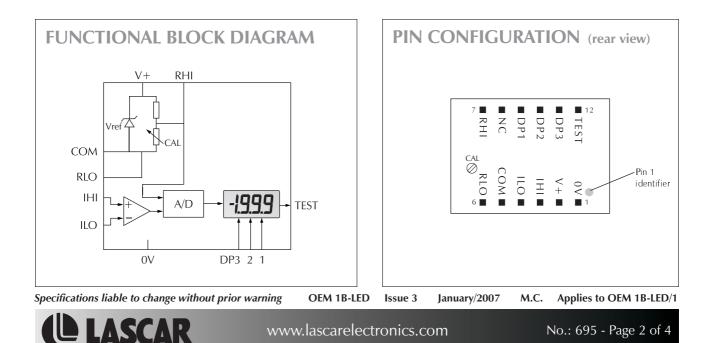

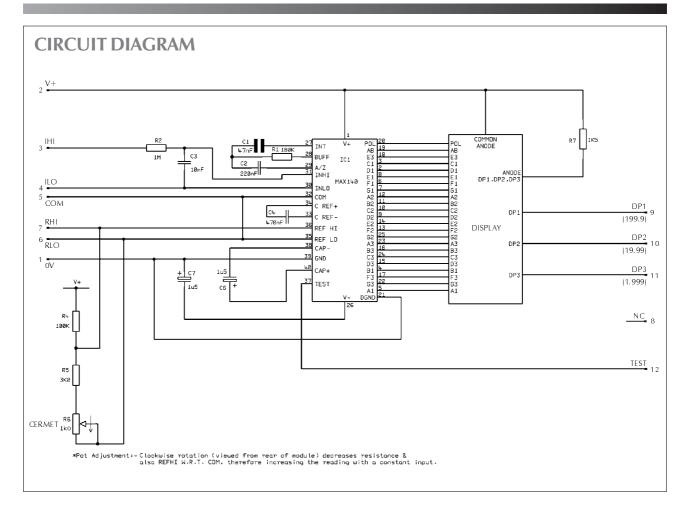

PIN FUNCTIONS

- 1. 0V Negative power supply to the meter.
- 2. V+ Positive power supply to the meter.
- 3. IHI Positive measuring input.
 - IHI must be no closer than 1.5V to either the positive or negative supply (see Note).
- 4. ILO Negative measuring input.
 - ILO must be no closer than 1.5V to the positive supply (see Note).
- COM Ground for the analogue section of the A/D converter. It is actively held at 3.05V (nom.) below V+ and must not be allowed to sink excessive current (>100μA) by, for instance, connecting to a higher voltage.
- 6. RLO Negative input for the reference voltage.
- 7. RHI Positive input for the reference voltage.
- 8. NC Not connected.
- 9. DP1 Connect to 0V to display DP1 (199.9).
- 10. DP2 Connect to 0V to display DP2 (19.99).
- 11. DP3 Connect to 0V to display DP3 (1.999).
- 12. TEST Connect to V + to display all segments, except the decimal points.

Note:

A negative supply is generated internally and mirrors the positive supply. For example: if V + is +5V, then the internally generated V- is -5V. When measuring with the input referenced to the same supply rail as that of the panel meter, then the limitations on the input range are (V - 1.5V) to (V + -1.5V).

Specifications liable to change without prior warning OEM 1B-LED Issue 3 January/2007 M.C. Applies to OEM 1B-LED/1




OEM 1B-LED

EXTERNAL SCALING


Two external resistors Ra and Rb may be used to alter the full scale reading (FSR) of the meter - see table. The meter will have to be re-calibrated by adjusting the calibration potentiometer on the rear of the module.

	FSR	Ra	Rb
Voltage Vin	2V	910k	100k
	20V	1M	10k
	200V	1M	1k
	2000V*	1M	100R
Current lin	200µA	0R	1k
	2mA	0R	100R
	20mA	0R	10R
	200mA	0R	1R

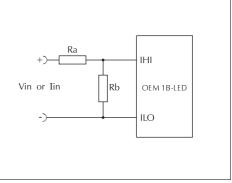


APPLICATIONS


Do not connect more than one meter to the same power supply if the meters cannot use the same signal ground. Taking any input beyond the power supply rails will damage the meter.

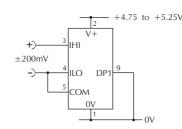

Measuring an input voltage referenced to a floating supply, i.e. the input voltage and the meter's power supply are isolated from each other. Circuit shows DP1 enabled.

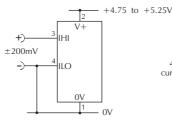


Measuring a single ended input voltage referenced to supply, i.e. the input voltage and the meter's power supply share the same 0V rail.

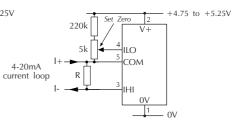



Measuring a 4-20mA loop current.

R= Reading at 20mA 160

 The meter's power supply must be isolated from the 4-20mA current loop.

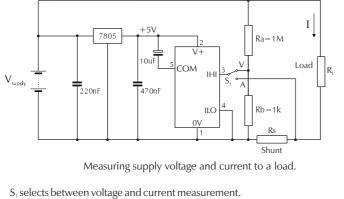



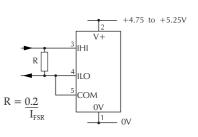

Measuring current. The meter's supply is isolated from the current being measured.

Specifications liable to change without prior warning **OEM 1B-LED**

Issue 3 January/2007

Applies to OEM 1B-LED/1 M.C.



www.lascarelectronics.com