



Swan

designed for life



750ml Coffee Maker

for model: SK13130N

v1.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:



- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system





TECHNICAL DATA

Swan Coffee Maker
Model No. SK13130N
230V~50Hz
700W

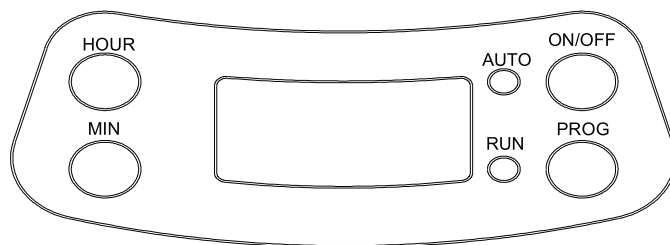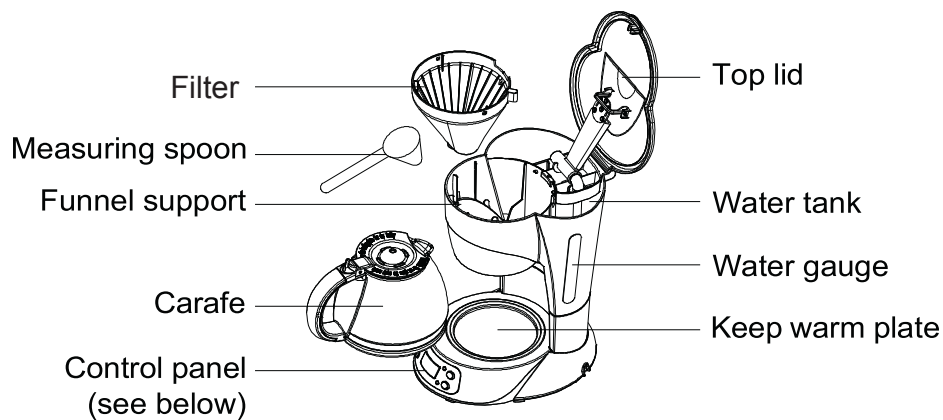

Spare parts references
SK13130N-001 Filter
SK13130N-002 Glass Carafe (without lid)
SK13130N-003 Carafe Lid only





HOW TO USE

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the max level and brew water several times without coffee powder, then discard the water. Clean all detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1. Open the lid and fill the water tank with water. The water level should not exceed MAX level marked inside the tank.
2. Place the filter into the coffee maker ensuring correct fitting
3. Add coffee powder into filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Then close the lid.
4. Insert the carafe on keep warm plate.
5. Plug the power cord into the outlet. The LCD will display "12:00" and the colon will flash, but all the button lights will not illuminate.
6. Press ON/OFF button, the RUN indicator will be illuminated red. The appliance will begin working.
7. The brewing process can be interrupted by pressing the ON/OFF button twice again at any time, and the RUN indicator will go out. The appliance will continue brewing once ON/OFF is pressed again. Note: You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.
8. Remove carafe to serve when finished brewing (about one minute after the coffee stops dripping out. Note: the coffee you get will be less than the water you have added, as some water is absorbed by coffee grounds.
9. When the process is finished, if you do not want to serve immediately, keep the coffee maker switched on, the coffee can be kept warm on the keep warm plate. The appliance will cut off the power automatically after two hours if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.
10. Always turn the coffee maker off and disconnect the power supply when not use.
Note: pay attention to pour the coffee carefully to avoid scalding hazard.

AUTOMATIC START FUNCTION

If you do not want the coffee maker to start operation immediately, for example now it is 17:10 pm, you want the coffee maker to automatically start at 20:15 in the evening, first follow steps 1 to 5 of previous section, then you can set the automatic start function as follows:





HOW TO USE

1. Press PROG button one time, the word CLOCK is showed at the up- right corner on display.
2. Press the HOUR and MIN button continuously to set the present time (real clock), that is 17:10 (See fig. 1). Note: the time cycle is 24 hours.
3. Press PROG button once again and the word TIMER shows on up-left corner of display.
4. Set the delayed starting time by pressing HOUR and MIN button repetitively, that is 20:15 (see Fig. 2).
5. Press the ON/OFF twice, the AUTO indicator will illuminate. The LCD will display the current clock. You may see the automatic start time by pressing PROG.

 


Fig. 1



Fig. 2

Note: You may cancel the automatic start function by pressing ON/OFF once to stop machine, or pressing ON/OFF button twice to start brewing immediately. If you want to change the automatic start time, only following the above 1-5 steps again.

When the time is due the indicator of AUTO will go out, while the RUN indicator will turn on and the unit starts brewing. The appliance cut off power automatically after two hours if it has not been manually disconnected at the completion of brewing.

CLEANING

This product requires very little maintenance. However, if you live in a hard water area, it will be necessary to de-scale the product from time to time. Most supermarkets sell de-scaling tablets, powders or liquids. These are inexpensive, easy to use and perfect for ensuring your coffee maker provides many years of faithful service. An excessive build up of limescale will damage your kettle and increase the boiling time/ electricity consumption!

For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.

DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS. DO NOT IMMERSE ANY PART OF THE MAIN UNIT IN WATER. ALWAYS ENSURE THE PRODUCT IS UNPLUGGED FROM THE MAINS SUPPLY AND COMPLETELY COOL BEFORE CLEANING.

REUSABLE FILTER

Please handle the reusable filter with care as the nylon mesh is delicate. Do not scrub the filter mesh but wipe it gently with a soft cloth or sponge.





DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive[s]:

2004/108/EC The EMC Directive (the Electromagnetic Compatibility Directive).

2006/95EC. The LVD Directive (Low Voltage Directive).

2011-65-EU. The RoHS directive (Restriction of Hazardous Substances Directive)

EC 1935/2004 Food Contact



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED





DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



SWAN BRAND HERITAGE



Did you know...

In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes - pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

