# 400W BLACK LIGHT 160.028 USER MANUAL

#### **INTRODUCTION**

Congratulations on the purchase of your new our company lighting effect. We are confident you will enjoy many trouble free hours with this unit . To assist with the care and use of the product we have prepared this short guide.

#### **OPERATION**

Before connecting this unit to the mains power supply for the first time you must first install the lamp . (See 'Replacing Lamp' for details).

This lighting effect has been designed to function on a mains power supply of either 240V~50Hz and has been fitted with a suitable power plug for use with your local voltage. Check the label on the unit and the power plug for the correct voltage.

When connected to the mains power supply the unit should illuminate. The 160.028 utilizes a mercury vapor lamp ,it will take 5 to 10 minutes to reach full intensity. The intensity of the lamp will increase with use. The light emitted by the 160.028 is invisible and does not have the glow of a fluorescent fixture.

Due to the high operating temperature of halogen lamps it is advisable that the effect be used in well ventilated areas taking care not to obstruct the air vents. To maximize lamp life, allow the unit to cool down before moving or touching the lamp.

### CAUTION

Due to the nature of the mercury vapor lamp, this lamp must be allowed to cool down (about 5 to10 minutes) after being turned off before re-igniting. Failure to wait for cool down many cause the lamp to fail prematurely.

### **INSTALLATION/MOUNTION**

Although this unit can be used in an upright position, it is recommended that, for safety purposes, your lighting effect be properly mounted using a suitable hanging clamp and safety cable. Our company offers a range of items, which are ideal for safe mounting.

Use in a well-ventilated area without obstruction to air vents.

#### **REPLACING LAMPS**

- 1. Disconnect from main power supply before attempting to replace either lamp.
- 2. Ensure that the unit is sufficiently cool, before removing blown lamps.
- 3. Never touch new lamps with your fingers: use a tissue or a cloth.

In order to replace the lamp, disconnect from main power supply first, and unscrew the lamp replacement cover. Only use the appropriately rated lamps as use of any other lamp type many cause the unit to be non-operational.

Due to the nature of halogen lamp it is vitally important that you do not touch the new replacement lamp with your fingers, as this will reduce lamp life considerably. Once again a tissue or cloth can be used for fitting the replacement lamp.

If after replacement of the lamp, the unit is still not working then please contact your dealer or our company for servicing.

## CLEANING

The most important part of your lighting effect to keep clean is the reflector as it allows the light output to transmit. This should be cleaned with a soft damp cloth. The body of the unit may also be cleaned in the same way. We recommend internal cleaning be carried out by a fully qualified technician.

### **MAINTENANCE & SERVICING**

Work on internal parts should be carried out by a qualified technician. Removal of covers other than the front to replace lamp is considered a breach of warranty and will not be covered under any such agreement unless authorized first by the company.

### TROUBLESHOOTING

- If the unit is not functional-check main power supply is 'on'.
- If the unit is functional but lamp does not light-lamp may require replacing.
- If after trying this solution you still have a problem contact your dealer or our company for service.

### CAUTION

Do not obstruct the air vents. Do not touch unit or lamps while hot. Never put any objects through the air grill on the top of the unit. No user serviceable parts inside, please refer to our company.

### POWER CONNECTIONS

The unit is supplied with a power plug appropriate to its voltage and destination. Should any other connections be required they must be carried out with the following configuration.

Earth = Green/Yellow cable Neutral = Blue cable Live = Brown cable In the USA & Europe, it is required that all plugs are 3-pin type i.e. with Earth/Ground connection. In the UK, it is required that all mains plugs are fitted with 5A fuses.

# TECHNICAL SPECIFICATIONS

Power	240V~50Hz AC
Lamps	E40 400W Mercury Vapor
	Part No H400BL
Fuse	250V/5A
imensionsD	375x388x413mm
Weight	13.5kg