

6200-2/6500-2

Appliance Tester

Safety Information

Go to www.fluke.com to register your product and find more information.

A Warning identifies conditions and procedures that are dangerous to the user.

⚠️⚠️ Warning

To prevent possible electrical shock, fire, or personal injury:

- **Read all safety information before you use the Product.**
- **Use the Product only as specified, or the protection supplied by the Product can be compromised.**
- **Do not use the Product if it operates incorrectly.**
- **Do not use and disable the Product if it is damaged.**
- **Do not use test leads if they are damaged. Examine the test leads for damaged insulation, exposed metal, or if the wear indicator shows. Check test lead continuity.**
- **Use this Product indoors only.**
- **Do not use the Product around explosive gas, vapor, or in damp or wet environments.**
- **Use only the mains power cord and connector approved for the voltage and plug configuration in your country and rated for the Product.**
- **Replace the mains power cord if the insulation is damaged or if the insulation shows signs of wear.**
- **Carefully read all instructions.**
- **Do not apply more than the rated voltage, between the terminals or between each terminal and earth ground.**
- **Limit operation to the specified measurement category, voltage, or amperage ratings.**
- **Measure a known voltage first to make sure that the Product operates correctly.**

PN 4325090 September 2013

© 2013 Fluke Corporation. All rights reserved.

Specifications are subject to change without notice.

All product names are trademarks of their respective companies.

- Use only current probes, test leads, and adapters supplied with the Product.
- Do not use a current measurement as an indication that a circuit is safe to touch. A voltage measurement is necessary to know if a circuit is hazardous.
- Keep fingers behind the finger guards on the probes.
- The Product shall not be used for measurements in electrical installations.
- When conducting tests, do not touch the appliance as some tests involve high voltages and high currents.
- Never open the Product's case because dangerous voltages are present. There are no user-replaceable parts in the Product.
- The Product has been set for a nominal 240 V ac, 50 Hz operation, it must never be connected to a higher voltage.
- The Product may only be connected to a correctly wired mains socket protected for a maximum current rating of 10 A (AU), 13 A (UK), or 16 A (DE, NL).
- The mains supply is never to be connected to the IEC lead test connector or to the appliance test connector.
- If the Product continuously emits a two-tone sound, you should unplug it immediately as this indicates a dangerous condition.

Safety Specifications








Temperature

Operating: 0 °C to +40 °C

Storage: -10 °C to +60 °C

Operating Altitude: 2000 m

Symbols

Symbol	Meaning
	Risk of Danger. Important information. See Manual.
	Hazardous voltage. Risk of electrical shock.
	Conforms to European Union directives.
	VDE Association for Electrical, Electronic & Information Technologies.
	Double insulated
	Earth ground
	This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste. Go to Fluke's website for recycling information.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for two years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem. THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands