







GE-LC 36/35 Li-Solo

Item No.: 4501780

Ident No.: 11017

Bar Code: 4006825631920

The Einhell GE-LC 36/35 Li-Solo cordless chainsaw provides power and flexibility. It is a member of the Power X-Change family. Two 18 V PXC rechargeable batteries supply the Einhell brushless motor, a brushless electric motor, with power. Thanks to the high-quality OREGON guide bar and chain, it even cuts through larger trunks. The chain can be tensioned and changed without any tools. For safety there is a claw stop made of metal, kickback protection, instant-reaction chain brake and a chain catch bolt. The ergonomic softgrip makes the cordless chainsaw secure and comfortable to hold. The chain is lubricated automatically and a large opening is provided in the oil tank for topping up the oil. The batteries & charger are available separately

WER CHANGE

Features & Benefits

- Member of the Power X-Change family, 2x18V batteries necessary
- Einhell Brushless Motor
- High-quality chain and bar from OREGON
- Toolless chain tensioning and changing
- Kickback protection with instant chain brake
- Ergonomic handle with Softgrip
- Sturdy stop claws made of metal
- Big filler opening
- Automatic chain lubrication
- Chain catch bolt
- Supplied without battery and charger (available separately)



Technical Data

- Accumulator 36 V | Li-Ion - Sword length 35 cm 33 cm - Max. cutting length - Chain cutting speed 15 m/s 115 mL - Oil tank capacity - Number of accumulators 0 Pieces

Logistic Data

- Product weight (kg) 3.79 kg - Gross weight (kg) 4.72 kg

255 x 495 x 250 mm - Dimensions single packaging

- Pieces per export carton 2 Pieces - Gross weight export carton 11.5 kg

- Dimensions Export Carton 515 x 405 x 275 mm - Container quantity (20"/40"/40"HC) 976 | 1952 | 2196



















Available as special accessories



18V 1,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512021 Bar Code: 4006825601350 Einhell Accessory



18V 4,0 Ah Power-X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 2,6Ah P-X-C Plus Battery Item No.: 4511436 Bar Code: 4006825616590 Einhell Accessory



18V 5,2 Ah P-X-C Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power-X-Twincharger 3 A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory





18V 2,0 Ah Power-X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 30min Power-X-Change Charger Item No.: 4512011 Bar Code: 4006825587029 Einhell Accessory



Power-X-Boostcharger 6 A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



Ersatzschwert 35cm 1,1 Chain Saw Accessory Item No.: 4500197 Bar Code: 4006825632248 Einhell Accessory