

SAFETY WARNINGS

Keep the headphone clean and dust free or the sound quality may be reduced.

Do not subject the headphones to impact or excessive vibration.

Do not allow water or other liquids to enter the headphones.

Be aware that wearing for long periods and at high volume may cause fatigue and hearing damage.

OPERATION

Turn on/off: Slide the ON/OFF switch. The blue & red LED will flash. From your source device search for wireless device "PSG3065" to connect. No pass required. Use "0000" if your device demands one.

Play/pause: Short press the rotary control ▶IIM to play/pause music.

Volume: Rotate the control ▶▶|+ to increase volume and -|◀◀ to decrease the volume.

Next song: Push and rotate - I ◀ to play next song. Last song: Push and rotate ▶►I + to play last song.

Charging: Insert the charge cable to the micro USB slot, the red LED will light.

Call on/off : Press **/** button to call on/off. **Call rejection:** Press and hold **/** button.

Call redial last number: Press the button ✓ twice in standby or music-play mode.

Mode switch: Press and hold the rotary switch ►IIM to switch modes (BT-FM-TF).

FM Tuning: Short press the ►IIM switch to auto search FM stations.

SPECIFICATIONS

- Version: 5.0Range <10m
- · 40mm driver
- Impedance 32 ohms
- Frequency Range 20-20,000Hz
- Sensitivity 108±3db@1mw/1kHz
- Battery 300mAh Li-ion
- · Charge time 2hrs
- 5VDC 1A via USB
- Standby time 260hrs
- Max 32gb MicroSD



