



Product Change Notification

End of Life Notification

Product Category : AC-DC, DC-DC Converters

Issue Date : 03/24//2020

Effective Date : 03/24//2020

LTB Date : N/A

LTD Date : N/A

Reason For EOL : MeanWell have very recently announced that they are pulling forward the end of life of many series due to their production material and rather than use this material on old units, which aren't a priority for them,

Parts Effected : Below are the list of parts which are affected.

SERIES	END OF LIFE PART NUMBER	REPLACEMENT PART NUMBER
ASP-150	ASP-150-12	USE EPP-150 SERIES
ASP-150	ASP-150-15	USE EPP-150 SERIES
ASP-150	ASP-150-20	USE EPP-150 SERIES
ASP-150	ASP-150-24	USE EPP-150 SERIES
ASP-150	ASP-150-48	USE EPP-150 SERIES
CEN-100	CEN-100-20	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CEN-100	CEN-100-24	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CEN-100	CEN-100-30	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES



CEN-100	CEN-100-36	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CEN-100	CEN-100-42	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CEN-100	CEN-100-48	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CEN-100	CEN-100-54	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CEN-60	CEN-60-12	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-15	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-20	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-24	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-30	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-36	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-42	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-48	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-60	CEN-60-54	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CEN-75	CEN-75-15	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-20	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-24	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-30	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-36	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-42	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-48	USE XLG-75, ELG-75 OR FDL-80 SERIES
CEN-75	CEN-75-54	USE XLG-75, ELG-75 OR FDL-80 SERIES
CLG-100	CLG-100-12	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-100	CLG-100-15	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-100	CLG-100-20	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-100	CLG-100-24	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-100	CLG-100-27	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-100	CLG-100-36	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-100	CLG-100-48	USE XLG-100, ELG-100, HLG-100 OR FDLH-80 / 100 SERIES
CLG-150	CLG-150-12	USE XLG-150, ELG-150 OR HLG-150 SERIES



CLG-150	CLG-150-12A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-12B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-12C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-15	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-15A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-15B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-15C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-20	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-20A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-20B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-20C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-24	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-24A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-24B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-24C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-30	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-30A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-30B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-30C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-36	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-36A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-36B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-36C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-48	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-48A	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-48B	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-150	CLG-150-48C	USE XLG-150, ELG-150 OR HLG-150 SERIES
CLG-60	CLG-60-12	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CLG-60	CLG-60-15	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CLG-60	CLG-60-20	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CLG-60	CLG-60-24	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CLG-60	CLG-60-27	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CLG-60	CLG-60-36	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
CLG-60	CLG-60-48	USE XLG-75, ELG-75, HLG-60 OR FDL-65 SERIES
DCW03	DCW03A-05	USE DCWN03
DCW03	DCW03A-12	USE DCWN03
DCW03	DCW03A-15	USE DCWN03



DCW03	DCW03B-05	USE DCWN03
DCW03	DCW03B-12	USE DCWN03
DCW03	DCW03B-15	USE DCWN03
DCW03	DCW03C-05	USE DCWN03
DCW03	DCW03C-12	USE DCWN03
DCW03	DCW03C-15	USE DCWN03
DCW03	DCW03E-15	USE DCWN03
DCW05	DCW05A-05	USE DCWN06
DCW05	DCW05A-12	USE DCWN06
DCW05	DCW05A-15	USE DCWN06
DCW05	DCW05B-05	USE DCWN06
DCW05	DCW05B-12	USE DCWN06
DCW05	DCW05B-15	USE DCWN06
DCW05	DCW05C-05	USE DCWN06
DCW05	DCW05C-12	USE DCWN06
DCW05	DCW05C-15	USE DCWN06
DR-100	DR-100-12	USE HDR-100, EDR-120 OR NDR-120 SERIES
DR-100	DR-100-15	USE HDR-100, EDR-120 OR NDR-120 SERIES
DR-100	DR-100-24	USE HDR-100, EDR-120 OR NDR-120 SERIES
DR-120	DR-120-12	USE EDR-120 OR NDR-120 SERIES
DR-120	DR-120-24	USE EDR-120 OR NDR-120 SERIES
DR-120	DR-120-48	USE EDR-120 OR NDR-120 SERIES
DR-15	DR-15-12	USE HDR-15 SERIES
DR-15	DR-15-15	USE HDR-15 SERIES
DR-15	DR-15-24	USE HDR-15 SERIES
DR-15	DR-15-5	USE HDR-15 SERIES
DR-30	DR-30-12	USE HDR-30 SERIES
DR-30	DR-30-15	USE HDR-30 SERIES
DR-30	DR-30-24	USE HDR-30 SERIES
DR-30	DR-30-5	USE HDR-30 SERIES
DR-45	DR-4505	USE HDR-60 SERIES
DR-45	DR-4512	USE HDR-60 SERIES
DR-45	DR-4515	USE HDR-60 SERIES
DR-45	DR-4524	USE HDR-60 SERIES
DR-60	DR-60-12	USE HDR-60 SERIES
DR-60	DR-60-15	USE HDR-60 SERIES
DR-60	DR-60-24	USE HDR-60 SERIES



DR-60	DR-60-5	USE HDR-60 SERIES
DR-75	DR-75-12	USE EDR-75 OR NDR-75 SERIES
DR-75	DR-75-24	USE EDR-75 OR NDR-75 SERIES
DR-75	DR-75-48	USE EDR-75 OR NDR-75 SERIES
DRH-120	DRH-120-24	Use WDR-120-24
DRH-120	DRH-120-48	Use WDR-120-48
DRP-240	DRP-240-24	USE NDR-240-24
DRP-240	DRP-240-48	USE NDR-240-48
DRP-480	DRP-480-24	USE NDR-480-24 SERIES
DRP-480	DRP-480-48	USE NDR-480-48 SERIES
DRP-480S	DRP-480S-24	USE NDR-480-24 SERIES
DRP-480S	DRP-480S-48	USE NDR-480-48 SERIES
DRT-240	DRT-240-24	Use TDR-240-24
DRT-240	DRT-240-48	Use TDR-240-48
DRT-480	DRT-480-24	Use TDR-480-24
DRT-480	DRT-480-48	Use TDR-480-48
DRT-960	DRT-960-24	Use TDR-960-24
DRT-960	DRT-960-48	Use TDR-960-48
ELP-75-C	ELP-75-12-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
ELP-75-C	ELP-75-15-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
ELP-75-C	ELP-75-24-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
ELP-75-C	ELP-75-3.3-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
ELP-75-C	ELP-75-36-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
ELP-75-C	ELP-75-48-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
ELP-75-C	ELP-75-5-C	USE ELP-75, LPP-100 OR LPS-75 SERIES
GS12	GS12E05-P1I	USE SGA12 SERIES
GS12	GS12E07-P1I	USE SGA12 SERIES
GS12	GS12E09-P1I	USE SGA12 SERIES
GS12	GS12E12-P1I	USE SGA12 SERIES
GS12	GS12E15-P1I	USE SGA12 SERIES
GS12	GS12E18-P1I	USE SGA12 SERIES
GS12	GS12E24-P1I	USE SGA12 SERIES
GS18(24-48V)	GS18A24-P1J	USE GST18 SERIES
GS18(24-48V)	GS18A28-P1J	USE GST18 SERIES
GS18(24-48V)	GS18A48-P1J	USE GST18 SERIES



GS18(24-48V)	GS18B24-P1J	USE GST18 SERIES
GS18(24-48V)	GS18B28-P1J	USE GST18 SERIES
GS18(24-48V)	GS18B48-P1J	USE GST18 SERIES
GS18(24-48V)	GS18E24-P1J	USE GST18 SERIES
GS18(24-48V)	GS18E28-P1J	USE GST18 SERIES
GS18(24-48V)	GS18E48-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A03-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A05-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A07-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A09-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A12-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A15-P1J	USE GST18 SERIES
GS18(5-18V)	GS18A18-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B03-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B05-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B07-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B09-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B12-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B15-P1J	USE GST18 SERIES
GS18(5-18V)	GS18B18-P1J	USE GST18 SERIES
GS18(5-18V)	GS18E05-P1J	USE GST18 SERIES



GS18(5-18V)	GS18E07-P1J	USE GST18 SERIES
GS18(5-18V)	GS18E09-P1J	USE GST18 SERIES
GS18(5-18V)	GS18E12-P1J	USE GST18 SERIES
GS18(5-18V)	GS18E15-P1J	USE GST18 SERIES
GS18(5-18V)	GS18E18-P1J	USE GST18 SERIES
GS25(24-48V)	GS25A24-P1J	USE GST25 SERIES
GS25(24-48V)	GS25A28-P1J	USE GST25 SERIES
GS25(24-48V)	GS25A48-P1J	USE GST25 SERIES
GS25(24-48V)	GS25B24-P1J	USE GST25 SERIES
GS25(24-48V)	GS25B28-P1J	USE GST25 SERIES
GS25(24-48V)	GS25B48-P1J	USE GST25 SERIES
GS25(24-48V)	GS25E24-P1J	USE GST25 SERIES
GS25(24-48V)	GS25E28-P1J	USE GST25 SERIES
GS25(24-48V)	GS25E48-P1J	USE GST25 SERIES
GS25(5-18V)	GS25A05-P1J	USE GST25 SERIES
GS25(5-18V)	GS25A07-P1J	USE GST25 SERIES
GS25(5-18V)	GS25A09-P1J	USE GST25 SERIES
GS25(5-18V)	GS25A12-P1J	USE GST25 SERIES
GS25(5-18V)	GS25A15-P1J	USE GST25 SERIES
GS25(5-18V)	GS25A18-P1J	USE GST25 SERIES
GS25(5-18V)	GS25B05-P1J	USE GST25 SERIES



GS25(5-18V)	GS25B07-P1J	USE GST25 SERIES
GS25(5-18V)	GS25B09-P1J	USE GST25 SERIES
GS25(5-18V)	GS25B12-P1J	USE GST25 SERIES
GS25(5-18V)	GS25B15-P1J	USE GST25 SERIES
GS25(5-18V)	GS25B18-P1J	USE GST25 SERIES
GS25(5-18V)	GS25E05-P1J	USE GST25 SERIES
GS25(5-18V)	GS25E07-P1J	USE GST25 SERIES
GS25(5-18V)	GS25E09-P1J	USE GST25 SERIES
GS25(5-18V)	GS25E12-P1J	USE GST25 SERIES
GS25(5-18V)	GS25E15-P1J	USE GST25 SERIES
GS25(5-18V)	GS25E18-P1J	USE GST25 SERIES
GS36	GS36E05-P1J	USE GST36 SERIES
GS36	GS36E09-P1J	USE GST36 SERIES
GS36	GS36E12-P1J	USE GST36 SERIES
GS36	GS36E24-P1J	USE GST36 SERIES
GS36	GS36E48-P1J	USE GST36 SERIES
GSC18	GSC18B-1050	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18B-1400	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18B-350	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18B-500	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18B-700	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18E-1050	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18E-1400	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18E-350	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18E-500	USE IDLC-25 OR PLM-25 SERIES
GSC18	GSC18E-700	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25B-1050	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25B-1400	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25B-350	USE IDLC-25 OR PLM-25 SERIES



GSC25	GSC25B-500	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25B-700	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25E-1050	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25E-1400	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25E-350	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25E-500	USE IDLC-25 OR PLM-25 SERIES
GSC25	GSC25E-700	USE IDLC-25 OR PLM-25 SERIES
GSC40	GSC40B-1050	USE IDLC-45 SERIES
GSC40	GSC40B-1400	USE IDLC-45 SERIES
GSC40	GSC40B-350	USE IDLC-45 SERIES
GSC40	GSC40B-500	USE IDLC-45 SERIES
GSC40	GSC40B-700	USE IDLC-45 SERIES
GSC40	GSC40E-1050	USE IDLC-45 SERIES
GSC40	GSC40E-1400	USE IDLC-45 SERIES
GSC40	GSC40E-350	USE IDLC-45 SERIES
GSC40	GSC40E-500	USE IDLC-45 SERIES
GSC40	GSC40E-700	USE IDLC-45 SERIES
MPD-200	MPD-200A	USE MPQ-200 SERIES
MPD-200	MPD-200B	USE MPQ-200 SERIES
MPD-45	MPD-45A	USE RDP-60 SERIES
MPD-45	MPD-45B	USE RDP-60 SERIES
MPD-65	MPD-65A	USE RPD-75 SERIES
MPD-65	MPD-65B	USE RPD-75 SERIES
MPS-120	MPS-120-12	USE RSP-120 OR 120S SERIES
MPS-120	MPS-120-15	USE RSP-120 OR 120S SERIES
MPS-120	MPS-120-24	USE RSP-120 OR 120S SERIES
MPS-120	MPS-120-3.3	USE RSP-120 OR 120S SERIES
MPS-120	MPS-120-48	USE RSP-120 OR 120S SERIES
MPS-120	MPS-120-5	USE RSP-120 OR 120S SERIES
MPS-200	MPS-200-12	USE RPS-200 SERIES
MPS-200	MPS-200-15	USE RPS-200 SERIES
MPS-200	MPS-200-24	USE RPS-200 SERIES
MPS-200	MPS-200-3.3	USE RPS-200 SERIES
MPS-200	MPS-200-48	USE RPS-200 SERIES
MPS-200	MPS-200-5	USE RPS-200 SERIES
MPS-30	MPS-30-12	USE RPS-30 SERIES
MPS-30	MPS-30-15	USE RPS-30 SERIES



MPS-30	MPS-30-24	USE RPS-30 SERIES
MPS-30	MPS-30-27	USE RPS-30 SERIES
MPS-30	MPS-30-48	USE RPS-30 SERIES
MPS-30	MPS-30-5	USE RPS-30 SERIES
MPS-45	MPS-45-12	USE RPS-45 SERIES
MPS-45	MPS-45-13.5	USE RPS-45 SERIES
MPS-45	MPS-45-15	USE RPS-45 SERIES
MPS-45	MPS-45-24	USE RPS-45 SERIES
MPS-45	MPS-45-27	USE RPS-45 SERIES
MPS-45	MPS-45-3.3	USE RPS-45 SERIES
MPS-45	MPS-45-48	USE RPS-45 SERIES
MPS-45	MPS-45-5	USE RPS-45 SERIES
MPS-45	MPS-45-7.5	USE RPS-45 SERIES
MPS-65	MPS-65-12	USE RPS-65 SERIES
MPS-65	MPS-65-13.5	USE RPS-65 SERIES
MPS-65	MPS-65-15	USE RPS-65 SERIES
MPS-65	MPS-65-24	USE RPS-65 SERIES
MPS-65	MPS-65-27	USE RPS-65 SERIES
MPS-65	MPS-65-3.3	USE RPS-65 SERIES
MPS-65	MPS-65-48	USE RPS-65 SERIES
MPS-65	MPS-65-5	USE RPS-65 SERIES
MPS-65	MPS-65-7.5	USE RPS-65 SERIES
MPT-45	MPT-45A	USE RPT-60 SERIES
MPT-45	MPT-45B	USE RPT-60 SERIES
MPT-45	MPT-45C	USE RPT-60 SERIES
MPT-65	MPT-65A	USE RPT-75 SERIES
MPT-65	MPT-65B	USE RPT-75 SERIES
MPT-65	MPT-65C	USE RPT-75 SERIES
NFM-05	NFM-05-12	USE MFM-05 SERIES
NFM-05	NFM-05-15	USE MFM-05 SERIES
NFM-05	NFM-05-24	USE MFM-05 SERIES
NFM-05	NFM-05-3.3	USE MFM-05 SERIES
NFM-05	NFM-05-5	USE MFM-05 SERIES
NFM-10	NFM-10-12	USE MFM-10 SERIES
NFM-10	NFM-10-15	USE MFM-10 SERIES
NFM-10	NFM-10-24	USE MFM-10 SERIES
NFM-10	NFM-10-3.3	USE MFM-10 SERIES



NFM-10	NFM-10-5	USE MFM-10 SERIES
NFM-15	NFM-15-12	USE MFM-15 SERIES
NFM-15	NFM-15-15	USE MFM-15 SERIES
NFM-15	NFM-15-24	USE MFM-15 SERIES
NFM-15	NFM-15-3.3	USE MFM-15 SERIES
NFM-15	NFM-15-5	USE MFM-15 SERIES
NFM-20	NFM-20-12	USE MFM-20 SERIES
NFM-20	NFM-20-15	USE MFM-20 SERIES
NFM-20	NFM-20-24	USE MFM-20 SERIES
NFM-20	NFM-20-3.3	USE MFM-20 SERIES
NFM-20	NFM-20-5	USE MFM-20 SERIES
NID30	NID30S24-05	USE NID35 SERIES
NID30	NID30S24-12	USE NID35 SERIES
NID30	NID30S24-15	USE NID35 SERIES
NID30	NID30S48-24	USE NID35 SERIES
NID60	NID60S24-05	USE NID65 SERIES
NID60	NID60S24-12	USE NID65 SERIES
NID60	NID60S24-15	USE NID65 SERIES
NID60	NID60S48-24	USE NID65 SERIES
PA-120P-C	PA-120P-13C	USE PA-120N-C, PA-120N-P, ENC-120 OR GC120 SERIES
PA-120P-C	PA-120P-27C	USE PA-120N-C, PA-120N-P, ENC-120 OR GC120 SERIES
PA-120P-C	PA-120P-54C	USE PA-120N-C, PA-120N-P, ENC-120 OR GC120 SERIES
PA-120P-P	PA-120P-13P	USE PA-120N-C, PA-120N-P, ENC-120 OR GC120 SERIES
PA-120P-P	PA-120P-27P	USE PA-120N-C, PA-120N-P, ENC-120 OR GC120 SERIES
PA-120P-P	PA-120P-54P	USE PA-120N-C, PA-120N-P, ENC-120 OR GC120 SERIES
PB-230	PB-230-12	Use GC220 series
PB-230	PB-230-24	Use GC220 series
PB-230	PB-230-48	Use GC220 series
PD-2503	PD-2503	Use PD-4503 series
PLM-40	PLM-40-1050	USE IDLC-45 SERIES
PLM-40	PLM-40-1400	USE IDLC-45 SERIES
PLM-40	PLM-40-1750	USE IDLC-45 SERIES
PLM-40	PLM-40-350	USE IDLC-45 SERIES
PLM-40	PLM-40-500	USE IDLC-45 SERIES
PLM-40	PLM-40-700	USE IDLC-45 SERIES
PLM-40E	PLM-40E-1050	USE IDLC-45 SERIES
PLM-40E	PLM-40E-1400	USE IDLC-45 SERIES



PLM-40E	PLM-40E-1750	USE IDLC-45 SERIES
PLM-40E	PLM-40E-350	USE IDLC-45 SERIES
PLM-40E	PLM-40E-500	USE IDLC-45 SERIES
PLM-40E	PLM-40E-700	USE IDLC-45 SERIES
PM-05	PM-05-12	USE MPM-05 SERIES
PM-05	PM-05-15	USE MPM-05 SERIES
PM-05	PM-05-24	USE MPM-05 SERIES
PM-05	PM-05-3.3	USE MPM-05 SERIES
PM-05	PM-05-5	USE MPM-05 SERIES
PM-10	PM-10-12	USE MPM-10 SERIES
PM-10	PM-10-15	USE MPM-10 SERIES
PM-10	PM-10-24	USE MPM-10 SERIES
PM-10	PM-10-3.3	USE MPM-10 SERIES
PM-10	PM-10-5	USE MPM-10 SERIES
PM-15	PM-15-12	USE MPM-15 SERIES
PM-15	PM-15-15	USE MPM-15 SERIES
PM-15	PM-15-24	USE MPM-15 SERIES
PM-15	PM-15-3.3	USE MPM-15 SERIES
PM-15	PM-15-5	USE MPM-15 SERIES
PM-20	PM-20-12	USE MPM-20 SERIES
PM-20	PM-20-15	USE MPM-20 SERIES
PM-20	PM-20-24	USE MPM-20 SERIES
PM-20	PM-20-3.3	USE MPM-20 SERIES
PM-20	PM-20-5	USE MPM-20 SERIES
PPS-125	PPS-125-12	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-13.5	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-15	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-24	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-27	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-3.3	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-48	USE EPS-120 OR EPP-200 SERIES
PPS-125	PPS-125-5	USE EPS-120 OR EPP-200 SERIES
PPS-200	PPS-200-12	USE EPS-120 OR EPP-200 SERIES
PPS-200	PPS-200-15	USE EPS-120 OR EPP-200 SERIES
PPS-200	PPS-200-24	USE EPS-120 OR EPP-200 SERIES
PPS-200	PPS-200-27	USE EPS-120 OR EPP-200 SERIES
PPS-200	PPS-200-48	USE EPS-120 OR EPP-200 SERIES



PPS-200	PPS-200-5	USE EPS-120 OR EPP-200 SERIES
PS-15	PS-15-12	USE EPS-15 SERIES
PS-15	PS-15-15	USE EPS-15 SERIES
PS-15	PS-15-24	USE EPS-15 SERIES
PS-15	PS-15-48	USE EPS-15 SERIES
PS-15	PS-15-5	USE EPS-15 SERIES
PS-25	PS-25-12	USE EPS-25 SERIES
PS-25	PS-25-13.5	USE EPS-25 SERIES
PS-25	PS-25-15	USE EPS-25 SERIES
PS-25	PS-25-24	USE EPS-25 SERIES
PS-25	PS-25-27	USE EPS-25 SERIES
PS-25	PS-25-3.3	USE EPS-25 SERIES
PS-25	PS-25-48	USE EPS-25 SERIES
PS-25	PS-25-5	USE EPS-25 SERIES
PS-25	PS-25-7.5	USE EPS-25 SERIES
PS-35	PS-35-12	USE EPS-35 SERIES
PS-35	PS-35-13.5	USE EPS-35 SERIES
PS-35	PS-35-15	USE EPS-35 SERIES
PS-35	PS-35-24	USE EPS-35 SERIES
PS-35	PS-35-3.3	USE EPS-35 SERIES
PS-35	PS-35-48	USE EPS-35 SERIES
PS-35	PS-35-5	USE EPS-35 SERIES
PS-35	PS-35-7.5	USE EPS-35 SERIES
PS-45	PS-45-12	USE EPS-45 SERIES
PS-45	PS-45-13.5	USE EPS-45 SERIES
PS-45	PS-45-15	USE EPS-45 SERIES
PS-45	PS-45-24	USE EPS-45 SERIES
PS-45	PS-45-27	USE EPS-45 SERIES
PS-45	PS-45-3.3	USE EPS-45 SERIES
PS-45	PS-45-48	USE EPS-45 SERIES
PS-45	PS-45-5	USE EPS-45 SERIES
PS-45	PS-45-7.5	USE EPS-45 SERIES
PS-65	PS-65-12	USE EPS-65 SERIES
PS-65	PS-65-13.5	USE EPS-65 SERIES
PS-65	PS-65-15	USE EPS-65 SERIES
PS-65	PS-65-24	USE EPS-65 SERIES
PS-65	PS-65-27	USE EPS-65 SERIES



PS-65	PS-65-3.3	USE EPS-65 SERIES
PS-65	PS-65-48	USE EPS-65 SERIES
PS-65	PS-65-5	USE EPS-65 SERIES
PS-65	PS-65-7.5	USE EPS-65 SERIES
QP-200	QP-200-3A	Use UMP-400 series
QP-200	QP-200-3B	Use UMP-400 series
QP-200	QP-200-3C	Use UMP-400 series
QP-200	QP-200-3D	Use UMP-400 series
QP-200	QP-200-3E	Use UMP-400 series
SCW03	SCW03A-05	USESCWN03 SERIES
SCW03	SCW03A-12	USESCWN03 SERIES
SCW03	SCW03A-15	USESCWN03 SERIES
SCW03	SCW03B-05	USESCWN03 SERIES
SCW03	SCW03B-12	USESCWN03 SERIES
SCW03	SCW03B-15	USESCWN03 SERIES
SCW03	SCW03C-05	USESCWN03 SERIES
SCW03	SCW03C-12	USESCWN03 SERIES
SCW03	SCW03C-15	USESCWN03 SERIES
SCW05	SCW05A-05	USESCWN06 SERIES
SCW05	SCW05A-09	USESCWN06 SERIES
SCW05	SCW05A-12	USESCWN06 SERIES
SCW05	SCW05A-15	USESCWN06 SERIES
SCW05	SCW05B-05	USESCWN06 SERIES
SCW05	SCW05B-09	USESCWN06 SERIES
SCW05	SCW05B-12	USESCWN06 SERIES
SCW05	SCW05B-15	USESCWN06 SERIES
SCW05	SCW05C-05	USESCWN06 SERIES
SCW05	SCW05C-09	USESCWN06 SERIES
SCW05	SCW05C-12	USESCWN06 SERIES
SCW05	SCW05C-15	USESCWN06 SERIES
SP-100	SP-100-12	USE RSP-100 SERIES
SP-100	SP-100-13.5	USE RSP-100 SERIES
SP-100	SP-100-15	USE RSP-100 SERIES
SP-100	SP-100-24	USE RSP-100 SERIES
SP-100	SP-100-27	USE RSP-100 SERIES
SP-100	SP-100-3.3	USE RSP-100 SERIES
SP-100	SP-100-48	USE RSP-100 SERIES



SP-100	SP-100-5	USE RSP-100 SERIES
SP-100	SP-100-7.5	USE RSP-100 SERIES
SP-150	SP-150-12	USE RSP-150 SERIES
SP-150	SP-150-13.5	USE RSP-150 SERIES
SP-150	SP-150-15	USE RSP-150 SERIES
SP-150	SP-150-24	USE RSP-150 SERIES
SP-150	SP-150-27	USE RSP-150 SERIES
SP-150	SP-150-3.3	USE RSP-150 SERIES
SP-150	SP-150-48	USE RSP-150 SERIES
SP-150	SP-150-5	USE RSP-150 SERIES
SP-150	SP-150-7.5	USE RSP-150 SERIES
SP-200	SP-200-12	USE RSP-200 SERIES
SP-200	SP-200-13.5	USE RSP-200 SERIES
SP-200	SP-200-15	USE RSP-200 SERIES
SP-200	SP-200-24	USE RSP-200 SERIES
SP-200	SP-200-27	USE RSP-200 SERIES
SP-200	SP-200-3.3	USE RSP-200 SERIES
SP-200	SP-200-48	USE RSP-200 SERIES
SP-200	SP-200-5	USE RSP-200 SERIES
SP-200	SP-200-7.5	USE RSP-200 SERIES
SP-240	SP-240-12	USE RSP-200 OR RSP-320 SERIES
SP-240	SP-240-15	USE RSP-200 OR RSP-320 SERIES
SP-240	SP-240-24	USE RSP-200 OR RSP-320 SERIES
SP-240	SP-240-30	USE RSP-200 OR RSP-320 SERIES
SP-240	SP-240-48	USE RSP-200 OR RSP-320 SERIES
SP-240	SP-240-5	USE RSP-200 OR RSP-320 SERIES
SP-240	SP-240-7.5	USE RSP-200 OR RSP-320 SERIES
SP-320	SP-320-12	USE RSP-320 SERIES
SP-320	SP-320-13.5	USE RSP-320 SERIES
SP-320	SP-320-15	USE RSP-320 SERIES
SP-320	SP-320-24	USE RSP-320 SERIES
SP-320	SP-320-27	USE RSP-320 SERIES
SP-320	SP-320-3.3	USE RSP-320 SERIES
SP-320	SP-320-36	USE RSP-320 SERIES
SP-320	SP-320-48	USE RSP-320 SERIES
SP-320	SP-320-5	USE RSP-320 SERIES
SP-320	SP-320-7.5	USE RSP-320 SERIES



SP-480	SP-480-12	USE RSP-500 SERIES
SP-480	SP-480-15	USE RSP-500 SERIES
SP-480	SP-480-24	USE RSP-500 SERIES
SP-480	SP-480-3.3	USE RSP-500 SERIES
SP-480	SP-480-48	USE RSP-500 SERIES
SP-480	SP-480-5	USE RSP-500 SERIES
SP-75	SP-75-12	USE RSP-75 SERIES
SP-75	SP-75-13.5	USE RSP-75 SERIES
SP-75	SP-75-15	USE RSP-75 SERIES
SP-75	SP-75-24	USE RSP-75 SERIES
SP-75	SP-75-27	USE RSP-75 SERIES
SP-75	SP-75-3.3	USE RSP-75 SERIES
SP-75	SP-75-48	USE RSP-75 SERIES
SP-75	SP-75-5	USE RSP-75 SERIES
SP-75	SP-75-7.5	USE RSP-75 SERIES
SP-750	SP-750-12	USE RSP-750 SERIES
SP-750	SP-750-15	USE RSP-750 SERIES
SP-750	SP-750-24	USE RSP-750 SERIES
SP-750	SP-750-27	USE RSP-750 SERIES
SP-750	SP-750-48	USE RSP-750 SERIES
SP-750	SP-750-5	USE RSP-750 SERIES
SPA02	SPA02A-05	Use SPAN02 series
SPA02	SPA02A-12	Use SPAN02 series
SPA02	SPA02A-15	Use SPAN02 series
SPA02	SPA02B-05	Use SPAN02 series
SPA02	SPA02B-12	Use SPAN02 series
SPA02	SPA02B-15	Use SPAN02 series
SPA02	SPA02C-05	Use SPAN02 series
SPA02	SPA02C-12	Use SPAN02 series
SPA02	SPA02C-15	Use SPAN02 series
SPA02	SPA02E-05	Use SPAN02 series
SPA02	SPA02E-12	Use SPAN02 series
SPA02	SPA02E-15	Use SPAN02 series
SPB03	SPB03A-05	USE SPBW03
SPB03	SPB03A-12	USE SPBW03
SPB03	SPB03A-15	USE SPBW03
SPB03	SPB03B-05	USE SPBW03



SPB03	SPB03B-12	USE SPBW03
SPB03	SPB03B-15	USE SPBW03
SPB03	SPB03C-05	USE SPBW03
SPB03	SPB03C-12	USE SPBW03
SPB03	SPB03C-15	USE SPBW03
SPB03	SPB03E-05	USE SPBW03
SPB03	SPB03E-12	USE SPBW03
SPB03	SPB03E-15	USE SPBW03
SPB05	SPB05A-05	USE SPBW06 SERIES
SPB05	SPB05A-12	USE SPBW06 SERIES
SPB05	SPB05A-15	USE SPBW06 SERIES
SPB05	SPB05B-05	USE SPBW06 SERIES
SPB05	SPB05B-12	USE SPBW06 SERIES
SPB05	SPB05B-15	USE SPBW06 SERIES
SPB05	SPB05C-05	USE SPBW06 SERIES
SPB05	SPB05C-12	USE SPBW06 SERIES
SPB05	SPB05C-15	USE SPBW06 SERIES
SPR01	SPR01L-05	Use SPRN01
SPR01	SPR01L-09	Use SPRN01
SPR01	SPR01L-12	Use SPRN01
SPR01	SPR01L-15	Use SPRN01
SPR01	SPR01M-05	Use SPRN01
SPR01	SPR01M-09	Use SPRN01
SPR01	SPR01M-12	Use SPRN01
SPR01	SPR01M-15	Use SPRN01
SPR01	SPR01N-05	Use SPRN01
SPR01	SPR01N-09	Use SPRN01
SPR01	SPR01N-12	Use SPRN01
SPR01	SPR01N-15	Use SPRN01
SPR01	SPR01O-05	Use SPRN01
SPR01	SPR01O-09	Use SPRN01
SPR01	SPR01O-12	Use SPRN01
SPR01	SPR01O-15	Use SPRN01
SPU02	SPU02L-05	Use SPUN02
SPU02	SPU02L-12	Use SPUN02
SPU02	SPU02L-15	Use SPUN02
SPU02	SPU02M-05	Use SPUN02



SPU02	SPU02M-12	Use SPUN02
SPU02	SPU02M-15	Use SPUN02
SPU02	SPU02N-05	Use SPUN02
SPU02	SPU02N-12	Use SPUN02
SPU02	SPU02N-15	Use SPUN02
TP-100	TP-100A	USE QP-150 SERIES
TP-100	TP-100B	USE QP-150 SERIES
TP-100	TP-100C	USE QP-150 SERIES
TP-100	TP-100D	USE QP-150 SERIES
TP-150	TP-150A	USE QP-150 SERIES
TP-150	TP-150B	USE QP-150 SERIES
TP-150	TP-150C	USE QP-150 SERIES
TP-150	TP-150D	USE QP-150 SERIES
ULP-150	ULP-150-12	USE UHP-200 OR UHP-200A SERIES
ULP-150	ULP-150-15	USE UHP-200 OR UHP-200A SERIES
ULP-150	ULP-150-24	USE UHP-200 OR UHP-200A SERIES
ULP-150	ULP-150-36	USE UHP-200 OR UHP-200A SERIES
ULP-150	ULP-150-48	USE UHP-200 OR UHP-200A SERIES
USP-150	USP-150-12	USE UHP-200 SERIES
USP-150	USP-150-15	USE UHP-200 SERIES
USP-150	USP-150-24	USE UHP-200 SERIES
USP-150	USP-150-36	USE UHP-200 SERIES
USP-150	USP-150-48	USE UHP-200 SERIES
USP-225	USP-225-12	USE UHP-200 OR UHP-350 SERIES
USP-225	USP-225-15	USE UHP-200 OR UHP-350 SERIES
USP-225	USP-225-24	USE UHP-200 OR UHP-350 SERIES
USP-225	USP-225-3.3	USE UHP-200 OR UHP-350 SERIES
USP-225	USP-225-48	USE UHP-200 OR UHP-350 SERIES
USP-225	USP-225-5	USE UHP-200 OR UHP-350 SERIES
USP-350	USP-350-12	USE UHP-350 SERIES
USP-350	USP-350-15	USE UHP-350 SERIES
USP-350	USP-350-24	USE UHP-350 SERIES
USP-350	USP-350-3.3	USE UHP-350 SERIES
USP-350	USP-350-48	USE UHP-350 SERIES
USP-350	USP-350-5	USE UHP-350 SERIES
USP-500	USP-500-12	USE UHP-500 SERIES
USP-500	USP-500-15	USE UHP-500 SERIES



USP-500	USP-500-24	USE UHP-500 SERIES
USP-500	USP-500-48	USE UHP-500 SERIES
USP-500	USP-500-5	USE UHP-500 SERIES