

## SAFETY WARNINGS

Keep the headphone clean and dust free or the sound quality may be reduced.

Do not subject the headphones to impact or excessive vibration.

Do not allow water or other liquids to enter the headphones.

Be aware that wearing for long periods and at high volume may cause fatigue and hearing damage.

## **OPERATION**

Turn on/off: Press and hold ➢I for 3 seconds. The blue & red LED will flash. From your source device search for wireless device "PSG3413-M293" to connect. No pass required. Use "0000" if your device demands one. The blue LED flashes slowly when connected.

Play/pause: Short press ►I to play/pause music.

Call answer: Short press > button again in standby or during music-play mode.

Call end: Short press ►II button.

Call redial last number: Press the ► button twice in standby or music-play mode.

**Volume:** Long press + or - to increase or reduce the volume. **Next/last song:** Short press + or - to play next or last song.

Noise Cancel Function: Short press O button to turn ANC mode on or off. When on, the green

LED is illuminated.

Charging: Insert the charge cable to the micro USB slot, the red LED will light. It will extinguish

when fully charged.

**External Audio Input:** In power on mode, plugging in an external source automatically switches to AUX mode.

## **SPECIFICATIONS**

USB charge: DC 5V

Wireless frequency: 2.401-2.480GHz

Wireless distance: ≤10 meters Frequency: 20Hz-20KHz Output power: 30mW

SNR: ≥75dB

Charging time: <2.5 hours
Active noise reduction: 15-20dB





WIRELESS NOISE CANCELLING HEADPHONES PSG3413-M293