Before replacing the footswitch lid test the required keystroke function .This is done by plugging the footswitch into a USB port on the PC then pressing the lever on the microswitch SW5



Specifications:

Power :5V @ 25 mAWorking temperature :10~ 60°CWeight :395gMoulded Glass filled nylon plastic constructionSealed to IPX2USB HID Compliant (No software drivers required)

Herga Technology Ltd., Northern Way, Bury St. Edmunds, Suffolk, IP32 6NN England

Tel +44 (0) 1284 701422 Fax +44 (0) 1284 753112 e-mail sales@herga.com

Installation Instructions for USB Footswitch





The Herga USB footswitch is programmed by the user to simulate up to four simultaneous keystrokes .No software installation is required as it will be recognised by the Operating system once plugged into a USB socket .

Programming is done simply by setting small switches inside the footswitch having removed the cover. (See pages 2 and 3)

Features:

Works with the following OS : All Windows ,Linux and Mac OS variants (ie No driver software needs to be installed)

CTRL , ALT , SHIFT plus one more key may be emulated simultaneously.

Third party tested USB 1.1 Compliant.

Cable length 2.5M

Active Extension cables must be used if longer cables are required.

Setting the Footswitch Function

Release the two hinge screws with a screwdriver turning them a quarter turn and removing them.

The lid will then come away revealing the switches .

Find the Key (or combination of keys) you require on the tables below and set SW1, 2 or 3 accordingly.

For test purposes the footswitch is supplied with the switches set to the character 'a'

Key	SW1	SW2	SW3
а	7	2	
b	4	5	
С	3	4	
d	7	4	
е	5	4	
f	7	5	
g	8	5	
h	8	6	
i	5	7	
j	7	6	
k	7	7	
	7	8	
m	3	6	
n	4	6	
0	5	8	
р	5		5
q	5	2	
r	5	5	
S	7	3	
t	6	5	
u	5	6	
V	3	5	
W	5	3	
X	3	3	
У	6	6	
z	3	2	

Key	SW1	SW2	SW3
1(!)	1	2	
2(")	1	3	
3(#)	1	4	
4(\$)	1	5	
5 (%)	2	5	
6(^)	2	6	
7 (&)	1	6	
8(*)	1	7	
9(()	1	8	
0())	1		5

Key	SW1	SW2	SW3
F1	2	3	
F2	2	4	
F3	6	4	
F4	8	4	
F5	1	1	
F6	8	7	
F7	6	8	
F8	2	8	
F9	2		2
F10	1		2
F11	8		2
F12	4		2

Key	SW1	SW2	SW3
ESC	8	2	
TAB	6	2	
Space	8		1
Enter	3		2
Num Lock	3		1
Win	6		6
Caps Lock	6	3	
1	8		7
↓	4		1
\rightarrow	4		8
<i>←</i>	4		7
+	5		7
-	4		9
*	3		9
1	3		8
/?	4		5
[{	6		5
]}	6	7	
:;	7		5
~ #	3		5
.>	3	8	
,<	3	7	
	2		5
= +	2	7	
۱	8	3	
Back space	6		2
'@	8		5
Calc	6		3

Key	SW1	SW 2	SW3
1 End	7		1
2 ↓	7		8
3PgDn	7		9
4 ←	6		1
5	6		8
6 →	6		9
7Home	5		1
8 ↑	5		8
9PgUp	5		9
0 Ins	8		8
. Del	8		9

Key	SW1	SW2	SW3
Page Up	2		9
Page Down	1		9
Home	2		7
End	1		7
Insert	2		8
Delete	2		1

Key	SW1	SW2	SW3
Print	1		4
Scroll	5		4
Pause	5	1	

Кеу	SW1	SW2	SW3
CTRL			10
ALT			11
SHIFT			12