

PRO-SIGNAL



3-Way Audio Selector Switch PSG08226

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION


When using electrical appliances basic safety precautions should always be followed.

- To prevent fire or shock hazard, do not expose this product to rain or moisture.
- All connections should be made with source and destination equipment switched off and/or volume levels at minimum.

OVERVIEW

This switch allows 3 external input sources (CD/Tuner/Tape etc) to be connected to an amplifier with insufficient dedicated input connections.

INSTALLATION

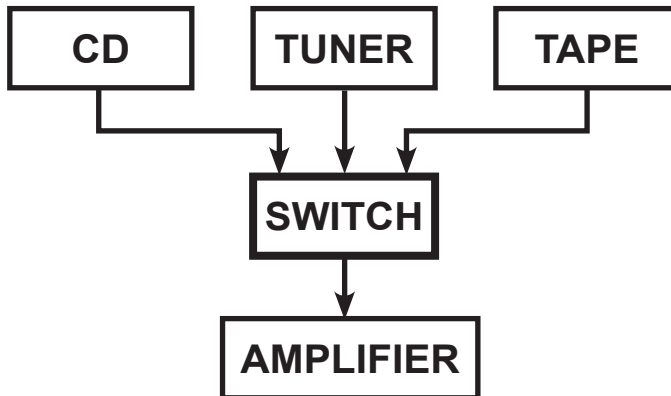

- Connect the stereo output from the source equipment to the stereo RCA input sockets.
- Connect the output from the switch to the amplifiers stereo aux input.
- To select the source, select using the rotary switch.

CLEANING & MAINTENANCE

- Clean the casing with a soft cloth lightly moistened with a mild detergent.
- Never use any abrasive or solvents.



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in Taiwan
PR2 9PP
Man Rev 1.0