

PRO-SIGNAL



4-Way Audio Video Selector PSG08228

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION


When using electrical appliances basic safety precautions should always be followed.

- To prevent fire or shock hazard, do not expose this product to rain or moisture.
- All connections should be made with source and destination equipment switched off and/or volume levels at minimum.

OVERVIEW

- This passive switch allows 4 external input sources (DVD/Blu-ray/Video Disc etc) to be connected to a single TV/display/DVD recorder.

INSTALLATION

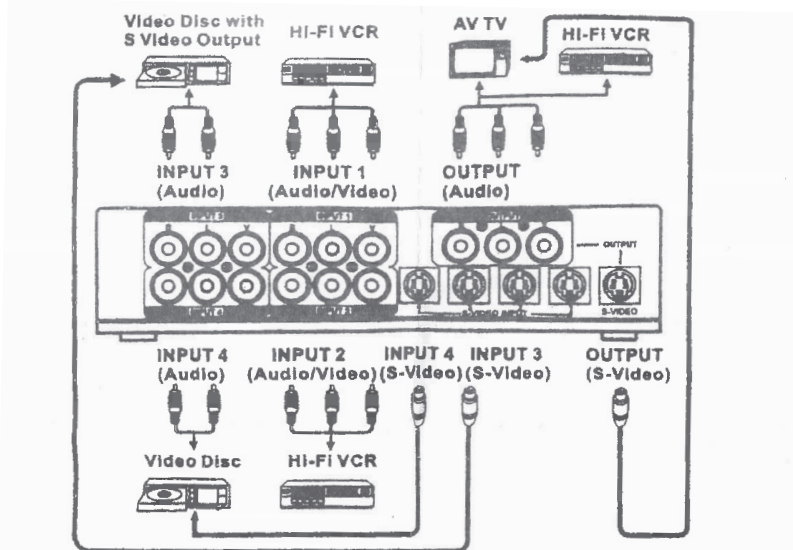

- Connect each source equipment S-Video output to the selectors S-Video input connectors.
- Connect the source devices R/L Audio outputs to the selectors R/L Audio inputs.
- If the source equipment does not have an S-Video output, connect the composite output to the composite input socket on the selector.
- Connect the S-Video output and the L/R Audio output from the selector to the Audio inputs to the destination display/DVD/VCR.
- If the destination device does not have an S-Video input, connect the composite output on the selector to the composite input on the destination equipment.
- When all source equipment is operating, selecting which source is switched to the destination equipment is achieved by pressing one of the four buttons on the selector front panel.

CLEANING & MAINTENANCE

- Clean the casing with a soft cloth lightly moistened with a mild detergent.
- Never use any abrasive or solvents.



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in Taiwan
PR2 9PP
Man Rev 1.0