



ES-U-2001-STB

**Hi-Speed USB to Industrial Single RS-
422/485 Adapter Installation Guide**

Document Reference No.: CP_000075

Version 1.0

Issue Date: 29-12-2020

**Connective Peripherals Pte Ltd
178 Paya Lebar Road, #07-03 Singapore 409030
Tel.: +65 67430980 Fax: +65 68416071**

E-Mail (Support): support@connectiveperipherals.com Web: www.connectiveperipherals.com/products

Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied. Connective Peripherals Pte Ltd will not accept any claim for damages howsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product or any variant of it is not intended for use in any medical appliance, device or system in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Connective Peripherals Pte Ltd, 178 Paya Lebar Road, #07-03 Singapore 409030. Registered Number: 201617872E

Copyright © Connective Peripherals Pte Ltd

Table of Contents

1	Introduction	3
2	Specifications & Features	4
3	Hardware Setup	5
3.1	Termination and Biasing Option Configuration	6
4	Installation & Verification.....	7
4.1	Windows 7/Vista/2003/XP/2000 Driver Installation....	7
4.2	Verify Installation.....	7
4.3	Change COM Port Properties & COM Port Number.....	8
5	Uninstallation	9
5.1	Uninstalling Windows 2003/XP/2000 Drivers	9
5.2	Uninstalling Windows 7 or Vista Drivers	11
6	Pin Layouts / Pinout information	14
6.1	RS-422 Signal Pin-outs of Terminal Block.....	14
6.2	RS-422 Signal Wiring	14
6.2.1	Point-to-Point 4 Wire Full Duplex.....	14
6.3	RS-485 4-Wire (Full duplex) Signal Pin-outs of Terminal Block RS-422	14
6.4	RS-485 2-Wire (Half duplex) Signal Pin-outs of Terminal Block	14
6.5	RS-485 Signal Wiring	15
6.5.1	Point-to-Point 4-Wire Full Duplex.....	15
6.5.2	Multi-drop RS-485 2-Wire Half-duplex.....	15
7	Contact Information	16
Appendix A - List of Figures & Tables		17
List of Figures.....		17
List of Tables		17
Appendix B - Revision History		18

1 Introduction

The ES-U-2001-STB USB to Industrial Single RS-422/485 Adapter is designed to make serial port expansion quick and simple. Connecting to a USB port on your computer or USB hub, the USB Serial Adapter instantly adds one industrial RS-422/485 multi-electrical interface serial communication port to your system. By taking advantage of the USB bus, the USB Serial Adapter makes it easier than ever to add one RS-422/485 port and serial devices to your system with easy plug and play and hot plug features. Adapting the new technology, the serial port expansion now takes the new bus with easy and convenient connectivity.

Plugging the ES-U-2001-STB USB to USB port, the adapter is automatically detected and installed. There are no IRQ & COM port conflicts, since the port doesn't require any additional IRQ, DMA, memory as resources on the system. The RS-422/485 port functions as native Windows COM port, and it is compatible with Windows serial communication applications.

The USB Industrial I/O Adapter provides instant connectivity to RS-422/485 communication devices for factory automation equipment, multi-drop data collection devices, barcode readers, time clocks, scales, data entry terminals, PC to PC long distance communications and serial communications in harsh environment. The USB Industrial I/O provides solution for applications requiring single node or multi-drop communications over short and long distance.

2 Specifications & Features

- Adds a high speed RS-422 / 485 serial port via USB connection.
- 384 byte receive buffer.
- 128 byte transmit buffer for high speed data throughput.
- Requires no IRQ, DMA, I/O port.
- Data rates: 300 bps to 1M bps.
- Connector: one 5-pin terminal block.
- Auto transmit buffer control for 2-wire RS-485 half-duplex operation.
- Termination resistors installed on-board.
- RS-422 data signals: Tx-, Tx+, Rx+, Rx-, GND.
- RS-485 data signals: Tx-, Tx+, Rx+, Rx-(4 wire) and data-, data+ (2 wire).
- Monitor LEDs of TxD, RxD indicating port status.
- Easy operating mode configuration and setting
- Virtual COM port drivers available for Windows 7, Vista, 2003, XP, 2000.

3 Hardware Setup

Inside the unit, there is one 3-pin DIP switch which is set to select the mode of operation. You will need to push down the upper case (refer to the picture) and set the switch settings to RS-422 or RS-485 mode as per the requirements of your application. After setting of switches, you then plug the adapter to USB port to start driver installation.



Figure 1 – Push down the upper case and slide it to open

The RS-422 and RS-485 Mode block configuration settings are listed below -

	Operation Mode	S1	S2	S3
RS-422	4 wire with Handshaking	OFF	ON	OFF
RS-485	Full Duplex (4 wire)	ON	ON	OFF
	Half Duplex (2 wire) - with Echo	ON	OFF	OFF
	Half Duplex (2 wire) - without Echo	ON	OFF	ON

Table 1 - RS-422 & RS-485 Mode Block Configuration SW (External DIP Switch) for Mode Setting

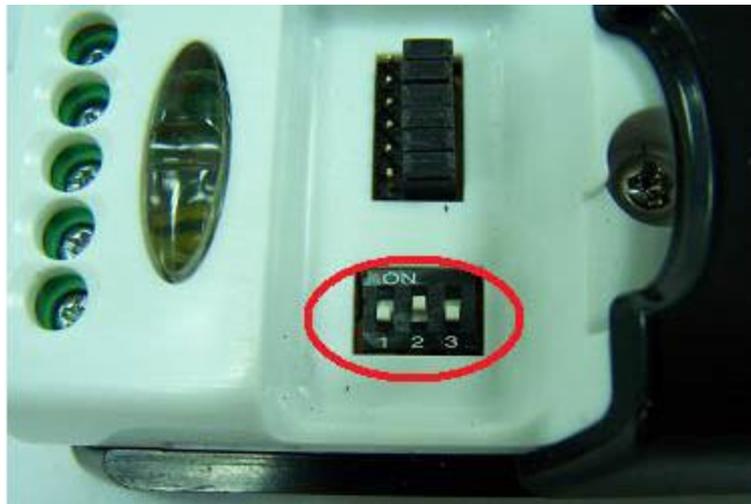


Figure 2 - 3-Pin DIP Switch for Operating Mode Selection

3.1 Termination and Biasing Option Configuration

Inside the unit, there are 6 x 3 (18 pin) header blocks which are jumpered to enable Tx, Rx, 120 Ohm termination resistors and Rx, Tx 750 Ohm biasing resistor. You will need to open up the case and set the jumper setting for RS-422 mode or RS-485 mode as per the requirements of your application. Settings are listed as follows:

Jumper	Function
1-2 enable	Tx+/- Termination of 120 Ohm.
2-3 disable	This jumper should always be populated for RS-485 half-Duplex mode.
4-5 enable	Pull-up Tx+ to VCC by 750 Ohm Bias resistor.
5-6 disable	This jumper should be populated for pull-up Tx+.
7-8 enable	Pull-down Tx- to GND by 750 Ohm Bias resistor.
8-9 disable	This jumper should be populated for pull-down Tx- .
10-11 enable	Rx+/- Termination of 120 Ohm.
11-12 disable	This jumper should always be populated for RS-422/485 full-duplex mode.
13-14 enable	Pull-up Rx+ to VCC by 750 Ohm Bias resistor.
14-15 disable	This jumper should be populated for pull-up Rx+
16-17 enable	Pull-down Rx- to GND by 750 Ohm Bias resistor.
17-18 disable	This jumper should be populated for pull-down Rx- .

Note: Sometimes, when operating in RS-422 or RS-485, it is necessary to configure termination and biasing of the data transmission lines. Generally this must be done in the cabling, since this depends on the installation of connections. Before applying the option, check your cable specification for proper impedance matching.

Biasing of data lines must only occur at a single point anywhere in the cabling. ES-U-2001-STB provides biasing for ease of installation. Please be sure to disable this inside the unit, if your cabling already provides biasing.

Termination must not be installed in the middle of the cable. It is only permitted at both ends. Since a computer controlled serial port is almost always at one end of the cable, termination is disabled by default.

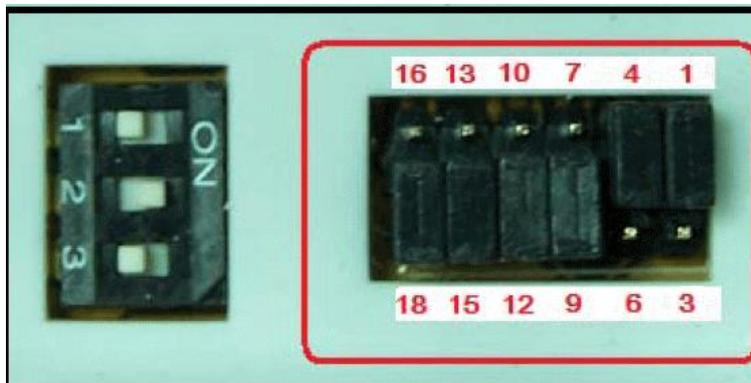


Figure 3 – 6 x 3 Header Block to enable Termination & Biasing Resistors

4 Installation & Verification

4.1 Windows 7/Vista/2003/XP/2000 Driver Installation


You need to have administrator privileges to install any new drivers under Windows 7/ Vista /2003/XP /2000. To install the driver or update the configuration please log onto Windows as "Administrator" or ask your system administrator to install the USB-COM driver.

You need to install driver first, prior to hardware setup. Do not connect the USB-to-Serial Adapter to the USB port of your computer, before you finish driver installation.

Please proceed with the following steps to install the driver:

1. Insert the "USB COM Series Driver and Utility" CD into your CD-ROM.
2. The "USB COM Series Driver and Utility CD" dialog box appears.
3. Under "Driver Installation", double click "Windows 7, Vista, 2003, XP, 2000 driver" to install the device driver.
4. The USB COM install program will auto-detect the OS type and install the driver automatically.

Note: in Windows 7 or Vista OS you will find another dialog box, please click on "OK" to confirm the drivers install program.

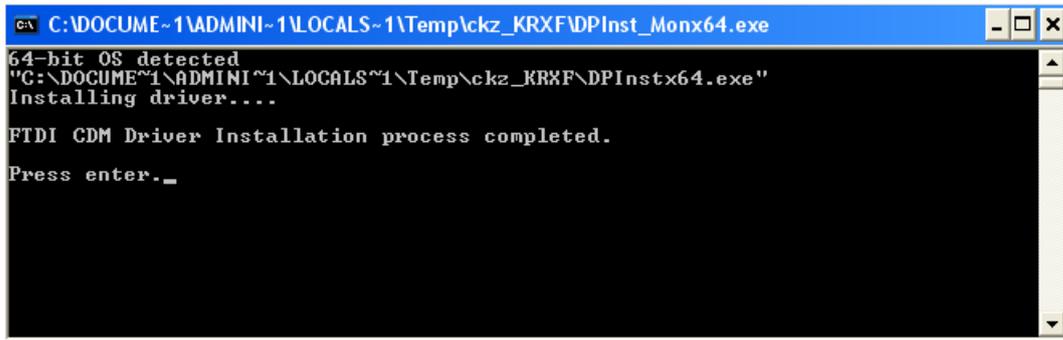

```
C:\DOCUME~1\ADMINI~1\LOCALS~1\Temp\ckz_KRXP\DPInst_Monx64.exe
64-bit OS detected
"C:\DOCUME~1\ADMINI~1\LOCALS~1\Temp\ckz_KRXP\DPInstx64.exe"
Installing driver...
FTDI CDM Driver Installation process completed.
Press enter._
```

5. After the message "FTDI CDM Driver installation process completed" appears, press "Enter" to complete the driver installation.
6. Plug in the USB to Serial Adapter to the USB port of your computer. Windows will finish installing the driver files.

4.2 Verify Installation

You can now verify the installation has been completed successfully by looking under Device Manager of the System Properties screen. (Navigation: Start → Setting → Control Panel → System Properties → Hardware → Device Manager).

The device should have installed as a "USB Serial Port (COMx)" attached to "USB Serial Converter".

4.3 Change COM Port Properties & COM Port Number

This feature is particularly useful for programs, such as HyperTerminal, which only work with COM1 through COM4. Please ensure that you do not change the COM Port Number already in use.

To change the virtual COM port properties:

- Select the **"USB Serial Port"**.
- Click **"Properties"**.
- Select **"Port Setting"** and **"Advanced"**.
- Click the drop down arrow on COM Port Number and scroll to the required COM port. Select **"OK"**.
- Return to the Device Manager Screen. You will see that the USB Serial Port installation has been changed to the new COM Port Number.

5 Uninstallation

5.1 Uninstalling Windows 2003/XP/2000 Drivers

Please proceed with the following steps to uninstall the 2003/XP/2000 driver:


1. Insert the **"USB COM Series Driver and Utility"** CD into your CD-ROM.
2. The **"USB COM Series Driver and Utility CD"** dialog box appears.
3. Under **"Driver Uninstalling"**, double click **"Windows 2003, XP, 2000 driver uninstall"** to uninstall the device driver.
4. When following dialog box appears, double click **"Clean System"** to uninstall the 2003/XP/2000 drivers.




5. You need to disconnect all USB to serial Adapters from your PC, when the message below appears. Double click **"OK"** to start uninstalling Windows 2003/XP/2000 USB to Serial drivers.



6. Double click **"Yes"** to confirm it.

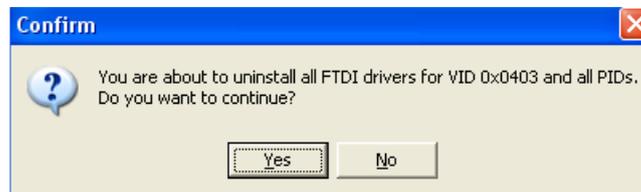

7. Click **"No"** to proceed.

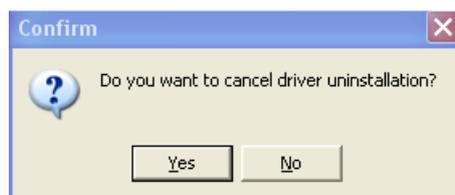


- When the message "Status: System clean completed" appears, double click "Exit" to complete the USB to serial drivers uninstall.



- Press "Start" button and select "Control Panel".

- Open the Add or Remove program.

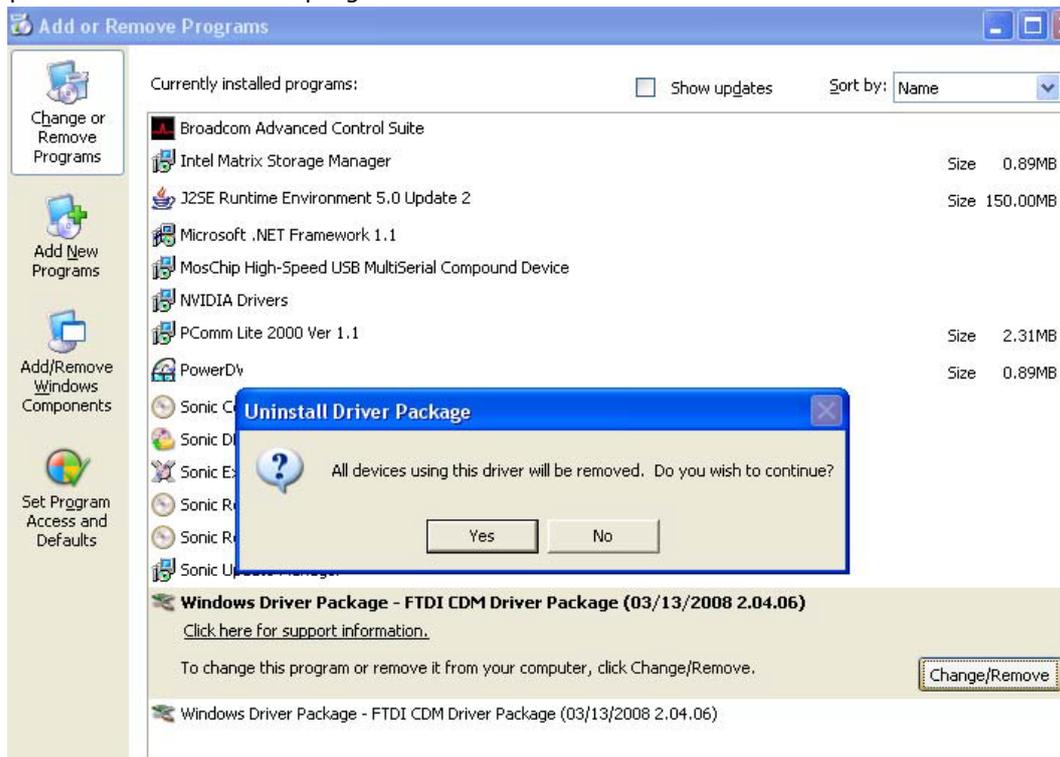


- Remove the first "Windows Driver Package – FTDI CDM Driver Package (...)".
- Click "Chang/Remove" and "Yes" to remove the first Windows Driver Package.
- Remove the second "Windows Driver Package – FTDI CDM Driver Package (...)".
- Click "Chang/Remove" and "Yes" to remove the second Windows Driver Package.
- Reboot the computer to complete the driver uninstall.


5.2 Uninstalling Windows 7 or Vista Drivers

Windows 7 and Vista have many new security features. You need to proceed with the following steps to uninstall the Vista driver:


1. The USB to serial devices must connect to the PC.
2. Press **"Start"** button and select **"Control Panel"**.
3. Select **"Classic View"** from the top left hand corner and then **"System"** from the list.
4. Select **"Device Manager"** from the top left hand corner.

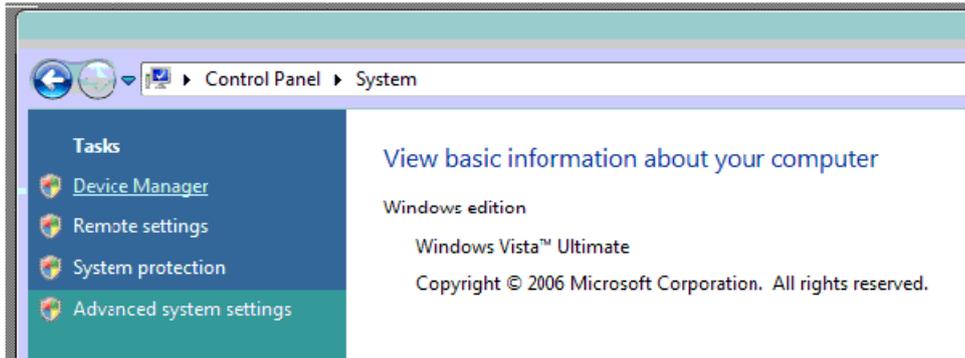

5. Locate your Device under the Ports (COM & LTP) section and right click on it to bring up the menu shown.

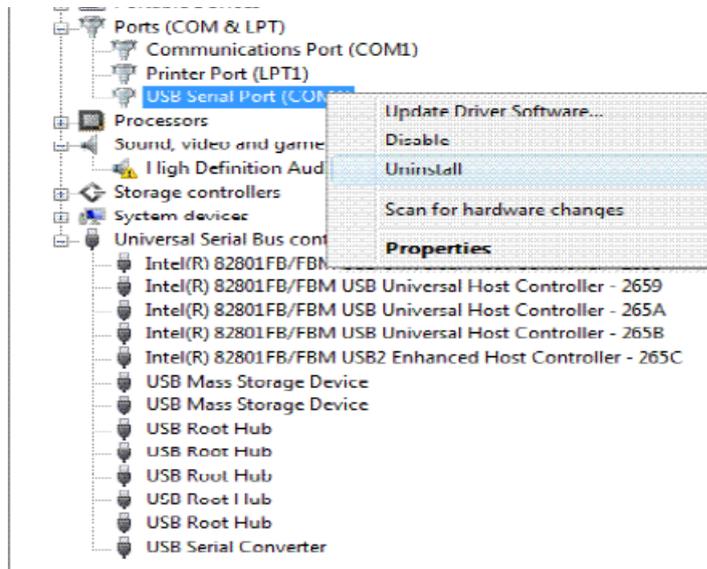


6. Select uninstall and be sure to click the box for **"Delete the driver software for this device"** in the next window and press **"OK"**.

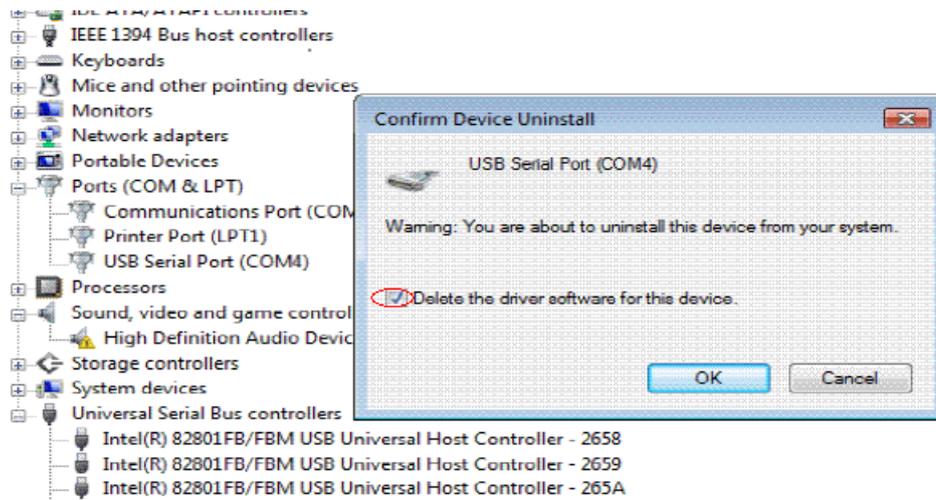


Note: if you have more than one USB Serial Port (COMx) installed in your PC, you need to repeat from step 5 to step 6 to delete the driver software for each port.

7. Locate your Device under the Universal Serial Bus Controllers section, and right click on it to bring up the menu shown.

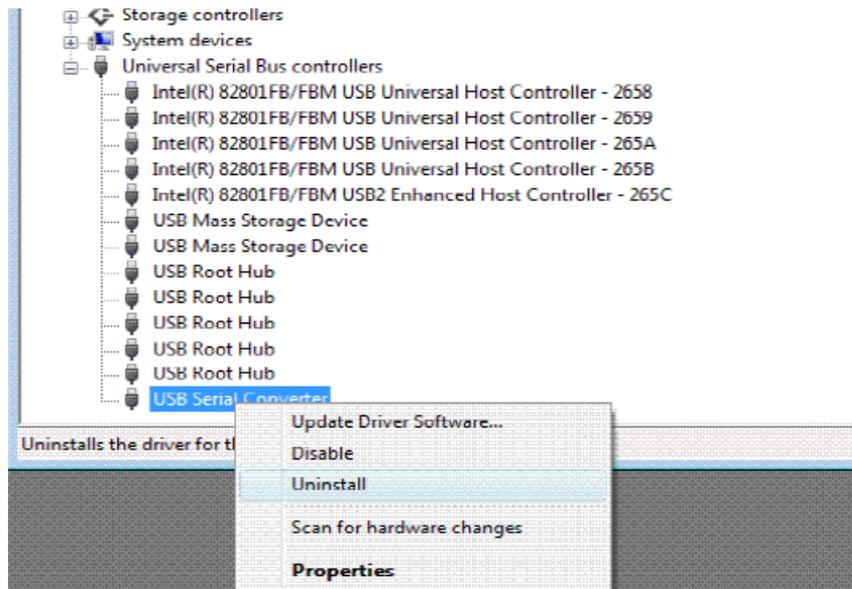

8. Select uninstall and be sure to click the box for **"Delete the driver software for this device"** in the next window and press **"OK"**.

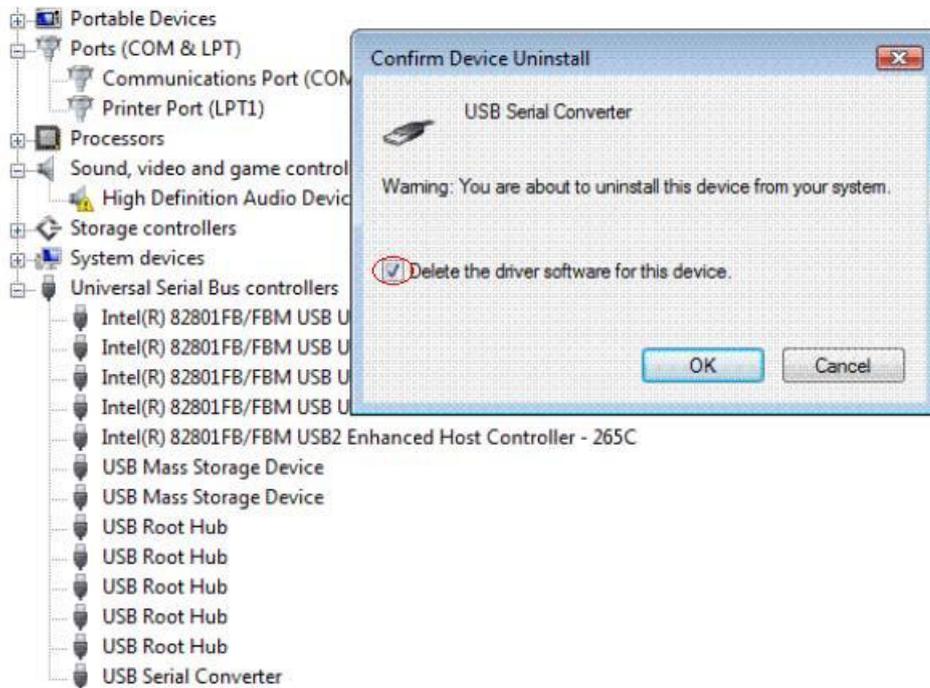

Note: if you have more than one USB Serial Converter installed in your PC, you need to repeat step 7 and step 8 to delete the driver software for all devices.

6 Pin Layouts / Pinout information

6.1 RS-422 Signal Pin-outs of Terminal Block

Pin 1	TxD- (A)
Pin 2	TxD+(B)
Pin 3	RxD+(B)
Pin 4	RxD-(A)
Pin 5	GND

6.2 RS-422 Signal Wiring

6.2.1 Point-to-Point 4 Wire Full Duplex



6.3 RS-485 4-Wire (Full duplex) Signal Pin-outs of Terminal Block RS-422


Pin 1	TxD- (A)
Pin 2	TxD+(B)
Pin 3	RxD+(B)
Pin 4	RxD-(A)
Pin 5	GND

6.4 RS-485 2-Wire (Half duplex) Signal Pin-outs of Terminal Block


Pin 1	Data- (A)
Pin 2	Data+(B)
Pin 5	GND

6.5 RS-485 Signal Wiring

6.5.1 Point-to-Point 4-Wire Full Duplex

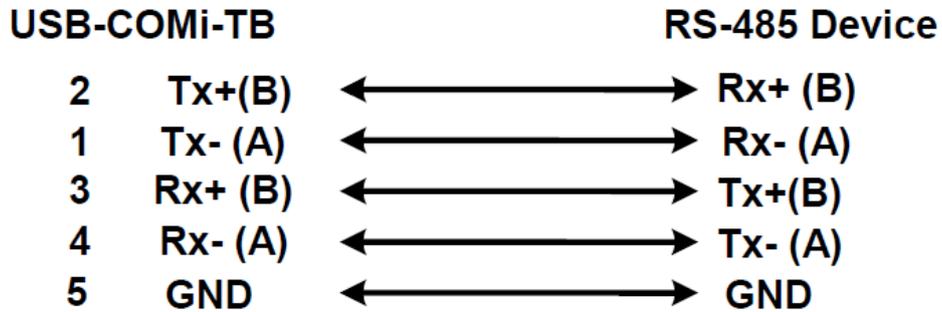

6.5.2 Multi-drop RS-485 2-Wire Half-duplex

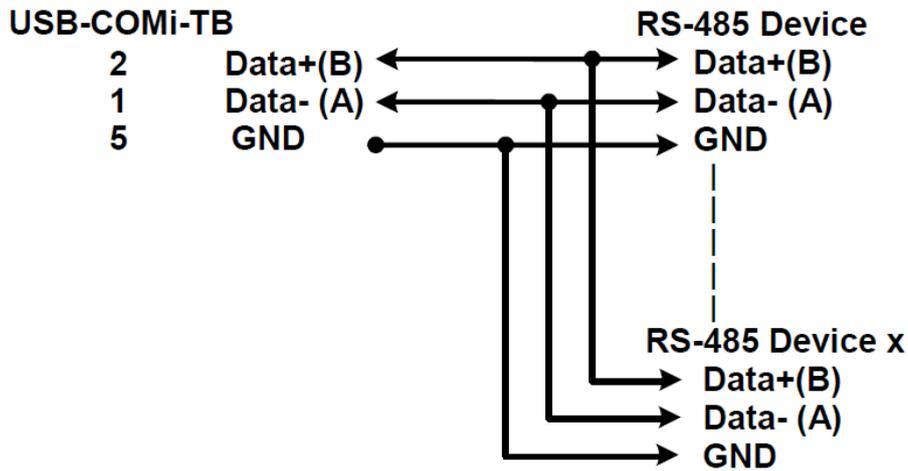

7 Contact Information

Global Headquarters – Singapore

Connective Peripherals Pte Ltd
178 Paya Lebar Road
#07-03
Singapore 409030

Tel: +65 67430980
Fax: +65 68416071

E-Mail (Sales)
E-Mail (Support)
Web Site URL
Web Shop URL

sales@connectiveperipherals.com
support@connectiveperipherals.com
<http://www.connectiveperipherals.com>
<http://www.connectiveperipherals.com>

Appendix A - List of Figures & Tables

List of Figures

Figure 1 – Push down the upper case and slide it to open	5
Figure 2 - 3-Pin DIP Switch for Operating Mode Selection	5
Figure 3 – 6 x 3 Header Block to enable Termination & Biasing Resistors	6

List of Tables

Table 1 - RS-422 & RS-485 Mode Block Configuration SW (External DIP Switch) for Mode Setting	5
--	---

Appendix B - Revision History

Revision	Changes	Date
1.0	Initial release	29-12-2020