

PRO-SIGNAL

i10 User Manual PSG3402

I Main user interface



- A.Contact Charging point
- B.Function Button
- C.Microphone
- D.Charging Type-c
- E.Charging Status LED

II Start Here

- a. Open Charging Dock case, take out the earbuds



- b. Automatic Pairing



(Voice Notice: Power on ---->TWS Connected)

- c. Pairing with cellphone



 
Open cellphone bluetooth and set it as Open detection, when "Airposd" appears in available devices, press to connect. The LED flash in Blue continuously.
(Voice Notice: Connected)

- d. Power off



Simply put the headset into the charging box to shut down.

III Charging



From the bottom to the top, the first light flash is charged to 25%, the second light flash to 50%; the third light flash to 75%, the fourth light flash to 100%, the full charge indicator is off.

IV Touch functions



When there is an Incoming call, click the left earphone to answer/hang up the phone, play/pause music, play the next song at 2 consecutive points, play the last song at 3 consecutive points, and long press for 2 seconds to wake up the intelligent voice assistant.

Support wireless charging



Specifications

Product Name: PSG3402 i10

Charging Time: 1.5 hours

Music Time: 3 hours

Bluetooth solution: Realtek

Operation range : 10m

Call time : 8 hours

Charging Input 5V=1A

Bluetooth protocol: V5.0

Important Notice

- Please make sure the product is fully charged before initial use.
- Please use the supplied charger complying with safety requirements to charge this product.
- If your cellphone can not find i10, please double check if your cellphone Bluetooth is set to visible mode. After initial pairing, the ear buds will automatically pair for repeat use. If not used for a long time, you may need to repeat the pairing procedure to use with the cellphone.
- If only one ear bud has sound while in music mode, please restart the earbuds or manually recover the default setting.

Safety warning

- Please use the product in the temperature between 0°C 5°C. When the environmental temperature is too high or low, it may cause the product to malfunction.
- Please keep the product dry. Do not contact water or use in a humid environment.
- Please do not drop, throw, pull/drag the product to prevent damage.
- Please power off before cleaning the product.
- Please use the product at proper volume while listening to music or answering call, long high volume usage could lead to permanent hearing damage.
- The built in battery is not removable please do not replace by yourself. If it's really necessary, please ask help from authorized service center.
- Please dispose the product according to local regulations you can not treat it as domestic waste.
- Please keep the product out of reach of children, swallowing of small components included may cause asphyxia.

INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China
PO Box 13362 Dublin 2
PR2 9PP

