Ultra-stable, high precision (ppm class) fluxgate technology DS Series current transducer for non-intrusive, isolated DC and AC current measurement up to 100A







#### **Features**

Linearity error maximum ±24 ppm

1V BNC output connection

Fluxgate, closed loop compensated technology with fixed excitation frequency and second harmonic zero flux detection for best in class accuracy and stability

Industry standard DSUB 9 pin connection

Green diode for normal operation indication

Full aluminum body for superior EMI shielding and extended operating temperature range

Large aperture \$27.6mm for cables and bus bars

#### **Applications:**

MPS for particles accelerators

Gradient amplifiers for MRI devices

Stable power supplies

Precision drives

Batteries testing and evaluation systems

Power measurement and power analysis

Current calibration purposes

Specification highlights	Symbol	Unit	Min	Тур	Max
Nominal primary AC current	I <sub>PN</sub> AC	Arms			50
Nominal primary DC current	I <sub>PN</sub> DC	А	-75		75
Measuring range	Î <sub>PM</sub>	А	-100		100
Primary / secondary ratio		V/kA	20,000		20,000
Linearity error	E <sub>∟</sub>	ppm	-24		24
Offset current (including earth field)	IOE	ppm	-72		72
Ratio error @23°C	E <sub>C</sub>	ppm	-25		25
DC-10Hz Overall accuracy @23°C (= $\mathcal{E}_{L}$ + $I_{OE}$ + $\mathcal{E}_{C}$ )	acc8	ppm	-121		121
AC Maximum gain error 10Hz to 5kHz	EG	%			±0.01
Operating temperature range	Та	°C	-40		85
Power supply voltages	Uc	V	±14.25		±15.75

All ppm (or %) values refer to nominal current



## Electrical specifications at Ta=23°C, supply voltage = ± 15V unless otherwise stated

Parameter		Symbol	Unit	Min	Тур.	Max	Comment
Nominal primary AC current		I <sub>PN</sub> AC	Arms			50	Refer to fig. 2 for derating
Nominal primary D	C current	I <sub>PN</sub> DC	Α	-75		75	
Measuring range		I <sub>PM</sub>	Α	-100		100	Refer to fig. 2 for derating
Overload capacity		Î <sub>OL</sub>	Α			1500	Non-measured, 100ms
Nominal output vol	tage	$V_{SN}$	Vout	-1,5		1,5	At nominal primary DC current
Primary / secondar	y ratio	Ratio	V/kA	20,0000		20,0000	
Bandwidth		f(-3dB)	kHz	500			Small signal, graphs figure 3
Amplitude error	10Hz –5kHz 5kHz -100kHz 100kHz - 1MHz	?G	%			0,01% 1,00% 20,00%	% refers to nominal current
Phase shift	10Hz –5kHz 5kHz -100kHz 100kHz - 1MHz	θ	0			0.20° 0.50° 5.00°	
Response time to	a step current lคง	tr @ 90%	μs		1		di/dt = 100A/µs
Noise	0 - 100Hz 0 - 1kHz 0 - 10kHz 0 - 100kHz	noise	ppm rms			0,08 0,16 1,60 6,00	
Fluxgate excitation	frequency	f <sub>Exc</sub>	kHz		32,5		
Induced rms voltag	je on primary		μV rms			5	
Power supply volta	ges	Uc	V	±14.25		±15.75	
Positive current cor	nsumption	Ips	mA	93	97	104	Add Is (if Is is positive)
Negative current co	onsumption	Ins	mA	85	91	96	Add Is (if Is is negative)
Operating tempera	ture range	Та	°C	-40		85	
Linearity error		?L	ppm	-24		24	ppm refers to nominal DC current
Offset error							
Initial		$V_{OE}$	ppm	-72		72	ppm refers to nominal DC current
Versus temperature			ppm/K	-1		1	ppm refers to nominal DC current
Versus time			ppm/month	-1		1	ppm refers to nominal DC current
Versus supply voltage			ppm/V	-0,4		0,4	ppm refers to nominal DC current
Ratio Error							
Initial @23°C		?c	ppm	-25		25	ppm refers to nominal DC current
Versus temperature			ppm/K	-3		3	ppm refers to nominal DC current
Versus time			ppm/month	-0,3		0,3	ppm refers to nominal DC current
DC-10Hz Overall accuracy @23°C (= $?_L + V_{OE} + ?_C$ )		acc <sub>?</sub>	ppm	-121		121	ppm refers to nominal DC current



Indicate that caution is necessary when operating the device




Caution: Intended use is to measure current, and the product should only be used for intended use.




## Frequency and ambient temperature derating (Fig. 2)



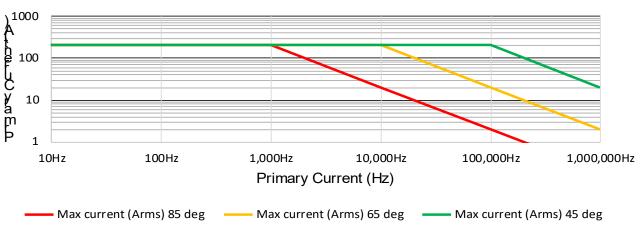

## Frequency characteristics (Fig. 3)

## Amplitude / Phase

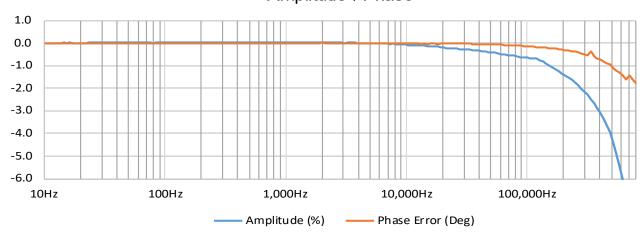

## Isolation specifications

Paramete	r	Unit	Value	
Clearance	3	mm	9.5	
Creepage	distance	mm	10.5	
Comparati	ive tracking index (CTI)		> 600	
- Betv	ge for AC isolation test, 50/60 Hz, 1 min ween primary and (secondary and shield) ween secondary and shield	d shield) kV		
Impulse w	rithstand voltage (1.2/50µs)	kV	10.4	
Continous Uninsulate	Non mains CAT II (DC and rms) CAT III (DC and rms)	V	1000 600 300 2000 1000 1000	
Transient v Uninsulated • • • Insulated v	Non mains CAT II CAT III	V	4500 6000 6000 6000 6000 8000	



**Caution:** Do not connect the transducer to signals or use for measurements within Measurement Category IV, or for measurements on MAINs circuits or on circuits derived from Overvoltage Category IV which may have transient overvoltages above what the product can withstand. The product must not be connected to circuits that have a maximum voltage above the continuous working voltage, relative to earth or to other channels, or this could damage and defeat the insulation. The product can only withstand transients up to the transient overvoltage rating without breakdown or damage to the insulation. An analysis of the working voltages, loop impedances, temporary overvoltages, and transient overvoltages in the system must be conducted prior to making measurements.



**Caution:** When using insulated wires all wiring must be insulated for the highest voltage used.

# **Absolute maximum ratings**

Parameter	Unit	Max	Comment
Primary	kA	4.5	Maximum 100ms
Power supply	V	±16.5	

## Environmental, safety and mechanical specifications

Parameter	Unit	Min	Тур	Max	Comment		
Altitude	m			2000			
Usage					Designed for indoor use		
Transient voltages					Up to overvoltage category III		
Poution Degree				2			
Ambient operating temperature range	°C	-40		85			
Storage temperature range	°C	-40		85			
Relative humidity	%	20		80	Non-condensing		
Mass	kg		0.6				
Connections	DSUB9 male and BNC connector						
Standards	IEC61010-2-30 IEC61326-1 EMC IEC61010-1:2010 3rd Edition						
External devices	External devices connected to current transducers must comply with the standards IEC61010-1, IEC60950 or IEC62368-1 and be energy-limited circuitry						
Cleaning	The transducer should only be cleaned with a damp cloth. No detergent or chemicals should be used.						
Temperature	When multiple primary turns are used or high primary currents are applied the temperature around the transducer will increase, please monitor to ensure that the maximum ratisngs are not exceeded. It is recommended to have minimum 1mm <sup>2</sup> per ampere in the primary busbar.						

#### Advanced Sensor Protection Circuits "ASPC"

Developed to protect the current transducer from typical fault conditions:

- Unit is un-powered and secondary circuit is open or closed
- Unit is powered and secondary circuit is open or interrupted

Both DC and AC primary current up to 100% of nominal value can be applied to the current transducers in the above situations without damage to the electronics.

Please notice that the transducer core can be magnetized in all above cases, leading to a small change in output offset current (less than 10ppm)

#### Status pins

When transducer is operating in normal condition, the status pins (3 and 8) are shorted.

Status pins properties: - forward direction pin 8 to pin 3, maximum forward current 10mA

- maximum forward voltage 60V, maximum reverse voltage 5V


#### **Accessories**

4-channel power supplies unit for connection up to 4 x DL2000 : DSSIU-4-1U
 6-channel power supplies for connection of up to 6 x DL2000: DSSIU-6-1U

Transducer cables in 4 lengths (2m - 5m - 10m - 15m - 20m):
 DSUB2 - DSUB5 - DSUB10 -

DSUB15 - DSUB20

Please visit the Danisense homepage for relevant datasheets.

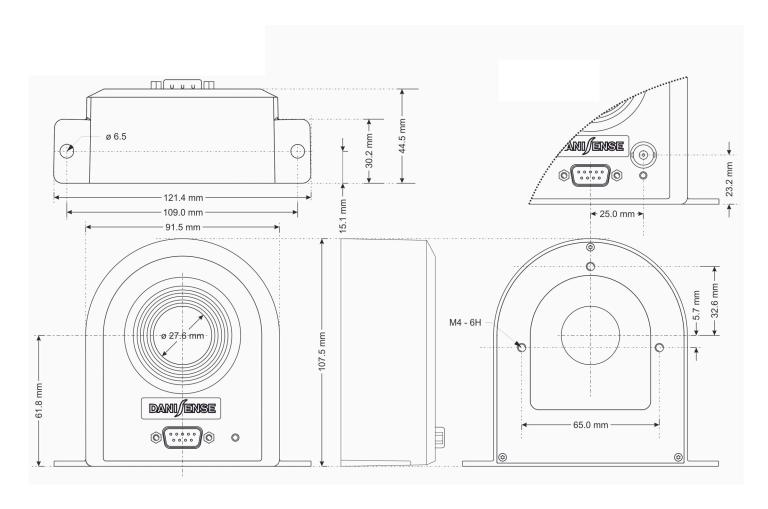

(general tolerance 0.3mm unless otherwise stat-

## **DSUB** pin layout


#### DSUB-9 pinout & BNC connection



When sensor is operating in normal condition the status pins are shorted.

Status pin properties.

- Forward direction pin 8 to pin 3
- Maximum forward current 10mA
- Maximum forward voltage 60V
- Maximum reverse voltage 5V

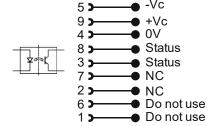

-Vc

# Impedance matching resistor 50Ω 1V 0V

#### Positive current direction

Is identified by an arrow on the transducer body

### **Mounting instructions**

- Base plate mounting
- Back side panel mounting

2 holes φ6.5 2 x M5 steel screws / 6N.m 3 holes φ4.0 x 6H 3 x M4 steel screw / 4N.m

# DANI/ENSE

# DS50UB-1V

#### Intended use:

The DS50UB-1V is designed to measure current up to 100A., and be powered by a DSSIU-4-1U or DSSIU-6-1U.

#### Instruction for use:

- 1. Do not power up the device before all cables are connected.
- 2. Only use cables supplied by Danisense
- 3. Place the primary conductor through the apperture of the transducer
- 4. If the DSSIU-4(6)-1U is intended for desk use, mount the rubber feet which are part of the package.
- 5. If the DSSIU-4(6)-1U is intended for Rack mounting, use the screw kit for mounting and do not mount the rubber feet.
- Connect a DSUB cable between DSSIU-4(6)-1U and each sensor
- 7. Connect a Voltmeter, DMM or other sort of analyzer with a voltage input to the transducer BNC connector.
- 8. Ensure that no calibration connectors are attached when measuring primary current. Always avoid to create a calibration short circuit, between + and calibration connection.
- 9. There is a risk of electrical shock if an uninsulated busbar with high voltages is touching the metal enclosure of the transducer. Please ensure before powering up the system that no primary busbar can touch the metal enclosure.
- 10. When all connection are secured connect mains power
- 11. Apply primary current

#### Safety Instructions:

DO NOT TRY TO DISASSEMBLE THE UNIT.

If the green transducer diode is not operating when the system is powered up, disconnect power and contact Danisense for further instruction.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the