

KAD-2

DIGITAL STEREO AMPLIFIER with BLUETOOTH™

Item ref: 103.122UK

User Manual



Specifications:

Power Supply 230Vac, 50Hz (IEC)

Output Impedance $4 - 8\Omega$

Output Power (8 Ω) 2 x 25W rms / 2 x 40W max. (EIAJ Standard @ 1kHz 10% THD) Output Power (4 Ω) 2 x 35W rms / 2 x 55W max. (EIAJ Standard @ 1kHz 10% THD)

Input sensitivity: line 380mV Input sensitivity: mic 15mV


Dimensions 200 x 200 x 65mm


Weight 1.6kg



Thank you for choosing this QTX KAD-2BT stereo amplifier. This compact class D digital amplifier is capable of delivering a powerful 55W max output per channel. With 4 selectable inputs, 2 mic inputs and various controls, this is a great multipurpose amplifier for both domestic and commercial use.

Product layout:

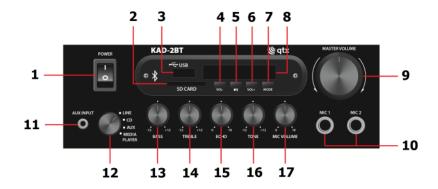

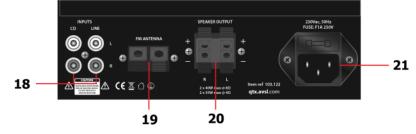

- 1. Power switch
 - **MEDIA PLAYER:**
- 2. SD card slot
- 3. USB memory stick slot
- 4. Volume down/Previous track
- 5. Play/Pause
- 6. Volume up/Next track
- 7. Input selection
- 8. Input display

MAIN UNIT:


- 9. Volume control
- 10. 6.3mm jack microphone input

- 11. Aux input, 3.5mm jack socket
- 12. Rotary input selector
- 13. Input bass level control
- 14. Input treble level control
- 15. Microphone input echo effect
- 16. Microphone input tone control
- 17. Microphone input level control
- 18. RCA stereo line inputs
- 19. Spring clip for FM antenna
- 20. Spring clip speaker output
- 21. IEC mains input

Impedance Matching:

KAD-2BT is capable of $4-16\Omega$ impedance output if more than one speaker is to be connected to the amplifier per channel. Please ensure the total impedance of the speakers are within the range. Speakers can be wired in two different ways, in parallel or in series. The total impedance can be worked out by the following formulas for the two different ways of wiring:


Parallel Connection - $1/R_{total} = 1/R_1 + 1/R_2 + 1/R_3...$

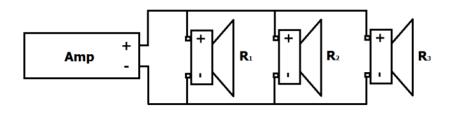

103.122UK Manual




Series Connection - $R_{total} = R_1 + R_2 + R_3....$

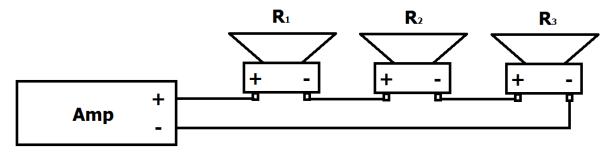

Installation:

Before installation, please ensure power is switched off and mains unpluged from the wall to avoid damage to equipment and installer.

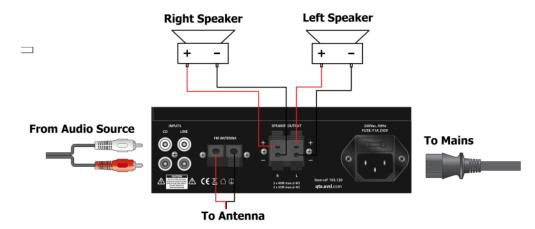

Wire speakers to the amplifier as shown above, ensure the positive and negative terminals are wired correctly. Audio input on the back is through 3 pairs of RCA connectors, ensure left and right signals are correct for stereo output. Finally insert the IEC plug and connect the unit to the mains. Before switching on, always ensure the master volume is set at the lowest point to avoid power surge damage to the unit or speakers. Adjust the volume accordingly to an appropriate listening level.



Media Player:

KAD-2BT has a built in media player which functions as an MP3 player, FM tuner and Bluetooth receiver. To use turn the input selector to media player.

MP3 Player – MP3 files can be played through an SD card or USB stick. Plug in the memory device and media will automatically start playing. Alternatively press Mode button until "USB" is displayed on the screen. To make a selection, press VOL-/VOL+ for previous or next song respectively, to control input volume press and hold VOL-/VOL+ for volume down and volume up respectively. For play and pause press ☑ button.

Bluetooth – for bluetooth connection press MODE button until "BT" is displayed on the screen. From your bluetooth search function (please refer to device manual for instructions) look for "KAD-2BT" to pair with, you should hear a tone once successfully connected. To make a selection, press VOL-/VOL+ for previous or next song, to control input volume press and hold VOL-/VOL+. For play and pause press ■ button.

FM radio − for FM radio press MODE button until "FM" is displayed on the screen. Press the play and pause ■ button to intiate search function through FM frequencies, all searched radio stations will be

103.122UK Manual



stored (up to 99 stations). After the search is complete, it will automatically select the station on the lowest frequency. Press VOL-/VOL+ buttons to change to the next station.

Troubleshooting

No Power	Check mains is switched on and power lead is in good condition and fully inserted
	into the wall socket.
	Check IEC plug is fully inserted into the amplifier on the back.
	Check power switch is switched on on the amplifier.
	Check if the fuse is faulty. If the fuse blows too frequently, stop use of device
	immediately and refer to qualified personnel for repair.
No Music	Check the input connection lead is fully inserted on both amplifier and source.
output	Check the correct input is selected.
	Check the audio source is playing.
	Check volume is turn up on both amplifier and audio source
	Check speaker cable is not damaged, end striped and connected properly on both
	amplifier and speakers.
	Check for any loose strands on speaker cable that is touching the positive and
	negative terminal, this will trigger the short circuit protection.
No Mic	Check Mic is switched on.
output	Check Mic volume is turned up on the amplifier.
	Check if Mic requires phantom power.
	Check if Mic is working properly on other device.
Diminishing	Check speaker polarity is connected correctly.
output	Check audio source/media player volume is turned up.
	Check impedance of the speaker/s is within the range.
Disrupted	Check output volume is not too high on both audio source and amplifier.
output	Check for damage on speaker cable and connection leads.
	Check amplifier, audio device, speaker and connection cables are not near any mains
	power cable or large inductive appliances such as a fridge.
	Check location of the bluetooth device is within the reception range of the amplifier.
	Range may be significantly reduced in areas where a large number of electronic /
	wireless devices are present.
Unable to	Check bluetooth device function is switched on.
connect to	Restart both amplifier and bluetooth device.
Bluetooth	France all files are served as the reat level and not hidden in foldows
Unable to	Ensure all files are saved on the root level and not hidden in folders.
play USB/SD	Ensure audio files are saved in MP3 format.
FM radio not working	Ensure amplifier is not located close to any electronic devices e.g. large transformers,
	fridges or microwaves.
	Ensure volume on amplifier and media player are turned up.
	Check the condition of the FM antenna.



This product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Errors and omissions excepted. Copyright© 2015. AVSL Group Ltd

103.122UK Manual