



Web-site..... www.dnh.no

.....dnh@dnh.no

# **VEP-15(T)**


### ENGLAND DNH WW Ltd


Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk

## GERMANY DNH GmbH

#### USA DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

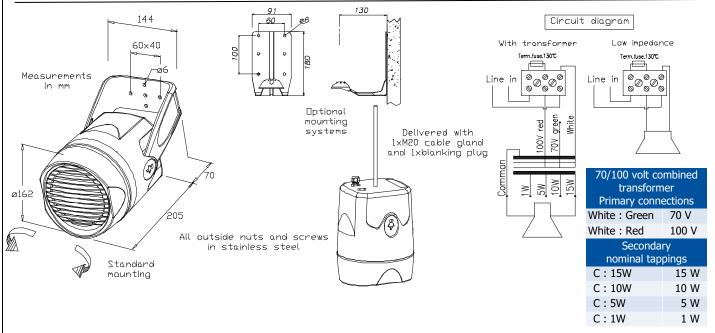

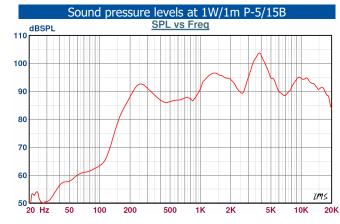

Specifications	
Material / Color	ABS / V0 / RAL7035
Mounting	Bracket
Termination	Ceramic terminal
Weight w/transformer	1,84 kg
IP-rating	55
Max. / min. amb. temp	90°C / -40°C
Rated power	15W
SPL 1W/1m	92 dB
SPL rated power	104 dB
Effective freq. range	140 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	151° / 47°
Directivity factor Q 1kHz/4kHz	2,4 / 7,7
Options	Impedance, colors, labels

#### **Installation, Operation and Maintenance Procedures**

- Fasten bracket with minimum two screws.
- To open the loudspeaker, turn the front gently counter clockwise and pull.
- Lead cable through cable gland and connect to terminal.
- If 70V, replace red cable with the green cable in the terminal.
- To close the loudspeaker, align the two marks on the front and rear parts, and turn the front gently clockwise until it stops.
- Use the attached stop screw to secure the front from undesirable opening during operation. (Optional)
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship