

XPSBAC

Safety Module

User Guide
Original instructions

EIO0000004248.00
05/2021

Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

© 2021 Schneider Electric. All rights reserved.

Table of Contents

Safety Information.....	5
Qualification of Personnel	5
Intended Use.....	6
About the Book.....	7
Introduction	11
Device Overview	11
Front View and Side View.....	12
Nameplate	13
Type Code	14
Technical Data.....	15
Environmental Conditions	15
Mechanical Characteristics.....	17
Electrical Characteristics.....	19
Timing Data.....	22
Data Functional Safety.....	23
Engineering.....	25
Electromagnetic Compatibility (EMC)	25
Principles of Operation.....	26
Dynamization	29
Installation.....	30
Prerequisites and Requirements.....	30
Mechanical Installation.....	31
Electrical Installation	32
Functions.....	36
Application Functions.....	36
Start/Restart Functions	38
Configuration and Commissioning	40
Configuration	40
Commissioning	41
Diagnostics	42
Diagnostics via LED.....	42
Accessories, Service, Maintenance, and Disposal.....	44
Accessories	44
Maintenance	44
Transportation, Storage, and Disposal.....	45
Service Addresses.....	45
Index	47

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Qualification of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation as well as all documentation of all components and equipment of the machine/process are authorized to work on and with this product.

The qualified person must be a certified expert in functional safety.

The qualified person must be able to detect possible hazards that may arise from parameterization, modifying configurations, settings, and wiring, and generally

from mechanical, electrical, or electronic equipment. The qualified person must be able to understand the effects that modifications to configurations, settings, and wiring may have on the safety of the machine/process.

The qualified person must be familiar with and understand the contents of the risk assessment as per ISO 12100-1 and/or any other equivalent assessment as well as all documents related to such risk assessment or equivalent assessments for the machine/process.

The qualified person must be familiar with the standards, provisions, and regulations for the prevention of industrial accidents, which they must observe when designing, implementing, and maintaining the machine/process.

The qualified person must be thoroughly familiar with the safety-related applications and the non-safety-related applications used to operate the machine/process.

Intended Use

This product described in the present document is a safety module intended to perform safety-related functions in a machine/process according to the present document, to the specified related documents, and to all other documentation of the components and equipment of the machine/process.

The product may only be used in compliance with all applicable safety regulations and directives, the specified requirements and the technical data.

Prior to using the product, you must perform a risk assessment as per ISO 12100-1 in view of the planned application. Based on the results of the risk assessment, the appropriate safety-related measures must be implemented.

Since the product is used as a component in an overall machine or process, you must ensure the safety of persons by means of the design of this overall machine or process.

Operate the product only with the specified cables and accessories. Use only genuine accessories.

Any use other than the use explicitly permitted is prohibited and can result in hazards.

About the Book

Document Scope

This manual describes technical characteristics, installation, commissioning, operation and maintenance of the safety module XPSBAC.

Validity Note

The present document is valid for the products listed in the *Type Code*, page 14.

For product compliance and environmental information (RoHS, REACH, PEP, EOL, etc.), go to www.se.com/ww/en/work/support/green-premium/.

The characteristics that are described in the present document, as well as those described in the documents included in the *Related Documents* section below, can be found online. To access the information online, go to the Schneider Electric home page www.se.com/ww/en/download/.

The characteristics that are described in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

Related Documents

Title of documentation	Reference number
XPSBAC User Guide	EIO0000004248 (eng)
	EIO0000004250 (fre)
	EIO0000004249 (ger)
	EIO0000004251 (spa)
	EIO0000004252 (ita)
	EIO0000004253 (chi)
XPSBAC Instruction Sheet	NNZ32595 (eng, fre, ger, ita, spa, chi)
	NNZ32599 (eng, jpn, kor, por, rus, tur)

Product Related Information

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Where 24 Vdc or Vac is indicated, use PELV power supplies conforming to IEC 60204-1.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to this equipment.
- Use only the specified voltage when operating this equipment and any associated products.

Failure to follow these instructions will result in death or serious injury.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

⚠ DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines.¹
- Each implementation of this equipment must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

¹ For additional information, refer to NEMA ICS 1.1 (latest edition), "Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control" and to NEMA ICS 7.1 (latest edition), "Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems" or their equivalent governing your particular location.

⚠ WARNING

INSUFFICIENT AND/OR INEFFECTIVE SAFETY-RELATED FUNCTIONS

- Verify that a risk assessment as per ISO 12100 and/or other equivalent assessment has been performed before this product is used.
- Fully read and understand all pertinent manuals before performing any type of work on or with this product.
- Verify that modifications do not compromise or reduce the Safety Integrity Level (SIL), Performance Level (PL) and/or any other safety-related requirements and capabilities defined for your machine/process.
- After modifications of any type whatsoever, restart the machine/process and verify the correct operation and effectiveness of all functions by performing comprehensive tests for all operating states, the defined safe state, and all potential error situations.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Terminology Derived from Standards

The technical terms, terminology, symbols and the corresponding descriptions in this manual, or that appear in or on the products themselves, are generally derived from the terms or definitions of international standards.

In the area of functional safety systems, drives and general automation, this may include, but is not limited to, terms such as *safety*, *safety function*, *safe state*, *fault*, *fault reset*, *malfunction*, *failure*, *error*, *error message*, *dangerous*, etc.

Among others, these standards include:

Standard	Description
IEC 61131-2:2007	Programmable controllers, part 2: Equipment requirements and tests.
ISO 13849-1:2015	Safety of machinery: Safety related parts of control systems. General principles for design.
EN 61496-1:2013	Safety of machinery: Electro-sensitive protective equipment. Part 1: General requirements and tests.
ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
EN 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
ISO 14119:2013	Safety of machinery - Interlocking devices associated with guards - Principles for design and selection
ISO 13850:2015	Safety of machinery - Emergency stop - Principles for design
IEC 62061:2015	Safety of machinery - Functional safety of safety-related electrical, electronic, and electronic programmable control systems
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: General requirements.
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Requirements for electrical/electronic/programmable electronic safety-related systems.
IEC 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems: Software requirements.
IEC 61784-3:2016	Industrial communication networks - Profiles - Part 3: Functional safety fieldbuses - General rules and profile definitions.
2006/42/EC	Machinery Directive
2014/30/EU	Electromagnetic Compatibility Directive
2014/35/EU	Low Voltage Directive

In addition, terms used in the present document may tangentially be used as they are derived from other standards such as:

Standard	Description
IEC 60034 series	Rotating electrical machines
IEC 61800 series	Adjustable speed electrical power drive systems
IEC 61158 series	Digital data communications for measurement and control – Fieldbus for use in industrial control systems

Finally, the term *zone of operation* may be used in conjunction with the description of specific hazards, and is defined as it is for a *hazard zone* or *danger zone* in the *Machinery Directive (2006/42/EC)* and *ISO 12100:2010*.

NOTE: The aforementioned standards may or may not apply to the specific products cited in the present documentation. For more information concerning the individual standards applicable to the products described herein, see the characteristics tables for those product references.

Introduction

Device Overview

Outline

XPSBAC is a safety module for interruption of safety-related electrical circuits.

The safety module provides application functions used to monitor signals from different types of sensors/devices.

The safety-related function is implemented by interrupting the power supply to the safety module. The equipment that can be connected to the safety-related supply inputs of the safety module must be able to interrupt the power supply to the safety module. It includes, for example:

- Emergency Stop push-buttons, Emergency Stop rope pull switches, guard door switches and similar equipment with normally closed, normally open, or changeover outputs


The safety module is available in four different types: either spring terminals or screw terminals and either 24 Vac/Vdc supply voltage or 48 ... 240 Vac/Vdc supply voltage.

Feature summary:

- Multiple application functions
- Two safety-related supply inputs
- Four safety-related outputs consisting of two normally open (NO) relay contacts each
- One safety-related output consisting of two normally closed (NC) relay contacts, for connection in series or in parallel
- One non-safety-related start/restart input for selectable start/restart function

Front View and Side View

Front View and Side View

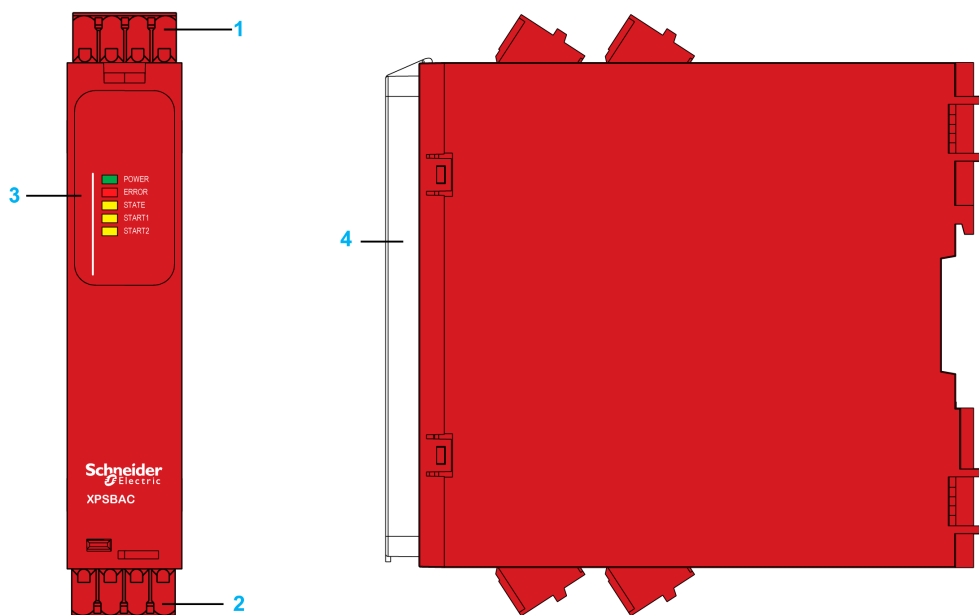

1	Removable terminal blocks, top
2	Removable terminal blocks, bottom
3	LED indicators
4	Sealable transparent cover

Nameplate

Nameplate

1 — **XPS.....**
Safety module

2 — Rated Voltage Un: ...
3 — Frequency range AC: ...
4 — Power consumption: ...

5 — AC-15: ...
6 — DC-13: ...

7 — $\Sigma I_{th} \leq$...
IEC 60947-5-1

8 — IEC 61508: ...
9 — ISO 13849-1: ...
10 — Response time: ...
See instruction sheet

11 — Surrounding air temperature: ...

12 — Degree of Protection: ...
Use minimum 75°C copper conductors only

13 — SN: ...
14 — PV: ... RL: ... SV: ...
15 — Made in Indonesia
.....W**

Schneider Electric Schneiderplatz 1
DE 97828 Marktheidenfeld

The nameplate contains the following data:

1	Device type (refer to chapter Type Code, page 14)
2	Nominal voltage
3	Frequency range Vac supply
4	Input power
5	Maximum current of safety-related outputs with utilization category AC15 (250 Vac)
6	Maximum current of safety-related outputs with utilization category DC13 (24 Vdc)
7	Maximum total thermal current
8	Maximum Safety Integrity Level (SIL) as per IEC 61508-1:2010
9	Maximum Performance Level and Category as per ISO 13849-1:2015
10	Maximum response time to request at safety-related supply input
11	Permissible ambient temperature range during operation
12	IP degree of protection
13	Serial number
14	Product version (PV), release (RL), software version (SV)
15	Plant code and date of manufacture (example: PP-2019-W10 means plant code PP, year of manufacture 2019, week of manufacture 10)

Type Code

Type Code

Item	1	2	3	4	5	6	7	8	9	10
Type code (example)	X	P	S	B	A	C	1	4	A	C

Item	Meaning
1 ... 4	Product range XPSB = Basic
5 ... 6	Product version AC
7	Supply voltage 1 = 24 Vac/Vdc 3 = 48 ... 240 Vac/Vdc
8 ... 9	Number of safety-related outputs 4A = 4 normally open relay contacts
10	Terminal type C = Spring terminals, removable P = Screw terminals, removable

If you have questions concerning the type code, contact your Schneider Electric service representative.

Technical Data

Environmental Conditions

Environmental Conditions For Storage

Environmental parameters:

Characteristic	Value
Ambient temperature	-40 ... 70 °C (-40 ... 158 °F)
Rate of change of temperature	1 °C/min (1.8 °F/min)
Ambient humidity	10 ... 100 % relative humidity

Mechanical conditions:

Characteristic	Value
Vibration, sinusoidal, displacement amplitude 2 ... 9 Hz	1.5 mm
Vibration, sinusoidal, acceleration amplitude 9 ... 200 Hz	5 m/s ²
Shock, shock response spectrum type L, peak acceleration	40 m/s ²

Environmental Conditions For Transportation

Environmental parameters:

Characteristic	Value
Ambient temperature	-25 ... 85 °C (-13 ... 185 °F)
Ambient humidity	5 ... 95 % relative humidity, no condensation

Mechanical conditions:

Characteristic	Value
Vibration, sinusoidal, displacement amplitude 2 ... 9 Hz	3.5 mm
Vibration, sinusoidal, acceleration amplitude 9 ... 200 Hz	10 m/s ²
Vibration, sinusoidal, acceleration amplitude 200 ... 500 Hz	15 m/s ²
Shock, shock response spectrum type I, peak acceleration	100 m/s ²
Shock, shock response spectrum type II, peak acceleration	300 m/s ²

Environmental Conditions For Operation

Characteristic	Value
Maximum installation altitude above mean sea level	2000 m (6562 ft)
Installation required in control cabinet/enclosure with degree of protection	IP54

Environmental parameters:


Characteristic	Value
Ambient temperature	-25 ... 55 °C (-13 ... 131 °F), no icing NOTE: Refer to Safety-Related Outputs, page 20 for derating information.
Rate of change of temperature	0.5 °C/min (0.9 °F/min)
Ambient humidity	5 ... 95 % relative humidity, no condensation

Mechanical conditions:

Characteristic	Value
Vibration, sinusoidal, displacement amplitude 2 ... 9 Hz	3 mm
Vibration, sinusoidal, acceleration amplitude 9 ... 200 Hz	10 m/s ²
Shock, shock pulse shape: half-sine, peak acceleration	150 m/s ²

Mechanical Characteristics

Dimensions

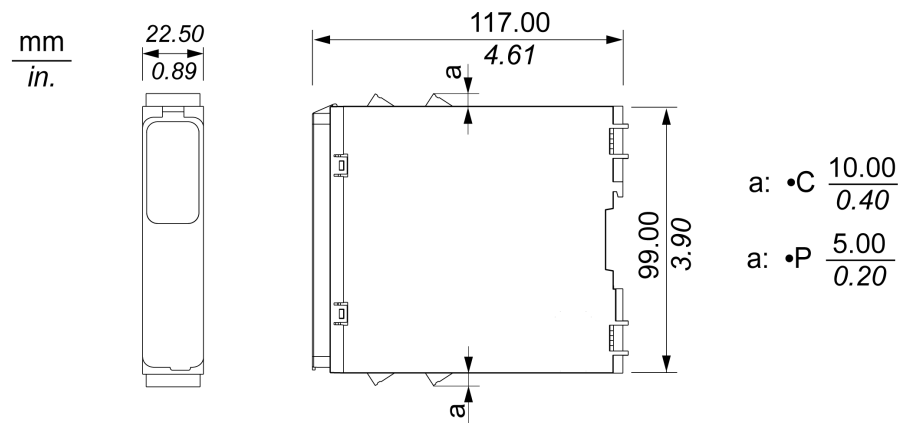

Characteristic	Value	
	XPSBAC...C	XPSBAC...P
Width	22.5 mm (0.89 in)	
Height without terminals	99 mm (3.90 in)	
Height with terminals	119 mm (4.70 in)	109 mm (4.30 in)
Depth	117 mm (4.61 in)	

Weight

Characteristic	Value
Weight	0.2 kg (0.44 lbs)

Degree Of Protection

Characteristic	Value
Housing	IP40
Terminals	IP20

Wire Cross Sections, Stripping Lengths, and Tightening Torques

Spring terminals

Characteristic	Value
Stripping length	12 mm (0.47 in)
Wire cross section, single wire (solid or stranded) without wire ferrule	0.2 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, single wire (stranded) with insulated or uninsulated wire ferrule	0.25 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, two wires (stranded) with insulated twin wire ferrule	0.5 ... 1.0 mm ² (AWG 20 ... 18)

Screw terminals

Characteristic	Value
Stripping length	7 ... 8 mm (0.28 ... 0.31 in)
Tightening torque	0.5 Nm (4.4 lb-in)
Wire cross section, single wire (solid or stranded) without wire ferrule	0.2 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, single wire (stranded) with insulated or uninsulated wire ferrule	0.25 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, two wires (solid or stranded) without wire ferrule	0.2 ... 1.5 mm ² (AWG 24 ... 16)
Wire cross section, two wires (stranded) with uninsulated wire ferrules	0.25 ... 0.75 mm ² (AWG 24 ... 20)
Wire cross section, two wires (stranded) with insulated twin wire ferrule	0.5 ... 1.5 mm ² (AWG 20 ... 16)

Electrical Characteristics

Safety-Related Supply Input

The safety module implements the safety-related function by interrupting the power supply via the terminals A1 and A2.

Characteristic	Value	
	XPSBAC1...	XPSBAC3...
Supply voltage AC	24 Vac (-15 ... 10 %)	48 ... 240 Vac (-10 ... 10 %)
Supply voltage DC	24 Vdc (-20 ... 20 %)	48 ... 240 Vdc (-10 ... 10 %)
Nominal input power AC	3.5 VA (24 Vac)	6 VA (240 Vac)
Nominal input power DC	1.5 W (24 Vdc)	2 W (48 Vdc)
Frequency range AC	50 ... 60 Hz	
Overvoltage category	II	
Pollution degree	2	
Rated insulation voltage (isolation) as per IEC 60947-5-1	300 V	
Impulse withstand voltage	4 kV	

Electromagnetic Compatibility (EMC)

Characteristic	Value	
	XPSBAC1...	XPSBAC3...
Conducted and radiated emissions as per IEC CISPR 11	Group 1/class B	Group 1/class A
Usage in environment as per IEC/UL 60947-1	Environment B	Environment A

Start/Restart Input

Characteristic	Value
Output voltage at Y1	>15 Vdc
Input voltage at Y2, Y3	0 ... 24 Vdc (+20 %)
Switching voltage to activate Y2, Y3	>15 Vdc
Switching voltage to deactivate Y2, Y3	<5 Vdc
Input current	5 mA
Maximum wire resistance	500 Ω

Classification of Start/Restart Input as per ZVEI CB24I


Representation and values as per identifying key, ZVEI CB24I:

Source/sink	Interface type	Additional measure	Source/sink	Interface type
Sink	A	M	Source	C0

Interface type A: Sink		
Parameter	Minimum value	Maximum value
Input current I _i (in the ON state)	3 mA	5 mA
Output voltage U _i	15 V	24 V (+20 %)
Additional measure M	The inputs are not types as per IEC 61131-2. TG is Y1 for Y2	>15 Vdc

Refer to the chapter [Dynamization](#), page 29 for test pulse times.

Safety-Related Outputs

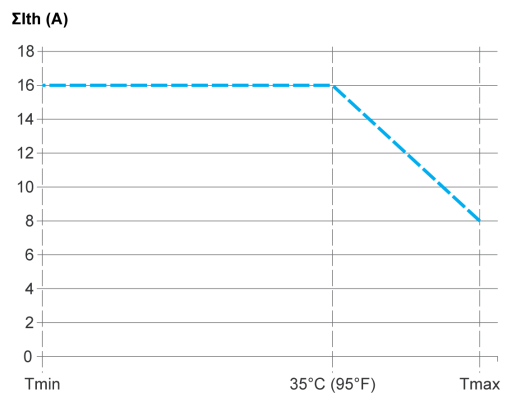Characteristic	Value
Number of safety-related outputs, consisting of two normally open relay contacts each	4
Number of safety-related outputs, consisting of two normally closed relay contacts each	1
Maximum short circuit current I _K	1 kA
Maximum continuous current, normally open relay contacts	6 A
Maximum continuous current, normally closed relay contacts	3 A
Maximum total thermal current ΣI_{th} in free air up to 55°C (131°F) and for side-by-side mounting up to 35°C (95°F)	16 A
Maximum total thermal current ΣI_{th} for side-by-side mounting at 55°C (131°F)	8 A Derating curve (derating starting at 35 °C (95 °F)): 
Minimum load	10 mA / 5 V
Utilization category as per UL 60947-5-1	B300 and R300 for normally open contacts D300 and R300 for normally closed contacts
Utilization category as per IEC 60947-4-1 and IEC 60947-5-1)	AC1: 250 V AC15: 250 V DC1: 24 V DC13: 24 V
Maximum current, normally open relay contacts	AC1: 5 A AC15: 3 A DC1: 5 A DC13: 3 A

Characteristic	Value
Maximum current, normally closed relay contacts	DC1: 3 A DC13: 1 A AC1: 3 A AC15: 1 A
External fusing	10 A, category gG, for normally open relay contact 4 A, category gG, for normally closed relay contact

Timing Data

Maximum Response Times

Characteristic	Value	
	XPSBAC1...	XPSBAC3...
Maximum response time to request at safety-related supply input, and after power outage AC	150 ms	60 ms
Maximum response time to request at safety-related supply input, and after power outage DC	80 ms	60 ms

Switch-On and Activation Delays

Characteristic	Value
Switch on delay after power on and automatic start/restart	1500 ms
Delay after valid start/restart condition	100 ms

Monitored Start/Restart

Characteristic	Value
Waiting time after power on via safety-related supply input and beginning of monitored start	1500 ms
Minimum duration of start/restart pulse for monitored start/restart	80 ms

Dynamization of Start/Restart Input





Characteristic	Value
Test pulse duration (input must be activated for longer than duration of test pulse)	2 ms
Test pulse interval	500 ms
Maximum delay of test pulse	40 ms

Data Functional Safety

Data Functional Safety

Characteristic	Value	
	XPSBAC1...	XPSBAC3...
Defined safe state	Safety-related outputs are de-energized Normally open relay contacts: open Normally closed relay contacts: closed	
Maximum Performance Level (PL), Category (as per ISO 13849-1:2015)	Normally open relay contacts: PL e, Category 4 Normally closed relay contacts: PL c, Category 1 Actual PL and category depend on application.	
Maximum Safety Integrity Level (SIL) (as per IEC 61508-1:2010)	Normally open relay contacts: 3 Normally closed relay contacts: 1 Actual SIL depends on application.	
Safety Integrity Level Claim Limit (SILCL) (as per IEC 62061:2005+AMD1:2012+AMD2:2015)	Normally open relay contacts: 3 Normally closed relay contacts: 1 Actual SILCL depends on application.	
Type (as per IEC 61508-2)	B	
Hardware Fault Tolerance (HFT) (as per IEC 61508 and IEC 62061)	1	
Stop Category for Emergency Stops (as per ISO 13850 and IEC 60204-1)	0	
Lifetime in years at an ambient temperature of 55 °C (131 °F)	20	
Safe Failure Fraction (SFF) (as per IEC 61508 and IEC 62061)	>99 %	
Probability of Dangerous Failure per hour (PFHD) in 1/h (as per IEC 61508 and ISO 13849-1)	0.95 x 10 ⁻⁹	1.01 x 10 ⁻⁹
Mean Time To Dangerous Failure (MTTFd) in years (high as per ISO 13849-1)	>30	
Average Diagnostic Coverage (DC _{avg}) (high as per ISO 13849-1)	≥99 %	
Demand mode of operation (as per IEC-61508-1, IEC-62061)	High/continuous	
Maximum number of cycles over lifetime	DC13, 24 Vdc 1 A: 1200000 DC13, 24 Vdc 3 A: 275000 AC1, 250 Vac 4 A: 90000 AC15, 250 Vac 1 A: 90000 AC15, 250 Vac 3 A: 70000	

Electrical durability of the safety-related output relay contacts as per IEC 60947-5-1

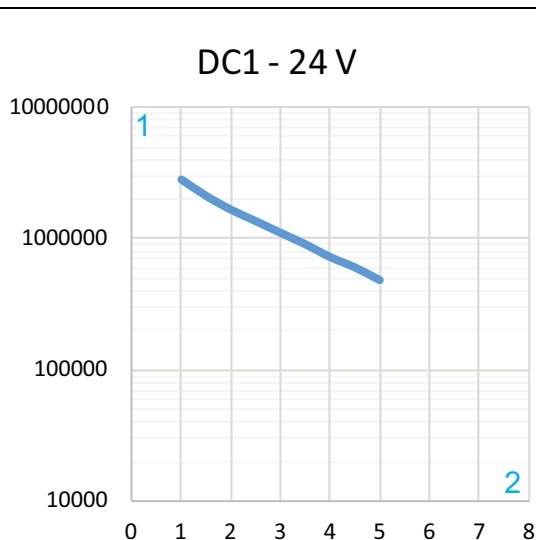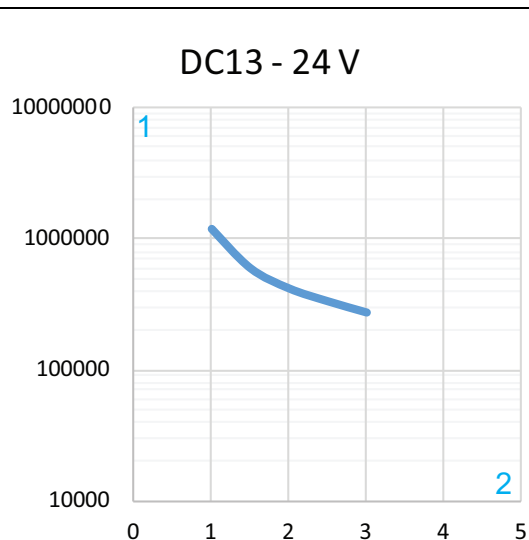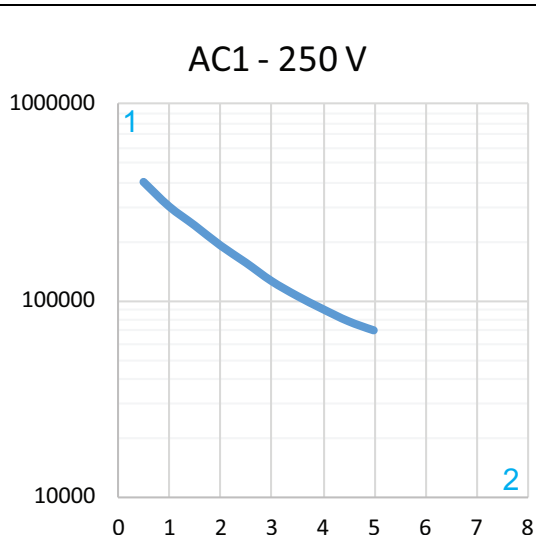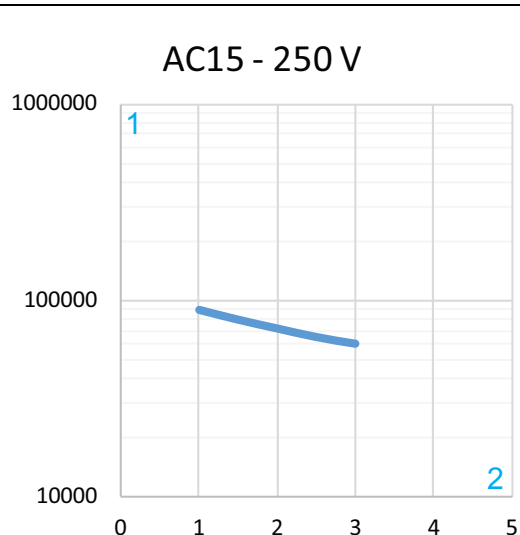

1 Operating cycles

2 Rated current in A

Refer to chapter [Timing Data](#), page 22 for additional technical data that may affect your functional safety calculations.

Engineering

Electromagnetic Compatibility (EMC)

Conducted and Radiated Electromagnetic Emissions

Equipment of class A as per IEC CISPR 11 is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.

⚠ WARNING

INSUFFICIENT ELECTROMAGNETIC COMPATIBILITY

- Verify compliance with all EMC regulations and requirements applicable in the country in which the device is to be operated and with all EMC regulations and requirements applicable at the installation site.
- Do not install and operate devices of class A as per IEC CISPR 11 in residential environments.
- Implement all required radio interference suppression measures and verify their effectiveness.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

According to IEC CISPR 11, the safety module of type XPSBAC1... is a group 1, class B device. Class B as per IEC CISPR 11 corresponds to environment B as per IEC 60947-1.

According to IEC CISPR 11, the safety module of type XPSBAC3... is a group 1, class A device. Class A as per IEC CISPR 11 corresponds to environment A as per IEC 60947-1.

Principles of Operation

Introduction

The following sections provide information on the principles of operation of the safety module to assist you in engineering your application function.


General Information on Activation and Deactivation of Safety-Related Supply Inputs and Safety-Related Outputs

In the present document, “activation” of a safety-related supply input means that a safety-related supply input changes its state so that the safety module can enter the operating state Run: Outputs Energized. As a result, the safety-related outputs are “activated” (energized). In this condition, the safety module is not in the defined safe state.

The term “deactivation” of a safety-related supply input means that a safety-related supply input changes its state so that the safety module enters the operating state Run: Outputs Deenergized. As a result, the safety-related outputs are “deactivated” (deenergized). In this condition, the safety module is in the defined safe state.

Operating States

The following graphic illustrates the operating states and state transitions of the safety module:

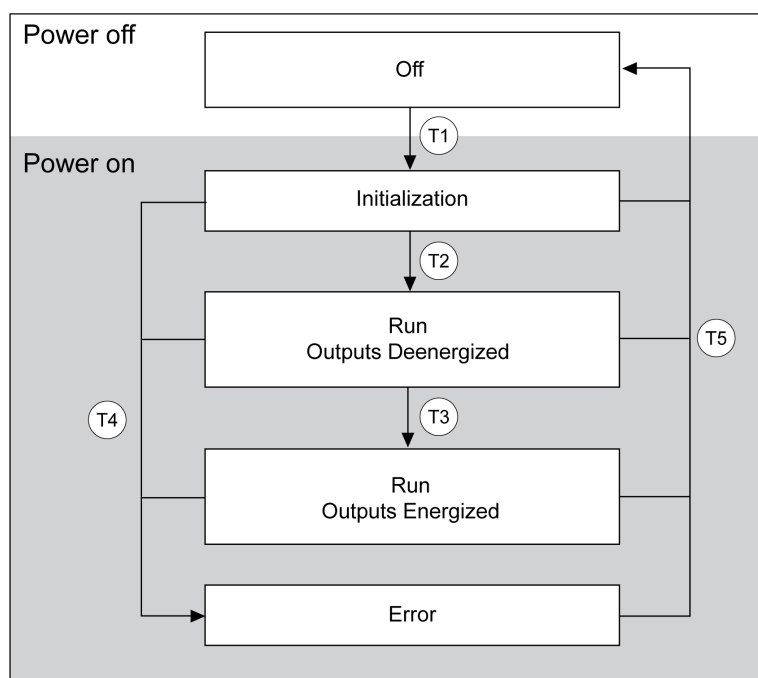

Operating state	Description	In defined safe state
Off	-	Yes
Initialization	Self-tests	Yes
Run: Outputs Deenergized	Regular operation with safety-related function active	Yes
Run: Outputs Energized	Regular operation with safety-related function not active	No
Error	Error detected	Yes

NOTE: Refer to the chapter Data Functional Safety, page 23 for the defined safe state of the safety module.

State Transitions

State transition	Condition
T1	Power on
T2	Initialization successful
T3	- Start/restart condition fulfilled (for example, automatic start/restart or manual start/restart with start/restart pushbutton pressed) - Safety-related supply inputs activated
T4	Error detected
T5	Power off

NOTE: Refer to the chapter [General Information on Activation and Deactivation of Safety-Related Supply Inputs and Safety-Related Outputs](#), page 26 for details on the use of the terms “activated” and “deactivated” in the present document.


Example with Emergency Stop

The following example uses a machine with an Emergency Stop pushbutton, a start/restart pushbutton for manual start/restart, and a motor to demonstrate the individual operating states and state transitions. The selected application function is [Emergency Stop](#), page 36. The selected start/restart function is [Manual Start/Restart](#), page 38.

- After power is supplied to the safety-related supply input (Emergency Stop pushbutton not engaged), the safety module enters the operating state Initialization (T1).
- If the initialization is successful, the safety module enters the operating state Run: Outputs Deenergized (T2).
If an error is detected, the safety module transitions to the operating state Error (T4).
- If the start/restart pushbutton is not engaged, the safety module remains in the operating state Run: Outputs Deenergized. The motor is at a standstill.
Detailed information on the start/restart functions and the timing can be found in the chapter [Start/Restart Functions](#), page 38.
- If the start/restart pushbutton is pressed, the start/restart input is activated, that is, the start/restart condition is fulfilled and the safety module transitions to the operating state Run: Outputs Energized. This operating state corresponds to regular operation of the machine.
- If the Emergency Stop pushbutton is engaged (power supply to the safety-related supply input removed), the safety-related output is deactivated within the response time (transition T5 to operating state Power off). The safety module is in the defined safe state. The motor is stopped.
This corresponds to the Emergency Stop condition of the machine.
- To return to the operating state Run: Outputs Energized, power needs to be supplied to the safety-related supply input (Emergency Stop pushbutton rearmed (pulled out)) and the start/restart input needs to be activated again (start/restart pushbutton pressed).

Timing Diagram for Example with Emergency Stop

The following timing diagram provides an overview of the example with Emergency Stop.

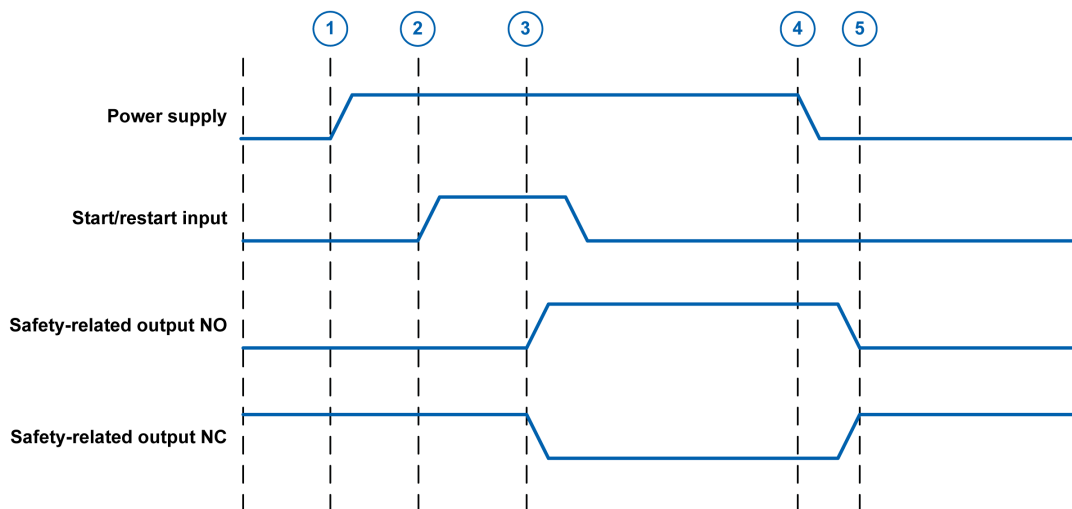

Legend

Item	Description
1	- Power is applied to the safety-related supply input (Emergency Stop pushbutton not engaged). - The start/restart pushbutton has not yet been pressed so the start/restart condition is not fulfilled and the safety module remains in the defined safe state.
2	- The start/restart pushbutton is pressed. - The start/restart condition is fulfilled. Refer to the chapter Start /Restart Functions, page 38 for detailed information on the start/restart functions.
3	- The safety-related output is activated within the activation delay time, page 22. - The motor runs. The safety module is not in the defined safe state.
4	The power supply to the safety-related power supply input is removed (Emergency Stop pushbutton engaged).
5	- The safety-related output is deactivated within the response time, page 22. - The Emergency Stop is active. The safety module is in the defined safe state.

Dynamization


Dynamization of Inputs

Dynamization is used for cross circuit detection between the start/restart input to an external power supply unit or to ground. Dynamization is implemented by means of periodically generated test pulses at Y1 of the start/restart input.

Whether dynamization of the start/restart input is used depends on the start/restart function configured by wiring of the [start/restart input](#), page 35.

Dynamization is only used if terminals Y1 and Y2 are wired.

The following diagram illustrates the dynamization principle and timing of channels Y1 and Y2 of the start/restart input:

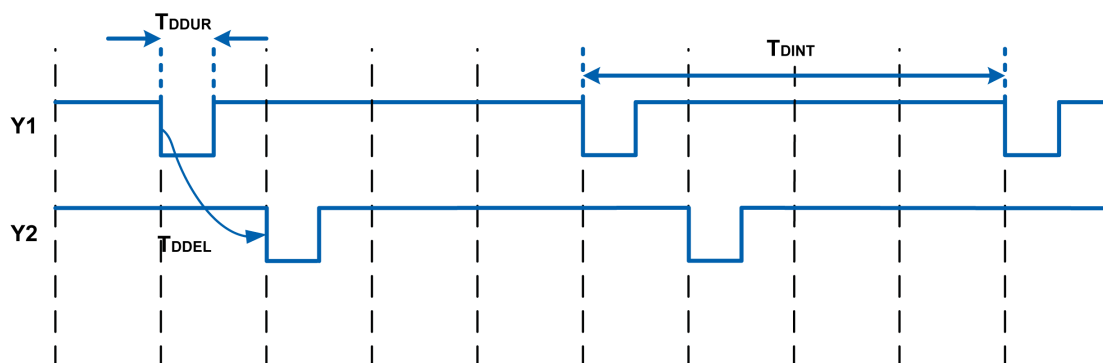

Designation	Value	Explanation
T_{DDUR}	2 ms	Duration of the test pulse. The duration of the test pulse is the time between the start of the test pulse and the end of the test pulse.
T_{DINT}	500 ms	Interval between test pulses. This interval is the time between the start of a test pulse and the start of the next test pulse.
T_{DDEL}	40 ms	Maximum delay of test pulse. This delay is the maximum time between the start of the test pulse at the control output and the associated input channel, that is, the maximum time during which the input expects to "see" dynamization.

Installation

Prerequisites and Requirements

Inspecting the Device

Damaged products may cause electric shock or unintended equipment operation.

DANGER

ELECTRIC SHOCK OR UNINTENDED EQUIPMENT OPERATION

- Do not use damaged products.
- Keep foreign objects (such as chips, screws or wire clippings) from getting into the product.

Failure to follow these instructions will result in death or serious injury.

Verify the product type by means of the type code, page 14 and the data printed on the device.

Control Cabinet/Enclosure

Install the safety module in a control cabinet or enclosure with degree of protection IP54 that is secured by a keyed or tooled locking mechanism.


The ventilation of the control cabinet/enclosure must be sufficient to comply with the specified ambient conditions for the safety module and the other components operated in the control cabinet/enclosure.

Mechanical Installation

Mounting to DIN Rail

The safety module can be mounted to the following DIN rails as per IEC 60715:

- 35 x 15 mm (1.38 x 0.59 in)
- 35 x 7.5 mm (1.38 x 0.29 in)

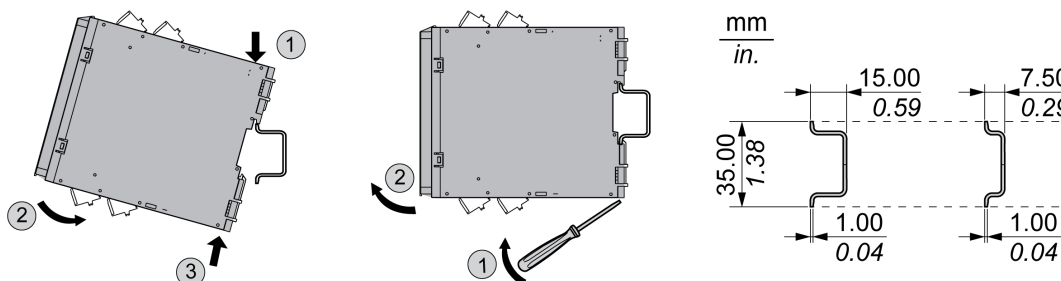


Mounting procedure (left illustration)

Step	Action
1	Slightly tilt the safety module and hook it onto the DIN rail.
2	Push the lower part of the safety module towards the DIN rail.
3	Snap in the DIN rail clip.

Dismounting procedure (center illustration)

Step	Action
1	Unlock the DIN rail clip using a screwdriver.
2	Pull the lower part of the safety module away from the DIN rail and lift the safety module towards the top to remove it from the DIN rail.

Screw-Mounting

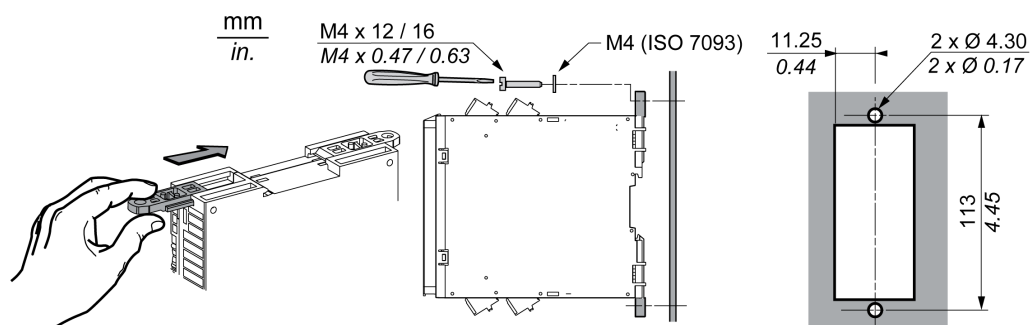

Mounting procedure:

Step	Action
1	Push the additional fastener into the grooves at the safety module.
2	Prepare the holes.
3	Screw the safety module to the mounting surface using the specified screws and a washer M4 as per ISO 7093 for each screw.

Electrical Installation

General Information

⚠ DANGER

FIRE, ELECTRIC SHOCK OR ARC FLASH

- Disconnect all power from all equipment of your machine/process prior to electrical installation of the device.
- Confirm the absence of power using a properly rated voltage sensing device.
- Place a "Do Not Turn On" or equivalent hazard label on all power switches and lock them in the non-energized position.

Failure to follow these instructions will result in death or serious injury.

Wiring of the safety module depends on the safety-related function to be implemented. Before wiring the safety module, engineer the safety-related function, perform a risk assessment with regard to your machine/process, and determine the suitability of the safety module as well as the connected equipment.

Refer to the Schneider Electric Safety Chain Solutions at <https://www.se.com> for examples of safety-related applications.

You can wire the safety module with the terminal blocks inserted, or you can remove the terminal blocks. For the latter, pull the terminal blocks out of the safety module, connect the individual terminals and push the terminal blocks back into the safety module.

Use 75 °C (167 °F) copper conductors to wire the safety module.

Wire Cross Sections, Stripping Lengths, and Tightening Torques

Spring terminals

Characteristic	Value
Stripping length	12 mm (0.47 in)
Wire cross section, single wire (solid or stranded) without wire ferrule	0.2 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, single wire (stranded) with insulated or uninsulated wire ferrule	0.25 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, two wires (stranded) with insulated twin wire ferrule	0.5 ... 1.0 mm ² (AWG 20 ... 18)

Screw terminals

Characteristic	Value
Stripping length	7 ... 8 mm (0.28 ... 0.31 in)
Tightening torque	0.5 Nm (4.4 lb-in)
Wire cross section, single wire (solid or stranded) without wire ferrule	0.2 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, single wire (stranded) with insulated or uninsulated wire ferrule	0.25 ... 2.5 mm ² (AWG 24 ... 12)
Wire cross section, two wires (solid or stranded) without wire ferrule	0.2 ... 1.5 mm ² (AWG 24 ... 16)
Wire cross section, two wires (stranded) with uninsulated wire ferrules	0.25 ... 0.75 mm ² (AWG 24 ... 20)
Wire cross section, two wires (stranded) with insulated twin wire ferrule	0.5 ... 1.5 mm ² (AWG 20 ... 16)

Block Diagram and Terminals

The following drawings present the block diagram and the terminals with their designations in the removable terminal blocks.



The spring clamp terminals are designed for the connection of only a single wire if you do not use wire ferrules. A maximum of two wires may be connected to a spring clamp terminal if the wires are installed with a twin wire ferrule.

⚠️ DANGER

LOOSE WIRING CAUSES ELECTRIC SHOCK

Do not connect more than one wire to a spring clamp terminal unless you use an approved twin wire ferrule and make the connection according to the specifications provided in the present document.

Failure to follow these instructions will result in death or serious injury.

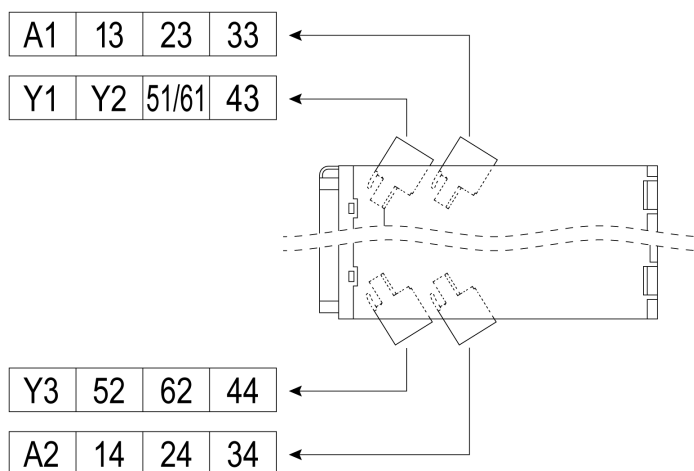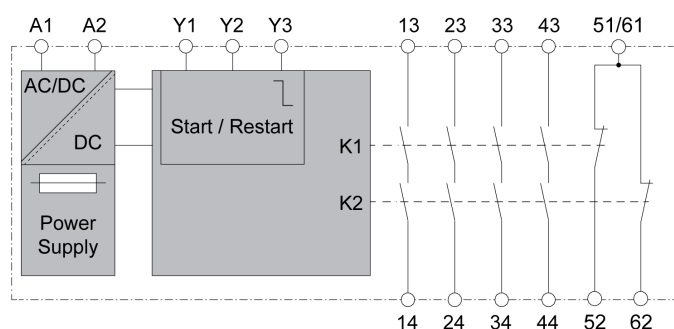

Terminal Designation	Explanation
A1, A2	Power supply
Y1	Control output of Start/Restart input
Y2	Input channel for automatic/manual start/restart
Y3	Input channel for monitored start/restart with falling edge
13, 14, 23, 24, 33, 34, 43, 44, 51/61, 52, 62	Terminals of the safety-related outputs

Safety-Related Supply Input and Power Supply

⚠ WARNING

INSUFFICIENT AND/OR INEFFECTIVE SAFETY-RELATED FUNCTIONS

Only connect a sensor/device to a safety-related input that meets all requirements as per your risk assessment and that complies with all regulations, standards, and process definitions applicable to your machine/ process.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The safety module implements the safety-related function by interrupting the power supply via the terminals A1 and A2.

Connect the terminals A1 and A2 to a power supply providing the supply voltage specified for the safety module in the chapter [Electrical Characteristics](#), page 19. Connect the sensor/input device in such a way that it can interrupt the power supply to the two terminals A1 and A2 of the safety-related supply input. Refer to the chapter [Application Functions](#), page 36 for additional wiring information.


Safety-Related Outputs

The wiring of the safety-related outputs depends on the safety-related function to be implemented.

Install fuses with the rating specified in the chapter [Electrical Characteristics](#), page 20.


The two normally closed relay contacts (terminals 51/61, 52, 62) can be connected in series or in parallel.

For connection in parallel, bridge terminals 52 and 62. Connect the supply of your connected equipment to terminal 51/61 and the output to one of the bridged terminals 52 or 62 as shown in the following figure:

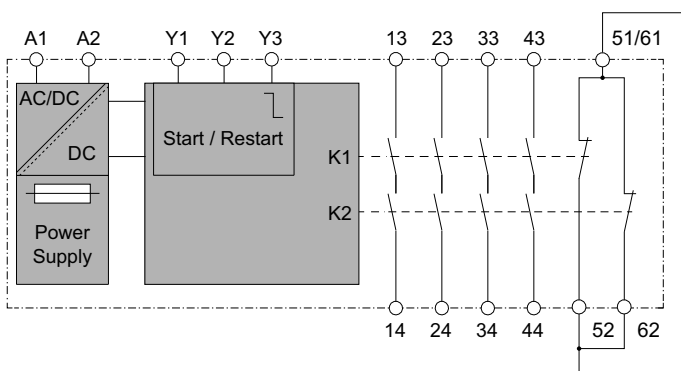

A connection in parallel can be used, for example, for controlling an actuator.

For connection in series, leave terminal 51/61 unconnected. Connect the supply of your connected equipment to terminal 52 and the output to terminal 62 or vice versa as shown in the following figure:

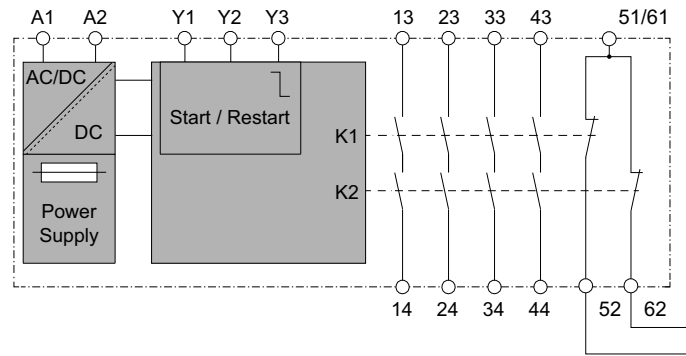

A connection in series can be used, for example, to implement a non-safety-related diagnostics function that provides feedback to other equipment while the safety-related function uses one or several of the normally open relay contacts.

Start/Restart Input

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION

- Do not use the Start/Restart function for safety-related purposes.
- Use Monitored Start/Restart if unintended restart is a hazard according to your risk assessment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The start/restart input consists of one control output (terminal Y1) and two input channels (terminals Y2 and Y3).

The control output provides a nominal voltage of 24 Vdc to the connected sensor/device. It is also used for [dynamization](#), [page 29](#).

The wiring of the start/restart input depends on the [start/restart function](#), [page 38](#) to be implemented.

Automatic start/restart:

- Bridge terminals Y1 and Y2 and leave terminal Y3 unconnected

Manual start/restart:

- Connect terminals Y1 and Y2 to the device providing the start/restart signal, such as a push-button. Leave terminal Y3 unconnected.

Monitored start/restart and if the control output Y1 is to be used:

- Connect terminals Y1 and Y3 to the device providing the start/restart signal, such as a push-button. Leave terminal Y2 unconnected.

Monitored start/restart and if the control output Y1 is not to be used (XPSBAC1... only):

- Connect terminal Y3 to the device providing the start/restart signal, such as a logic controller. Leave terminals Y1 and Y2 unconnected. In this case, terminal A2 is the common reference potential for terminal Y3.

Respect the maximum wire resistance of 500 Ω when determining the cable length. The maximum wire length between the start/restart input and a sensor/device is 30 m (98.43 ft) if the supply via the control output (terminal Y1) of the start/restart input is not used.

Functions

Application Functions

Introduction

The following sections provide an overview of the available application functions and a detailed listing of requirements and values as well as the wiring of the safety-related inputs for each of the application functions.


Overview of Application Functions

Typical applications	Type of outputs of sensor/device providing the input signal for application function
 Monitoring of Emergency Stop circuits as per ISO 13850 and IEC 60204-1, stop category 0 Details, page 36	Normally open, normally closed and/or changeover outputs
 Monitoring of guards as per ISO 14119/14120 with electrical switches Details, page 37	

Application Function Emergency Stop

Characteristic	Value/Description
Typical applications	 Monitoring of Emergency Stop circuits as per ISO 13850 and IEC 60204-1, stop category 0
Type of outputs of sensor/device providing the input signal for application function	Normally open, normally closed and/or changeover outputs

Wiring of the safety-related supply inputs for Emergency Stop, with 24 Vdc supply:

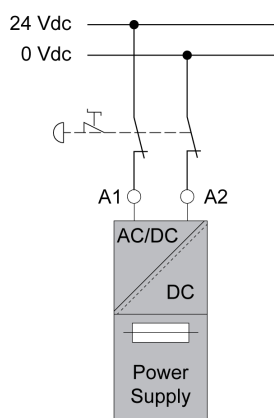


Use the same wiring logic for 24 Vac and 48 - 240 Vac/Vdc supply.

Application Function Guards

Characteristic	Value/Description
Typical applications	 Monitoring of guards as per ISO 14119/14120 with electrical switches
Type of outputs of sensor/device providing the input signal for application function	Normally open, normally closed and/or changeover outputs

Wiring of the safety-related supply inputs for guards, with 24 Vdc supply:

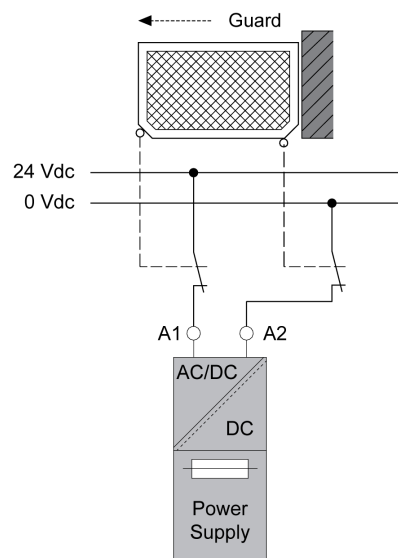

Use the same wiring logic for 24 Vac and 48 - 240 Vac/Vdc supply.

Start/Restart Functions

Overview

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION

- Do not use the Start/Restart function for safety-related purposes.
- Use Monitored Start/Restart if unintended restart is a hazard according to your risk assessment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The safety module provides several start/restart functions which are selected by means of the wiring. The start/restart function determines the start/restart behavior of the safety module after power-on and the transition from the operating state Run: Outputs Deenergized (defined safe state) to the operating state Run: Outputs Energized.

The start /restart behavior is configured using the following characteristics:


- Automatic start/restart
- Manual start/restart
- Monitored start/restart with falling edge

Refer to the chapter [Electrical Installation](#), page 35 for additional information on wiring the start/restart input.

Automatic Start/Restart

With automatic start/restart, the start/restart input is permanently active.

The following timing diagram illustrates the automatic start/restart:

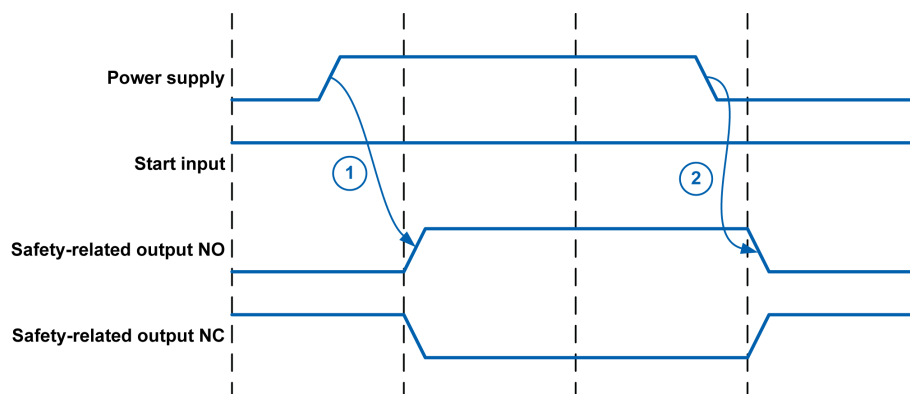


1 Activation delay (1500 ms): maximum time between activation of safety-related supply input and activation of safety-related output

2 Response time (150 ms): maximum time between deactivation of safety-related supply input (power to the safety-module removed) and deactivation of safety-related output

Manual Start/Restart

A manual start/restart requires the start/restart input to be activated. The safety-related output is activated after the start/restart input has been activated.

The following timing diagram illustrates the manual start/restart:

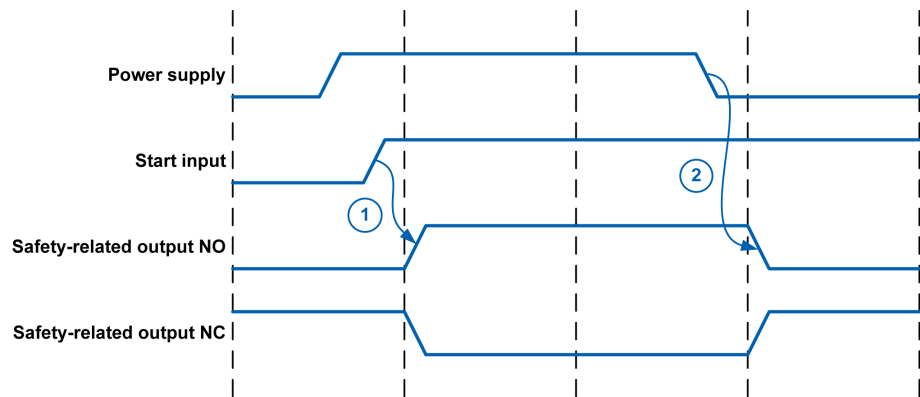


1 Activation delay (100 ms): maximum time between activation of start/restart input and activation of safety-related output

2 Response time (150 ms): maximum time between deactivation of safety-related supply input and deactivation of safety-related output

The signal required for activation of the start/restart input can be provided, for example, via a push-button.

Monitored Start/Restart with Falling Edge

In the case of a monitored start/restart with falling edge, the start input must be activated and remain active for a duration of 80 ms. The safety-related outputs are activated with a falling edge of the start/restart input.

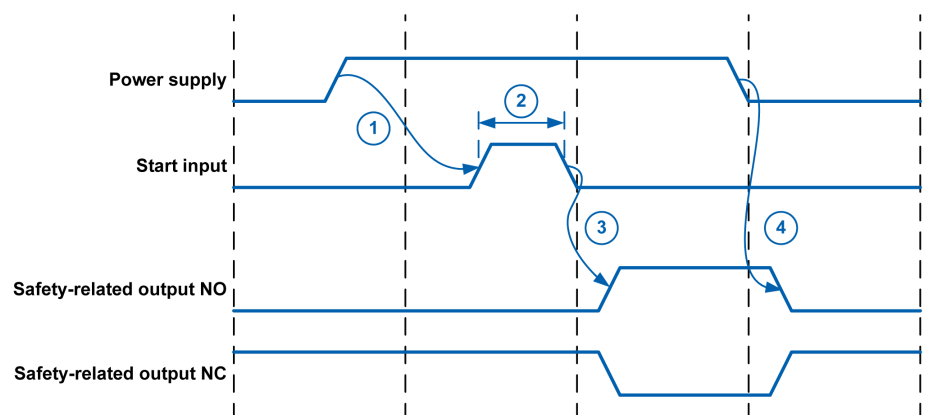

1 Waiting time after power-on (1500 ms): time that must pass between power-on and activation of the start/restart input

2 Minimum duration of start/restart pulse (80 ms): time for which the start/restart input must be activated before the falling edge at the start/restart input

3 Activation delay (100 ms): maximum time between deactivation of start/restart input and activation of safety-related output

4 Response time (150 ms): maximum time between deactivation of safety-related supply input and deactivation of safety-related output

The signal required for activation of the start/restart input can be provided, for example, via a push-button connected to Y1 or an external 24 Vdc supply, or a logic controller.

Configuration and Commissioning

Configuration

Overview

The configuration is determined by the type of wiring of the start function and the application function. Additional configuration is not required.

Go through the [commissioning procedure](#), page 41 after having modified the configuration by modifying the wiring.

Commissioning

Overview

⚠ WARNING

INEFFECTIVE SAFETY-RELATED FUNCTION AND/OR UNINTENDED EQUIPMENT OPERATION

- Commission the device before it is used for the first time and after each configuration.
- Commission or recommission the machine/process pursuant to all regulations, standards, and process definitions applicable to your machine/process.
- Only start the machine/process if there are no persons or obstructions in the zone of operation.
- Verify correct operation and effectiveness of all functions by performing comprehensive tests for all operating states, the defined safe state, and all potential error situations.
- Document all modifications and the results of the commissioning procedure in compliance with all regulations, standards, and process definitions applicable to your machine/process.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Commissioning Procedure

Step	Action
1	Verify correct mechanical and electrical installation, page 30 according to the intended application.
2	Verify that there are no persons or obstructions in the zone of operation.
3	Apply power and start the machine/process.
4	Perform comprehensive tests for all operating states, the defined safe state, and all potential error situations.
5	Close the transparent cover of the safety module.
6	Document all modifications and the results of the commissioning procedure.

Diagnostics

Diagnostics via LED

Overview

The safety module features various LEDs, page 12 that provide status information and information on detected errors.

Recommission the safety module if, during troubleshooting, you modify the wiring.

POWER

State	Meaning
Off	No power supply
On	Power supply on

STATE

This LED provides information on the state of the safety-related outputs.

State	Meaning
Off	Safety-related outputs deactivated
On	Safety-related outputs activated

START1 and START2

These LEDs provide information on the start/restart condition and the type of start/restart. Refer to the chapter *Start/Restart Function*, page 38 for detailed information on the conditions and timing of the selected start/restart function.

State ⁽¹⁾	Meaning		
Off	Start/restart condition not fulfilled		
On	Start/restart condition fulfilled		
Flashing	Waiting for start/restart condition to be fulfilled		
<table border="1"> <tr> <td>(1)</td><td>LED START1 = Safety module is wired for manual/automatic start/restart. LED START2 = Safety module is wired for monitored start/restart.</td></tr> </table>		(1)	LED START1 = Safety module is wired for manual/automatic start/restart. LED START2 = Safety module is wired for monitored start/restart.
(1)	LED START1 = Safety module is wired for manual/automatic start/restart. LED START2 = Safety module is wired for monitored start/restart.		

ERROR - Detected Errors

This LED illuminates in conjunction with additional LEDs to indicate detected errors. In the case of a detected error, the safety module transitions to the defined safe state. Remove the cause of the detected error and perform a power cycle of the safety module to be able to exit the defined safe state and resume operation. Contact your Schneider Electric service representative if the condition persists.

State	In conjunction with additional LEDs		Meaning	Remedy
	Additional LEDs	State of additional LEDs		
On	STATE, START1 and START2	Flashing synchronously	General error detected.	Verify correct wiring.
On	POWER	Flashing	Power supply error detected.	Verify correct wiring.

State	In conjunction with additional LEDs		Meaning	Remedy
	Additional LEDs	State of additional LEDs		
				• Use a suitable power supply.
On	START1	Flashing	Cross circuit detected at start/restart input.	• Verify correct wiring.
On	START1 and START2	Flashing synchronously	Safety module wired for both start/restart functions automatic/manual and monitored.	• Wire the safety module for either automatic/manual start/restart or for monitored start/restart.
On	STATE	Flashing	Error detected at safety-related output.	• Perform a power cycle.

Accessories, Service, Maintenance, and Disposal

Accessories

Accessories

The following accessories are available for the safety module:

Description	Commercial Reference
Coding bits The coding bits are used if the terminal blocks are removed to help ensure correct insertion of the terminal blocks into the safety module. 30 pieces per packaging unit	XPSEC
Sealing strips The uniquely numbered sealing strips are used to seal the transparent front cover of the safety module to help prevent unauthorized access to the configuration selectors. 10 pieces per packaging unit	XPSES

Maintenance

Service and Repairs

The safety module contains no user-serviceable parts. Do not attempt to open, service, or repair the safety module.

Maintenance Plan

Maintenance plan:

- Ensure that a safety-related function implemented with the safety module is triggered at the minimum intervals required by the regulations, standards, and process definitions applicable to your machine/process.
- Inspect the wiring at regular intervals.
- Tighten the threaded connections at regular intervals.
- Verify that the safety module is not used beyond the specified lifetime, page 23.

To determine the end of the lifetime, add the specified lifetime to the date of manufacture indicated on the nameplate, page 13 of the safety module.

Example: If the date of manufacture indicated on the nameplate is 2019-W10, do not use the safety module after week 10, 2039.

As a machine designer or system integrator, include this information in the maintenance plan for your customer.

Transportation, Storage, and Disposal

Transportation and Storage

Ensure that the environmental conditions, page 15 specified for transportation and storage are respected.

Disposal

Dispose of the product in accordance with all applicable regulations.

Visit <https://www.se.com/green-premium> for information and documents on environmental protection as per ISO 14025 such as:

- EoLi (Product End-of-Life Instructions)
- PEP (Product Environmental Profile)

Service Addresses

Schneider Electric Automation GmbH

Schneiderplatz 1
97828 Marktheidenfeld, Germany
Phone: +49 (0) 9391 / 606 - 0
Fax: +49 (0) 9391 / 606 - 4000
Email: info-marktheidenfeld@se.com

Additional Contact Addresses

See the homepage for additional contact addresses:

<https://www.se.com>

Index

A

accessories	44
activation, safety-related inputs	26
application functions	
configuration	40
application functions: see index entry functions	36
automatic start/restart	38

B

block diagram	33
---------------------	----

C

Category	23
commissioning	41
configuration	
application functions	40
cross circuit detection	29

D

DCavg	23
deactivation, safety-related inputs	26
degree of protection	17
Demand Mode of Operation	23
diagnostics	42
diagram, block	33
dimensions	17
dynamization	29

E

electrical characteristics	19
electrical durability	24
electromagnetic compatibility	25
EMC	25
Emergency Stop circuits as per ISO 13850 and IEC 60204-1, stop category 0, monitoring of	36
environmental characteristics	15
errors, detected	42
example Emergency Stop	
overview	27
timing diagram	27

F

functional safety data	23
functions	
automatic start/restart	38
configuration of application functions	40
dynamization	29
manual start/restart	38
monitored start/restart with falling edge	39
monitoring of Emergency Stop circuits as per ISO 13850 and IEC 60204-1, stop category 0	36
monitoring of guards as per ISO 14119/14120 with electrical switches	37
overview application functions	36
start/restart functions	38

G

guards as per ISO 14119/14120 with electrical switches, monitoring of	37
---	----

H

HFT	23
-----------	----

I

input, start/restart	
technical data	19
wiring	35
inputs, safety-related	
wiring	34
inputs, safety-related supply	
technical data	19
installation	30–32
control cabinet	30
enclosure	30
mechanical	31
prerequisites	30

L

L	23
LEDs	42
lifetime	23

M

maintenance	44
manual start/restart	38
mechanical characteristics	17
monitored start/restart with falling edge	39
monitoring of Emergency Stop circuits as per ISO 13850 and IEC 60204-1, stop category 0	36
monitoring of guards as per ISO 14119/14120 with electrical switches	37
mounting	31
DIN rail	31
screw mounting	31
MTTFd	23

N

nameplate	13
-----------------	----

O

operating cycles over lifetime	23
operating state transitions	27
operating states	26
operation, environmental characteristics	15
outputs, safety-related	
technical data	20
wiring	34

P

Performance Level	23
PFHD	23
power supply	
technical data	19
wiring	34

R		V	
response times		view	
technical data	22	front view	12
		side view	12
S		W	
safe state, defined	23	weight	17
Safety Integrity Level	23	wire cross sections	18
safety-related inputs		wiring	32
activation	26	power supply	34
deactivation	26	safety-related inputs	34
wiring	34	safety-related outputs	34
safety-related outputs		start /restart input	35
technical data	20	supply	34
wiring	34		
safety-related supply inputs		Z	
technical data	19	ZVEI CB24I	19
service addresses	45		
SFF	23		
SIL	23		
SILCL	23		
start functions	38		
start/restart functions			
automatic start/restart	38		
manual start/restart	38		
monitored start/restart with falling edge	39		
start/restart input			
technical data	19		
wiring	35		
state machine	26		
state transitions	27		
stop category	23		
storage, environmental characteristics	15		
stripping lengths	18		
supply			
technical data	19		
wiring	34		
T			
technical data			
degree of protection	17		
dimensions	17		
electrical characteristics	19		
environmental characteristics	15		
functional safety data	23		
mechanical characteristics	17		
operation	15		
power supply	19		
response times	22		
safety-related outputs	20		
safety-related supply inputs	19		
start/restart input	19		
storage	15		
stripping lengths	18		
supply	19		
tightening torques terminals	18		
timing data	22		
transportation	15		
weight	17		
wire cross sections	18		
tightening torques terminals	18		
timing data	22		
transportation, environmental characteristics	15		
troubleshooting	42		
type code	14		

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2021 – Schneider Electric. All rights reserved.

EIO0000004248.00