





### TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Unpacking Instructions	1
Claims	1
Claims	1
Symbols	1
Disclaimer	1
Intellectual Property	1
Satety Notes	2
2. Introduction	3
2. Introduction	
Product Overview	3
Product Dimensions	3
3. Setup	4
AC Power	4
Fuse Replacement	4
Power Linking	4
Mounting	5
Orientation	5 5
A Operation	6
Control Panel Operation	6
Menu Map	6
Configuration (DMX)	6
Starting Address and Personality DMX Channel Assignments and Values	6
DMX Channel Assignments and Values	7
3Ch Configuration (Standalone) Color Wheel	7
	7
Color Wheel	7
Wave Effect Dimmer	7 7
Temperature	7
Temperature IRC-6 Infrared Remote Control	8
IRC-6 Operation	8
IRC-6 Operation Master/Slave Mode <b>5. Maintenance</b>	8
5. Maintenance	9
Product Maintenance	
6 Tashnical Chasifications	9
6. Technical Specifications Returns	10
Keturns	11
Contact Us	12



## 1. Before You Begin

### What Is Included

- Abyss 2
  - Power Cord

Quick Reference Guide

### Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

### Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection. For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

### **Text Conventions**

Convention	Meaning			
1–512	A range of values			
50/60	set of values of which only one can be chosen			
Settings	A menu option not to be modified			
<enter></enter>	A key to be pressed on the product's control panel			
ON	A value to be entered or selected			

### **Symbols**

Symbol	Meaning
Â	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
$\triangle$	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
<b>(i)</b>	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

### Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <u>www.chauvetdj.com</u>.

### **Intellectual Property**

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

### © Copyright 2021 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

CHAUVET, the Chauvet logo, and Abyss 2 are registered trademarks or trademarks of Chauvet & Sons LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.



### Safety Notes


- This product is not intended for permanent installation.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Avoid direct eye exposure to the light source while the product is on.
  - Make sure the power cord is not crimped or damaged.
- Never disconnect the product from power by pulling or tugging on the cord.
- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product when operating.
- Do not touch the product's housing when operating because it may be very hot.
- The voltage of the outlet to which you are connecting this product must be within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the
  product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.
- Never connect the product to a dimmer or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never carry the product from the power cord or any moving part. Always use the handles.
- The maximum ambient temperature is 104 °F (40 °C). Do not operate this product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Do not open this product. It contains no user-serviceable parts.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.

Keep this User Manual for future use. If the product is sold to someone else, be sure that they also receive this document.






## 2. Introduction Product Overview

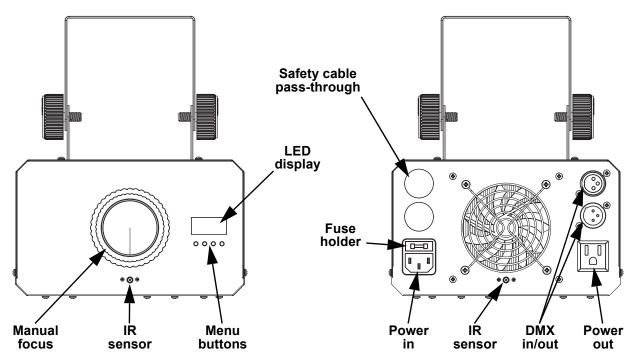

### **Product Dimensions**

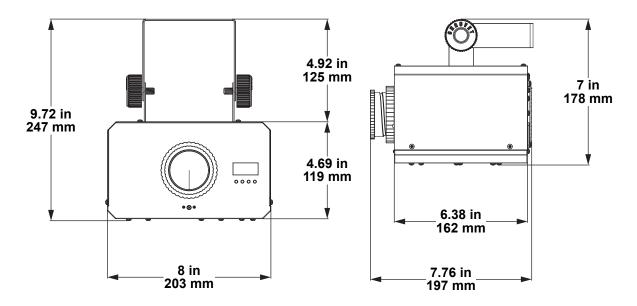



# 3. Setup

### AC Power

The Abyss 2 has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.

 Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.




To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

### **Fuse Replacement**

- 1. Disconnect the product from power.
- 2. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
- 3. Pry the fuse holder out of the housing.
- 4. Remove the blown fuse from the holder and replace with a fuse of the exact same type and rating.
- 5. Insert the fuse holder back in place and reconnect power.

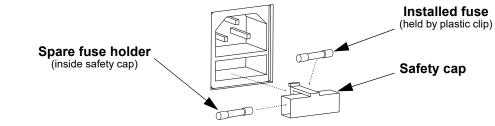


Disconnect the product from the power outlet before replacing the fuse.

### **Power Linking**

The product provides power linking via the outlet located in the back of the product. See the diagram below for further explanation.

Power Linking Diagram

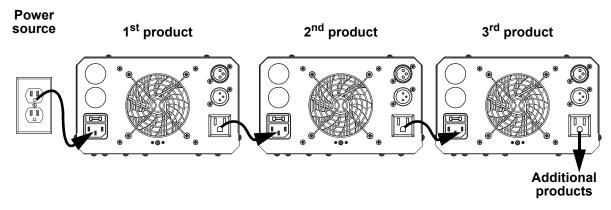



You can power link up to 7 Abyss 2 products on 120 VAC or up to 13 Abyss 2 products on 230 VAC.

The power linking diagram corresponds to the North American version of the product ONLY! If using the product in other markets, you must consult with the local Chauvet distributor as power linking connectors and requirements may differ in your country or region.



### Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes.


### Orientation

The Abyss 2 may be mounted in any position; however, make sure adequate ventilation is provided around the product.

### Rigging

- Before deciding on a location, always make sure there is easy access to the product for maintenance and programming.
- Make sure adequate ventilation is provided around the product.
- Make sure that the structure or surface onto which you are mounting the product can support the product's weight. (see the <u>Technical Specifications</u>)
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- When mounting the product on the floor, make sure that the product and cables are away from people and vehicles.

### **Mounting Diagram**

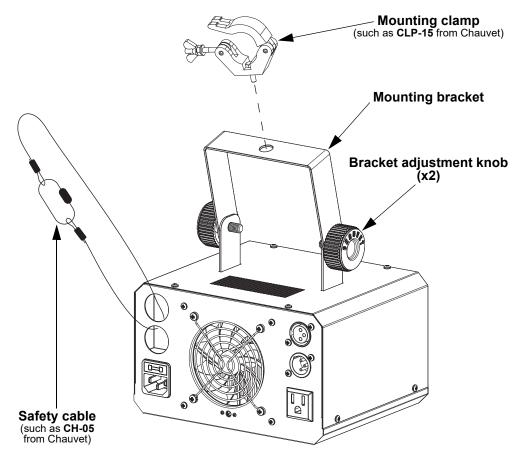



## 4. Operation

### **Control Panel Operation**

To access the control panel functions, use the four buttons located underneath the display. Please refer to the <u>Product Overview</u> to see the button locations on the control panel.

Button	Function		
<menu></menu>	Press to find an operation mode or to back out of the current menu option		
<up></up>	VP> Press to scroll up the list of options or to find a higher value		
<down></down>	<down> Press to scroll down the list of options or to find a lower value</down>		
<enter></enter>	<b>ENTER&gt;</b> Press to activate a menu option or a selected value		

### Menu Map

Refer to the Abyss 2 product page on <u>www.chauvetdj.com</u> for the latest menu map.

Mode	Pro	ogramming Levels		Description
DMX Mode	3Ch	A001–512		Sets the DMX starting address
	C	C1		White
		C2		Magenta
		C3		Yellow
Color Wheel		C4		Cyan
COIOI WITEET		C5		Green
		C6		Orange
		CL	CL L000–100 Counter-clockwise rotation and s	
		Cr r000–100		Clockwise rotation and speed
	UAuE	Stop		No wave effect
Wave Effect		UL L000–100		Counter-clockwise wave effect and speed
		Ur	r000–100	Clockwise wave effect and speed
Dimmer	U	u 0–255		Sets the output level
Infrared	SEt	on		-Turns infrared on or off
Mode	021	oFF		
Temperature	tENP	t		Shows the current product temperature in °C

### **Configuration (DMX)**

The Abyss 2 works with a DMX controller. Information about DMX is in the CHAUVET DMX Primer, which is available from the Chauvet website <u>http://www.chauvetlighting.com/downloads/</u> DMX Primer rev05 WO.pdf.

### Starting Address and Personality

When selecting a starting DMX address, always consider the number of DMX channels the selected DMX mode uses. If the starting address is set too high, access to some of the product's channels could be restricted.

The Abyss 2 uses 3 DMX channels, which defines the highest configurable address to **510**.

For information about the DMX protocol, download the DMX Primer from <u>www.chauvetdj.com</u>.

To select the starting address and personality, do the following:

- 1. Press <MENU> repeatedly until 3Ch shows on the display.
- 2. Press <ENTER>.
- 3. Use **<UP>** or **<DOWN>** to select the starting address, from **A001–512**.
- 4. Press <ENTER>.



# DMX Channel Assignments and Values 3Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
		000 ⇔ 021	White
		022 ⇔ 042	Magenta
		043 ⇔ 063	Yellow
		064 ⇔ 084	Cyan
2 0	Color wheel	085 ⇔ 105	Green
		<b>106 ⇔ 127</b>	Orange
		<b>128 ⇔ 188</b>	Counter-clockwise rotation, fast to slow
		<b>189 ⇔ 194</b>	Stop
		195 ⇔ 255	Clockwise rotation, slow to fast
3	Wave effect	000	No function
		001 ⇔ 122	Counter-clockwise wave effect, slow to fast
		<b>123 ⇔ 133</b>	Stop
		134 ⇔ 255	Clockwise wave effect, fast to slow

### **Configuration (Standalone)**

Set the product in one of the standalone modes to control without a DMX controller.



Never connect a product that is operating in any standalone mode to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

### **Color Wheel**

To set the color or color effect on the Abyss 2, follow the instructions below.

- 1. Press **<MENU>** repeatedly until **C--** shows on the display.
- 2. Press **<ENTER>**.
- 3. Use <UP> or <DOWN> to select from C--1 (white), C--2 (magenta), C--3 (yellow), C--4 (cyan), C--5 (green), C--6 (orange, C--L (counterclockwise rotation), or C--r (clockwise rotation).
- 4. Press <ENTER>.
- 5. If C--L or C--r, use <UP> or <DOWN> to increase or decrease the rotation speed, from 000–100.
- 6. Press **<ENTER>**.

### Wave Effect

To set the wave effect on the Abyss 2, do the following:

- 1. Press **<MENU>** repeatedly until **UAuE** shows on the display.
- 2. Press <ENTER>.
- 3. Use <UP> or <DOWN> to select from Stop (no wave effect), U--L (counter-clockwise wave effect), or U--r (clockwise wave effect).
- 4. Press <ENTER>.
- 5. If U--L or U--r, use <UP> or <DOWN> to increase or decrease the effect speed, from 000–100.
- 6. Press <ENTER>.

### Dimmer

To set the dimmer on the Abyss 2, follow the instructions below.

- 1. Press **<MENU>** repeatedly until **U--** shows on the display.
- 2. Press <ENTER>.
- 3. Use <UP> or <DOWN> to increase or decrease the dimmer, from u 0-255.
- Press <ENTER>.

### Temperature

To view the temperature of the Abyss 2 in °C:

- 1. Press <MENU> repeatedly until tENP shows on the display.
- 2. Press **<ENTER>**.



### **IRC-6 Infrared Remote Control**

The Abyss 2 is compatible with the IRC-6 infrared remote control from Chauvet. To run the Abyss 2 in IR mode, follow the instructions below.

- 1. Press **<MENU>** repeatedly until **SEt** shows on the display.
- 2. Press **<ENTER>**.
- 3. Use **<UP>** or **<DOWN>** to select from **on** or **oFF**.
- 4. Press **<ENTER>**.

### **IRC-6** Operation

### Color Wheel

### To select a color with the IRC-6:

- BLACK SOUND STROBE % FADE (G) (R)(B) (A) (UV) (W) $(\mathbf{0})$ (+ - ) (2)(3) (1)(4) (5) (6)(7)(8) (9)
- select a color with the IF
- Press <1> (white), <2> (magenta), <3> (yellow), <4> (cyan), <5> (green), or
   <6> (orange).
- To set rotation direction with the IRC-6:
  - 1. Press <AUTO>.
  - 2. Press <+> or <-> to toggle the rotation direction.
- To set rotation speed with the IRC-6:
  - 1. Press **<SPEED>**.
  - 2. Press <+> or <-> to increase or decrease the speed.
- Wave Effect

To set the wave effect direction with the IRC-6:

- 1. Press <SOUND>.
- 2. Press <+> or <-> to toggle the direction.
- To set the wave effect speed with the IRC-6:
  - 1. Press <SENSITIVITY>.
  - 2. Press <+> or <-> to increase or decrease the speed.

Dimmer

- To set the dimmer with the IRC-6:
  - 1. Press **<%>**.

2. Press <+> or <-> to increase or decrease the dimmer.

Alternatively, press **<MANUAL>** to set the dimmer to 100%

### Black Out

To black out the lights with the IRC-6:

1. Press **<BLACK OUT>** on the IRC-6.

This will turn off all the lights until the button is pressed again. NOTE: The IRC-6 will not respond to any inputs when Black Out is activated. If the product does not respond when a button is pressed, try pressing **<BLACK OUT>**. Black Out may have been activated.

### Master/Slave Mode

The Master/Slave mode allows a single Abyss 2 product (the "master") to control the actions of one or more Abyss 2 products (the "slaves") without the need of a DMX controller. The master product will be set to operate in either standalone mode or with the IRC-6, while the slave products will be set to operate in slave mode. Once set and connected, the slave products will operate in unison with the master product. Configure the products as indicated below.

### Slave products:

- 1. Press <MENU> repeatedly until 3Ch shows on the display.
- 2. Press **<ENTER>**.
- 3. Use <UP> or <DOWN> to select A001.
- 4. Press <ENTER>.
- 5. Connect the DMX input of the first slave product to the DMX output of the master product.
- 6. Connect the DMX input of the subsequent slave products to the DMX output of the previous slave product.
- 7. Finish setting and connecting all the slave products.

### Master product:

- 1. Set the master product to operate in standalone mode or with the IRC-6.
- 2. Make the master product the first product in the DMX daisy chain.
  - Configure all the slave products before connecting the master to the daisy chain.
  - Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.
  - Do not connect more than 31 slaves to the master.



# 5. Maintenance

### **Product Maintenance**

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

Do not spin the cooling fan using compressed air because it could be damaged.



# 6. Technical Specifications

Dimensions and	Weight					
Length		Width Height			Weight	
8 in (203 m	8 in (203 mm) 7 in (		6.38 in (152 m	m) 6	.2 lb (2.8 kg)	
<b>Note</b> : Dimensions <b>Power</b>	in inches are rour	ided.				
Power Su	рріу Туре	Rai	nge	Voltage	Voltage Selection	
Switching	(internal)	100 to 240 VAC, 50/60 Hz		Auto-	Auto-ranging	
Paran	neter	120 V,	60 Hz	230 V, 50 Hz		
Consu	mption	80	W	74	4 W	
Operating	g Current	1.1	IA	0.	.6 A	
Power linking cu		8 A (7 p	roducts)	8 A (13	products)	
Fu		ΤÌΑ,	,	· ·	, 250 V	
Powe		,	orldwide		Europe	
	-		C		EC	
Power input						
Power outpu			son		EC	
Power C	ower Cord plug Edison (U.S.)		(U.S.)	Local Plug		
ight Source	-	-		-		
Туре	Color	Quantity	Power	Current	Lifespan	
LED	White	1	60 W	2 A	50,000 hours	
Photometrics						
Coverag	le Angle	Illuminan	ce @ 2 m			
60	)°	5,010 lux				
Thermal						
Maximum Exterr	nal Temperature	Cooling	System			
104 °F	(40 °C)	Fan-assisted convection				
омх						
I/O Connector		Channel Range				
3-pin	3-pin XLR 3					
Ordering						
Produc	t Name	Item Code		UPC Number		
Abyss 2		07051837		78146	2221850	



### Returns

## Returns

CHAUVET 2

In case you need to get support or return a product:

- If you are located in the U.S., contact Chauvet World Headquarters.
- If you are located in the U.K. or Ireland, contact Chauvet Europe Ltd.
- If you are located in Benelux, contact Chauvet Europe BVBA.
- If you are located in France, contact Chauvet France.
- If you are located in Germany, contact Chauvet Germany.
- If you are located in Mexico, contact Chauvet Mexico.
- If you are located in any other country, DO NOT contact Chauvet. Instead, contact your local distributor. See <u>www.chauvetdj.com</u> for distributors outside the U.S., U.K., Ireland, Benelux, France, Germany, or Mexico.



# If you are located outside the U.S., U.K., Ireland, Benelux, France, Germany, or Mexico, contact your distributor of record and follow their instructions on how to return Chauvet products to them. Visit our website <u>www.chauvetdj.com</u> for contact details.

Call the corresponding Chauvet Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

To submit a service request online, go to www.chauvetdj.com/service-request.

Send the merchandise prepaid, in its original box, and with its original packing and accessories. Chauvet will not issue call tags.

Clearly label the package with the RMA number. Chauvet will refuse any product returned without an RMA number.



## Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



## Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



## **Contact Us**

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise, FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: <u>chauvetcs@chauvetlighting.com</u>
Fax: (954) 929-5560	
Toll Free: (800) 762-1084	Website: www.chauvetdj.com
Chauvet Europe Ltd	
Address: Unit 1C	Email: UKtech@chauvetlighting.eu
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetdj.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Europe BVBA	
Address: Stokstraat 18	Email: <u>BNLtech@chauvetlighting.eu</u>
9770 Kruishoutem	
Belgium	Website: <u>www.chauvetdj.eu</u>
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: <u>FRtech@chauvetlighting.fr</u>
France	Website: <u>www.chauvetdj.eu</u>
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>
Germany	Website: <u>www.chauvetdj.eu</u>
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: <u>servicio@chauvet.com.m</u> x
Zona Industrial Lerma	Website: www.chauvetdj.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U.K., Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.