

TENMA®



THERMOMETER - PEN TYPE 72-2675

IMPORTANT SAFETY INFORMATION

- Always ensure the battery compartment is secure.
- Only use the recommended battery type and ensure the correct polarity.
- Remove dead batteries and remove the battery if the device is not to be used for long periods.
- Always keep cell type batteries away from Children as they can easily be swallowed.
- Seek medical attention if batteries are swallowed.
- Never dispose of batteries in a fire or attempt to recharge ordinary batteries.

OPERATION

- Press ON/OFF button to turn the power on or off.
- Press C/F to switch between centigrade or fahrenheit measurement.
- Press HOLD button to retain the current display reading. Press again to return to normal operation.
- Press MAX/MIN button to display the maximum temperature measured. Press again to display the minimum temperature measured. Press again to return to normal operation.
- After 10 minutes of inactivity, the thermometer will power off.

SPECIFICATION

Temp Range	-50°C to 300°C (-58°F to 572°F)
Temp Accuracy	±1°C (±2°F)
Power	1.5V (LR44) x1 button cell



**UK
CA
CE**

INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

Made in China
PO Box 13362 Dublin 2
PR2 9PP
Man Rev 1.0