

# Sound Level Meter

## User Manual



**Part Number: MP780904**

## 1.Safety Information

Read the following safety information carefully before attempting to operate or service the meter.

Use the meter only as specified in this manual; otherwise, the protection provided by the meter may be impaired.

### Environment conditions

- Altitude up to 2000 meters
- Relatively humidity 90% max.
- Operation Ambient 0~40°C

### Maintenance & Clearing

- Repairs or servicing not covered in this manual should only be performed by qualified personnel .
- Periodically wipe the case with a dry cloth. Do not use abrasives or solvents on this instruments.

## 2.General Description

Thank you for using our Sound Level Meter. To ensure that you can get the most from it, we recommend that you read and follow the manual carefully before use.

This unit conforms to the IEC 61672-1 type 2, ANSI S1 .4 type 2 for Sound Level Meters.

This Sound Level Meter has been designed to meet the measurement requirements of safety Engineers, Health, Industrial safety offices and sound quality control in various environments.

- Ranges from 30dB to 130dB at frequencies between 31.SHz and 8kHz.
- Display with 0 .1 dB steps on a 4-digits LCD.
- With two equivalent weighted sound pressure levels, A and C.

## 3.Specifications

|                       |   |
|-----------------------|---|
| Standard applied      | IEC61672-1 type 2, ANSI S1 .4 type 2                                  |
| Frequency range       | 31.5Hz to 8kHz  |
| Measuring level range | 30 to 130dB   |
| Frequency weighting   | NC  |
| Microphone            | 1/2 inch electret condenser microphone                                |
| Calibration           | Electrical calibration with the internal oscillator (1 kHz sine wave) |
| Display               | LCD   |
| Digital display       | 4 digits  |
| Resolution            | 0.1dB   |
| Display Up data       | 0.5 sec.  |
| Time weighting        | FAST (125mS), SLOW (1 sec.)   |
| Level ranges          | Lo: 30-100dB<br>Hi: 60-130dB  |
| Accuracy              | ± 1.5dB (under reference conditions)                                  |
| Alarm function        | "OVER" is show when input is out of range                             |
| Maximum hold          | Hold readings the Maximum Value, with decay <1 dB/3minutes.           |


|                       |  |
|-----------------------|--|
| Auto power off        | Meter automatically shuts down after approx. 15 minutes of activity. |
| Power supply          | One 9V battery, 006P or IEC 6F22 or NEDA 1604.                       |
| Power life            | About 50hrs (alkaline Battery)                                       |
| Operation temperature | 0°C to 40°C (32°F to 104°F)  |
| Operation humidity    | 10 to 90%RH  |
| Storage temperature   | -10°C to 60°C (14 to 140°F)  |
| Storage humidity      | 10 to 75%RH  |
| Dimensions            | 210 (L) × 55 (W) × 32 (H)mm  |
| Weight                | 230g (including battery)   |
| Accessories           | 9V battery, carrying case, Instruction manual..                      |


## 4. Name and Functions

### 1-Windshield

If you operate at wind speed over 1 Om/sec, please put the protective shield over the microphone.

### 2-LCD Display

| SYMBOL  | FUNCTION                 |
|---|--------------------------|
| LCD   | 4digits                  |
| MAX   | Maximum Value hold       |
| OVER  | Over range               |
| FAST  | Fast response            |
| SLOW  | Slow response 4 6        |
| dBA   | A-Weighting              |
| dBC   | C-Weighting              |
| Lo  | Low Range (30 to 100dB)  |
| Hi  | High Range (60 to 130dB) |
|  | Low-Battery              |

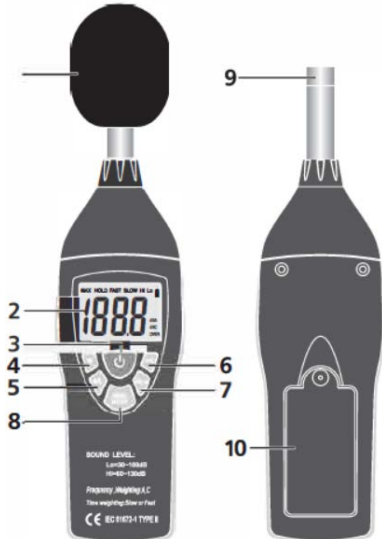

### 3-Power ON/OFF Button

Turn the meter power ON/OFF

### 4-Backlight Button

Turn the meter backlight ON/OFF

### 5-A-Weighting/C-Weighting Select Button

**A:** A-Weighting. For general sound level measurements.

**C:** (-)Weighting. For checking the low- frequency content of noise.

(If the (-)Weighted level is much higher than the A-Weighted level, then there is a large amount of low-frequency noise)

### 6-Time Weighting Select Button

**F** (fast response): for normal measurements (fast varying noise)

**S** (slow response): for checking average level of fluctuating noise

## 7-Level Range Select Button

Lo: 30~100dB; Hi: 60~130dB

When "OVER" is indicated, the ranges switch to another range for measurement.

## 8-MAX/HOLD Button

The "Max. Hold" position is used to measure the maximum level of sounds. The maximum measured level is updated continuously. Press once again the button, will release the hold and allow a further measurement.

Data Hold button: Press and hold the Button for over 2 second to turn on or off data hold function.

The hold function freezes the reading in the display.

## 9-Microphone

½ inch Electret Condenser microphone

## 10-Battery Cover

## 5.Measurement Preparation

- Battery loading

Remove the battery cover on the back and put in one 9V Battery.

- Battery Replacement

When the battery voltage drops below the operating voltage, mark "BAT" appears. If it appears, battery should be replaced with new one.

## 6.Operating Precautions

- Wind blowing across the microphone would bring additional extraneous noise. Once using the instrument in the presence of wind, it is a must to mount the windscreen to not pick up undesirable signals.
- To achieve more accurate measurement, use an extension cable to separate the Microphone from the main body so that the effect of unexpected sound reflection can be eliminated.
- Calibrate the instrument before operation if the instrument was not in use for a long time or operated at bad environment.
- Do not store or operate the instrument at high temperature and high humidity environment.
- Keep microphone dry and avoid severe vibration.
- Please take the battery and keep the instrument in low humidity environment. When not in use.

## 7. Measurement

- Open battery cover and install a 9-volt battery in the battery compartment.
- Turn on power and select the desired response Time and weighting. If the sound source consists of short bursts or only catching sound peak, set response to FAST.  
To measure average sound, use the slow setting.  
Select A-weighting for general noise sound level and (-weighting for measuring sound level of acoustic material.
- Select desired Level
- Hold the instrument comfortably in hand or fix on tripod and point the microphone at the suspected noise source, the sound pressure level will be displayed.
- When MAX (maximum hold) mode is chosen. The instrument captures and holds the maximum noise level for a long period using any of the time weightings and ranges.
- When HOLD (data hold) mode is chosen. The hold function freezes the reading in the display. Press the HOLD button momentarily to activate or to exit the HOLD function
- Turn OFF the instrument and remove and remove battery when not in use.

## 8. Calibration Procedures

Using a standard Acoustic Calibrator (94dB, 1 kHz Sine wave)

- Make the following buttons and function switch settings.

**Display:** dB, A, Hi or Lo, F

**Function:** A-Weighting

**Response Time:** FAST

**Level range:** 30~100dB(Lo) or 60~130dB(Hi)

**Measurement mode:** MAX Hold and Data Hold Mode function disable.

- Insert the microphone housing carefully into the insertion hole of the calibrator.
- Open battery cover and remove the battery to adjust the CAL94dB potentiometer of the unit. The level display will indicate the desired level.

Our products are all calibrated before shipment.

Recommended recalibration cycle: 1 year.



**Important Notice :** This data sheet and its contents (the "Information") belong to the members of the AVNET group of companies (the "Group") or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but the Group assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where the Group was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict the Group's liability for death or personal injury resulting from its negligence. Multicomp Pro is the registered trademark of Premier Farnell Limited 2019.