Quick Start Guide for ASM-1900156-XX

multicomp PRO





Software install:

1. Make sure you have followed the Raspberry Pi foundation's instruction to install the latest OS to your SD card:

https://www.raspberrypi.org/software/

2. Once the OS is installed you should confirm it's up to date. To do this Open terminal on Pi and type:

sudo apt update

This should update your OS to the latest revision. Reboot your Pi.

3. Once restarted again open terminal and type the following:

sudo nano /boot/config.txt

4. Now add the following two lines to the bottom of the config.txt file:

dtoverlay=gpio-poweroff,gpiopin=18,active_low=0
dtoverlay=gpio-shutdown,gpio_pin=17,active_low=1,gpio_pull=up

5. Save the file and reboot.

6. If you wish to automate the fan control. In following example fan is set to switch ON when CPU temperature reaches 70C:

dtoverlay.gpio-fan,gpiopin=14,temp=70000



LED Status: Fixed red means battery is fully charged. Fixed GREEN means the PiPAD is operational. Flashing RED means the PiPAD is charging.

To start your Pi:

Press the Standby button > 1 s to switch on

Shut down

Press the Standby button (whilst on) > 1 s to start shutdown sequence.

Forced Shut down

Press and hold Standby button >6s for forced shutdown

Note: Press and hold >10s to put unit into battery disconnected mode for longer term storage. Note that when in shipping mode the unit requires two button presses to switch on (first brings out of shipping mode and second press to switch on).



