

# PRO-ELEC



**29" Tower Fan with Remote**


**Model: PELL0370 and  
PELL0371**

**Please read these instructions carefully before use and retain for future reference.**

## **IMPORTANT SAFETY INFORMATION**

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- For indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understands the hazards involved.
- Children shall not play with this appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- Do not operate this fan with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the fan is switched off before removing the guard.
- Do not insert anything through the grille when the fan is in use.
- Make sure that the fan is on a stable surface when operating.
- It is recommended to unplug the fan from the mains socket when not in use.

## **ASSEMBLY**

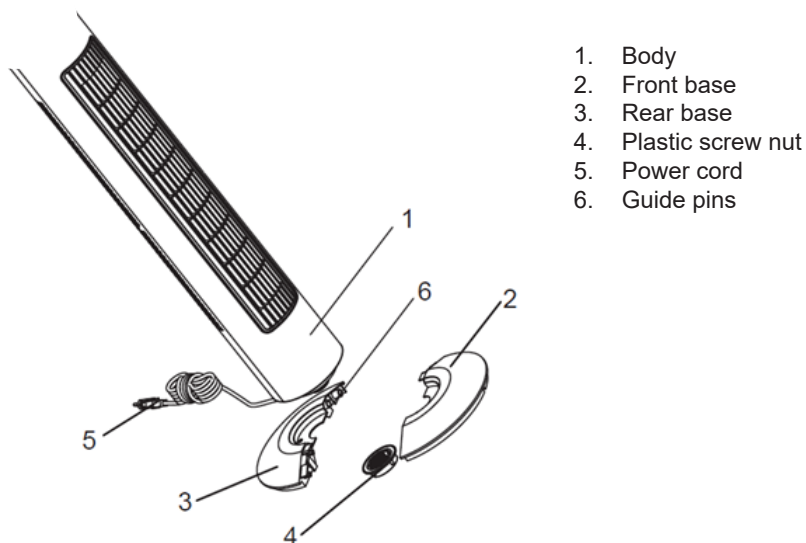

- DO NOT attempt to operate the fan before assembling the base and standing the fan upright.
- Join the two halves of the base plate by aligning the pins and pressing together so they form one part with no gap between them.
- Secure using the screws supplied.
- Remove the handwheel on the bottom of the fan body.
- Align the main body with the holes in the base and insert the mains cord through the channel in the base and slide the body into position.
- Refit the handwheel and tighten firmly to lock the assembly together.
- Stand the fan upright on a level surface and ensure it stands securely.

## OPERATION


- Connect the mains plug to a suitable outlet.
- Press the ON/OFF button to switch the fan on or off.
- Press the SPEED button to select the fan speed 1, 2 or 3.
- Press the OSC button to start or stop the oscillating motion of the fan.

### Timer Function

- To set the timer duration press the TIMER button to set between 30mins to 7.5 hour duration.
- The fan will turn off automatically at the end of the timed period.

### Mode Function

- Press MODE button to switch between normal operation and quieter sleep mode.
- All settings are indicated by the LED's.

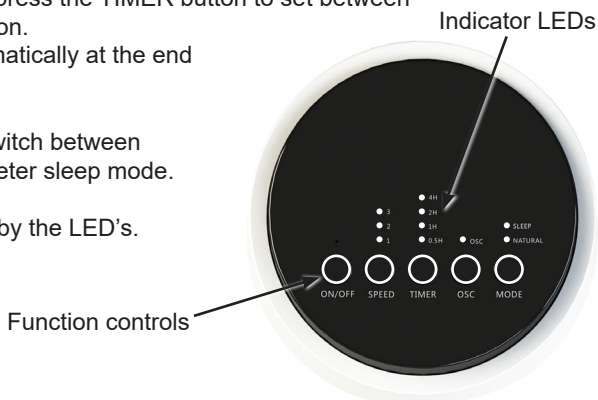

## CLEANING & MAINTENANCE

- Before cleaning, switch the fan off and unplug from the power supply.
- To clean the fan, use a soft cloth to wipe off any dust. If the fan is very dirty, use a damp cloth with some mild detergent then wipe dry.
- Do not use any chemicals, abrasives or solvents that could damage the fan.
- Keep the air vents at the rear of the main body free from dust or fluff - use a vacuum cleaner to clear these when necessary.

**TECHNICAL SPECIFICATION**

Power consumption	50W
Main voltage	220-240V~ 50Hz
Dimensions (HxWxD)	765 x 240 x 240mm
Weight	2.4kg



**INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.**

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China  
PO Box 13362 Dublin 2  
PR2 9PP  
Man Rev 1.1