

Demo mode is deactivated automatically when the battery is removed for more than at least 10s.



OPERATION

Front facing button cycles through light modes when pressed.

High > Medium > Low.

Double-tap button for Strobe mode.

Button glows when product is in use.

Direct-to-Low

When the product is OFF, the button can be pressed and held to activate LOW mode. The next button press (within 8 seconds) continues through the remaining light modes in reverse.





PRODUCT GUARANTEE

return to your local store. Contact our Customer Service team at 800-255-6061 or www.nebolights.com/contact

If you experience a problem, please do not

For more information, detailed video instructions, and warranty registration, visit **NEBOLIGHTS.com**