



Infrared Motion Sensor 180 Degrees Model: PELL0475

Please read these instructions carefully before use and retain for future reference.

This sensor must be installed by a qualified electrician in accordance with current building and IET wiring regulations (BS7671).

IMPORTANT SAFETY INFORMATION

- This sensor is suitable for unearthed lighting fittings (Class II).
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- The sensor is suitable for connection to a 220-240V, 50Hz supply. It is designed
 for permanent connection to fixed wiring, which must be a suitable circuit protected
 by an RCD with an operating current not exceeding 30mA and an MCB or fuse of
 the correct rating.
- Avoid mounting the sensor close to heat sources such as heating vents.
- Avoid mounting the sensor above objects that may move in wind.
- It is suitable for use in an ambient temperature between -20°C and +40°C and Working Humidity: <93%RH. For sheltered outside use only.

WHAT'S INCLUDED

 
- IR Sensor.
 Mounting screws and wall plugs.
- User manual.

POSITIONING

- Do not install into damp or conductive surfaces such as metal. It should be placed away from any flammable materials.
- Before drilling any fixing holes, check that there are no hidden obstructions behind the mounting surface such as pipes or cables.


INSTALLATION

 Loosen the 2 screws on the sides of the body and remove the base plate.



 Use the base to mark the position for fixing holes and drill the wall and fit wall plugs then secure the sensor base using two screws.

 · Connect the wires to the connector block according to the following diagram:-



• Ensure the connector block is located onto it's pins on the base then refit the sensor onto the base, refit and tighten the screws and restore the power.


Note: Test it's operation and make any adjustment to the settings.



OPERATION

Allow at least 30 sec for the sensor to initialise before making adjustments.

- There are two adjustments on the base of the PIR sensor, one adjusts the duration the load device remains powered (TIME), the second one is to set the level of ambient light (LUX) before the sensor switches the load.
- Some trial and error may be required to set these correctly. Turn clockwise to increase the setting.
- To set the time duration in a well lit environment, set the LUX control to maximum then adjust the LUX downwards to the setting required for normal operation.
- The sensor continues to apply power to the load as long as an induction signal is detected. Once no induction is detected the load is switched off after approximately 10 seconds.

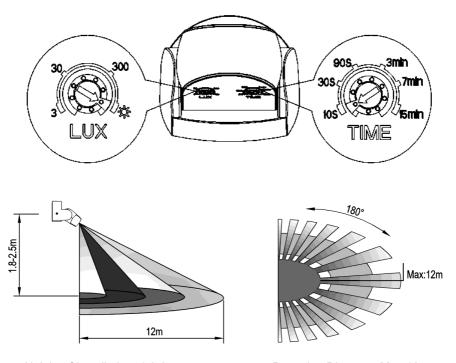

Height of installation: 1.8-2.5m

Detection Distance: Max.12m

CLEANING & MAINTENANCE

 Clean the sensor only with a soft dry cloth. Do not use any chemicals, abrasives or solvents that could damage the casing or lens.

SPECIFICATION

Input Voltage	220 - 240V AC 50Hz
Input Voltage	220 - 240 V AC 30HZ
Power consumption	0.5W approx
Ambient light	<3 - 2000 Lux (adjustable)
Time delay	Min 10 sec / Max 15 min approx (adjustable)
Rated load	600W CF/LED ~ 1200W Incandescent
Detection angle	180°
Detection range	12m (max)
Motion Detection	0.6-1.5m/s
Installation height	1.8 - 2.5m
Ingress rating	IP65



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

Made in China PR2 9PP PO Box 13362 Dublin 2 Man Rev 1.0