



GLXD4+

Wireless Receiver

Online user guide for GLXD4+ wireless system. Includes setup instructions, specifications, and more.
Version: 1.1 (2023-B)

Table of Contents

GLXD4+ Wireless Receiver	3	Identifying Linked Transmitters and Receivers with Remote ID	13
System Overview	3	Multiple Receiver Systems	14
Features	3	Receiver Band Modes	14
Receiver	3	Gain Adjustment	15
Receiver Screen	5	Locking and Unlocking the Controls	15
Set Up the Receiver	6	Locking the Receiver Controls	15
Transmitters	6	Locking the Transmitter Controls	15
Transmitter Status LED	8	Receiver Display Brightness	15
Wearing the Bodypack	8	Firmware	16
Wearing the Headworn Microphone	8	Resetting Components	16
Correct Microphone Placement	9	Resetting the Receiver	16
Install Transmitter Batteries	9	Resetting the Transmitter	16
Batteries and Charging	10	Troubleshooting	16
Receiver Charging Bay	10	Accessories	18
Charging from an AC Power Source	10	Specifications	18
Charging Status LEDs	11	Diagrams	23
Charging Times and Transmitter Runtimes	11	Frequency Tables	23
Important Tips for Care and Storage of Shure Rechargeable Batteries	11	IMPORTANT SAFETY INSTRUCTIONS	30
Tips to Improve Wireless System Performance	11	WARNING	32
Additional Tips	12	Note:	32
System Set Up	13	Information to the user	32
Manually Linking Receivers and Transmitters	13	Certifications	33
Linking Two Transmitters to a Receiver	13		

GLXD4+ Wireless Receiver

System Overview


GLX-D+ Dual Band Digital Wireless offers confidence without complexity. Dual-band operation in 2.4 and 5.8 GHz more than doubles the available bandwidth to avoid interference without audio interruption. The receiver is compatible with a selection of lavalier, headset, and vocal microphones. The included lithium-ion battery offers up to 12 hours of runtime, and can be charged directly on the receiver or via USB-C.


Features

- Exceptional digital audio clarity
- Compatible with multiple legendary microphone options
- Automatically moves away from interference without audio interruption
- Operates in 2.4 and 5.8 GHz spectrum*
- Rechargeable battery delivers up to 12 hours of runtime
- Rock-solid RF performance for multiple system installations
- License-free frequency range

Note: region dependent

Receiver

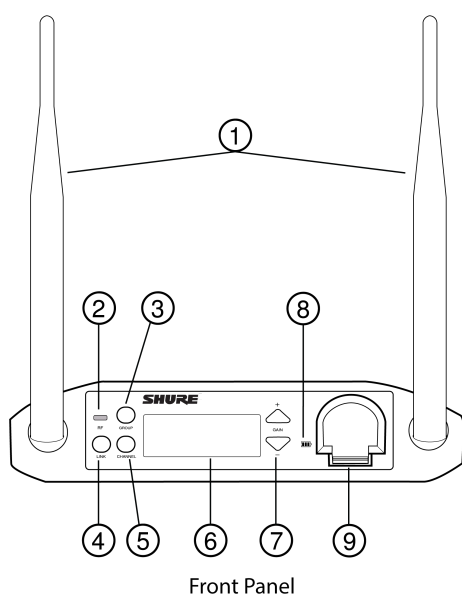

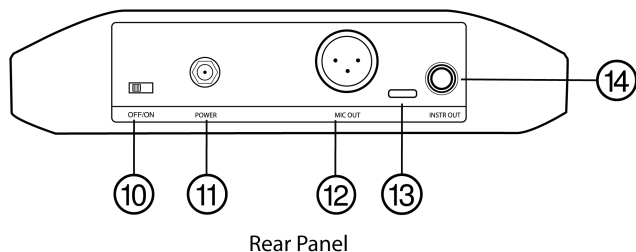

① Antenna

Two antennas per receiver. Antennas pick up the signal from the transmitter.

② RF status LED

- ON = Linked transmitter is on
- Flashing = Searching for transmitter
- OFF = Linked transmitter off or transmitter unlinked

③ Group button

Press and hold for two seconds to enable manual group edit.

④ Link button

Press to manually link receiver to a transmitter or to activate the remote ID function.

⑤ Channel button

Press to start a channel scan.

⑥ Display

Shows receiver and transmitter status.

⑦ Gain buttons

Press to increase or decrease transmitter gain in 1 dB increments.

⑧ Battery charging indicator

Illuminates when battery is in charging bay:

- Red = Battery charging
- Green Flashing = Battery charge > 90%
- Green = Battery charged
- Amber Flashing = Charging error, replace battery

⑨ Battery charging bay

Charges transmitter battery.

⑩ Power switch

Powers the unit on and off.

⑪ Power supply port

Connect the supplied 15 V DC external power supply.

⑫ Mic output

XLR microphone output port supplies microphone-level audio output.


⑬ USB-C port

Connect to computer to download firmware updates.

⑭ Instr output

TRS ¼" (6.35mm) audio output. Connect to mixers, recorders, and amplifiers.

Receiver Screen

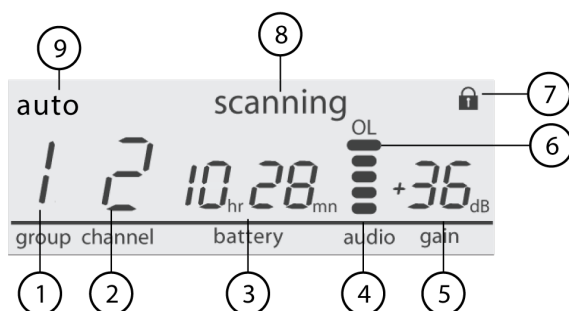

① Group

Displays the selected group.

② Channel

Displays the selected channel.

③ Transmitter battery runtime

Displays remaining battery life in hours and minutes.

Alternatively displays the following battery status:

- CALC = Battery life calculation
- Lo = Battery life less than 15 minutes
- Err = Replace battery

④ Audio meter

Indicates audio signal level and peaks.

⑤ Gain

Displays transmitter gain settings (dB).

⑥ OL indicator

Indicates audio overload, reduce gain.

⑦ Transmitter locked

Displayed when linked transmitter controls are locked.

⑧ Scanning


Indicates a scan is in progress.

⑨ Auto


Indicates that the selected group has backup channels available.

Set Up the Receiver

1. Connect the PS43 power supply to the receiver and plug the cord into an AC power source.
2. Connect the audio output to an amplifier or mixer.

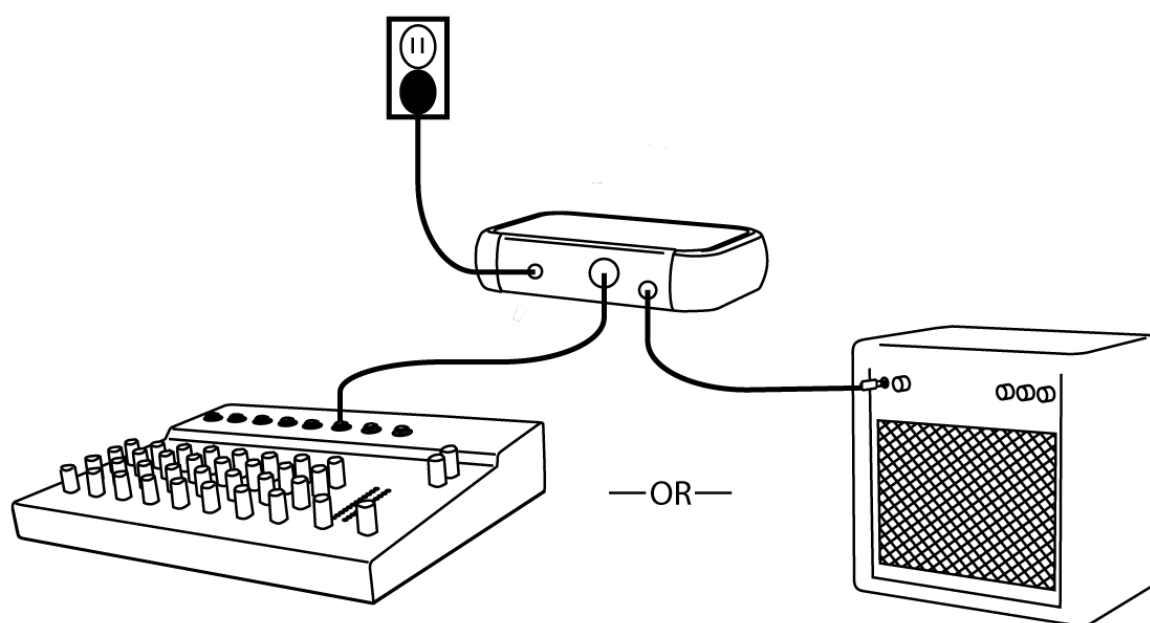

Transmitters

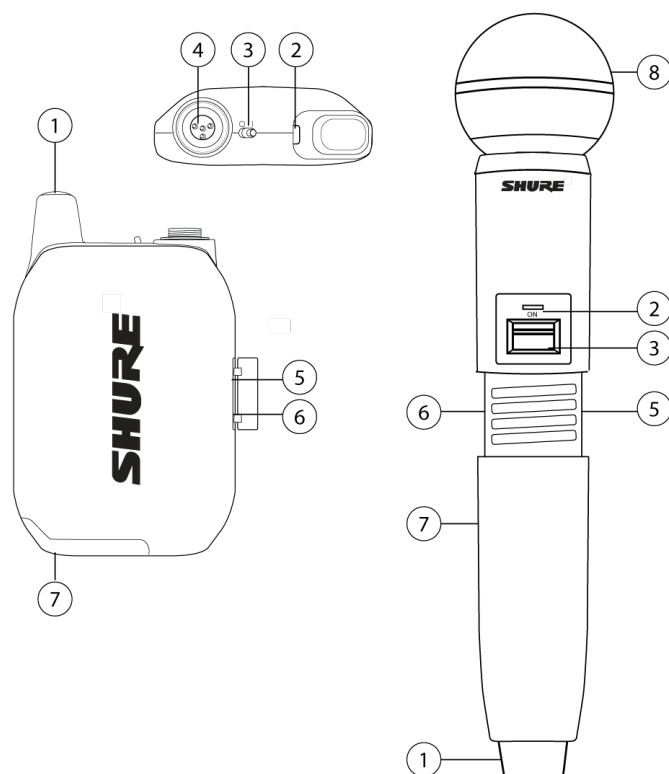

① Antenna

Carries wireless signal.

② Status LED

LED color and state indicate transmitter status.

③ Power switch

Turns the transmitter on/off.

④ TA4M input port

Connects to a 4-Pin mini connector (TA4F) microphone or instrument cable.

⑤ USB-C charging port

Connect to USB battery charger.

⑥ Link button

- Press and hold within 5 seconds of power-on to manually link with receiver.
- Press momentarily to activate remote ID function.

⑦ Battery compartment

Holds 1 Shure rechargeable battery.

⑧ Microphone cartridge

GLXD2+ transmitter models are available with the following cartridge types: SM58, Beta 58, Beta 87A.

Transmitter Status LED

LED is green during normal operation.


LED color or flashing indicates a change in transmitter status as shown in the following table:

Color	State	Description
Green	Flashing (slow)	Transmitter attempting relink with receiver
	Flashing (fast)	Unlinked transmitter searching for receiver
	Flashes 3 times	Indicates locked transmitter when power switch is pressed
Red	On	Battery life < 1 hour
	Flashing	Battery life < 30 minutes
Red/Green	Flashing	Remote ID active
Amber	Flashing	Battery error; remove and insert again, or replace battery

Wearing the Bodypack


Clip the bodypack to a belt or slide a guitar strap through the bodypack clip as shown.

For best results, the belt should be pressed against the base of the clip.

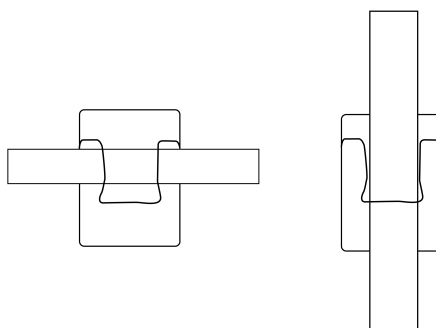

Wearing the Headworn Microphone

- Position the headworn microphone 13 mm (1/2 in.) from the corner of your mouth.
- Position lavalier and headworn microphones so that clothing, jewelry, or other items do not bump or rub against the microphone.

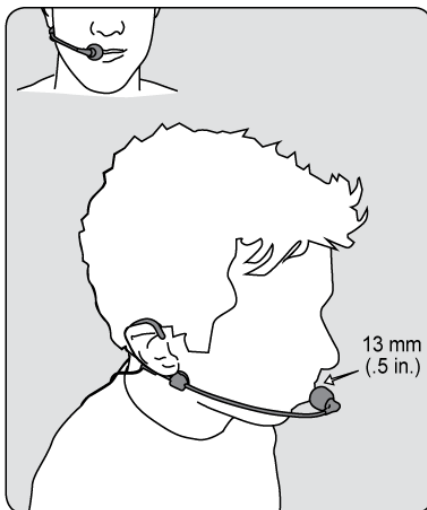

Correct Microphone Placement


- Hold the microphone within 12 inches from the sound source.
- For a warmer sound with increased bass presence, move the microphone closer to the sound source.
- Do not cover grille with hand.

Install Transmitter Batteries

Important: Always fully charge a new battery before first use.


Bodypack:

1. Move the locking lever to the open position and slide the battery door open.
2. Place the battery into the transmitter.
3. Close the battery door.

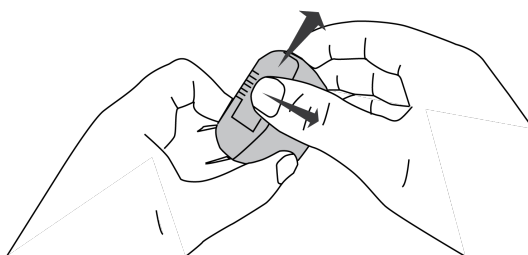

Handheld:

1. Unscrew and remove the battery cover.
2. Place the battery into the transmitter.
3. Replace and tighten the battery cover.

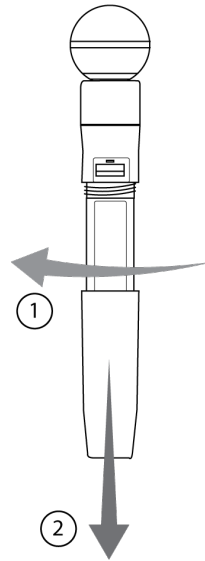

Batteries and Charging

GLX-D+ transmitters are powered by Shure SB904 lithium-ion rechargeable batteries. Advanced battery chemistry maximizes runtimes with zero memory effects, eliminating the need to discharge batteries prior to charging.

When not in use, recommended battery storage temperature is 10°C (50°F) to 25°C (77°F).

 
Note: The transmitter will not pass RF or audio signals when connected to the charging cable.

The following battery charging options are available:

Receiver Charging Bay


The receiver's built-in charging bay will charge transmitter batteries when the receiver is plugged in to a power outlet.

1. Insert the battery into the charging bay.
2. Monitor the battery charging indicator on the front panel.



Charging from an AC Power Source

1. Plug the charging cable into the charging port on the transmitter.
2. Plug the charging cable into an AC power source.

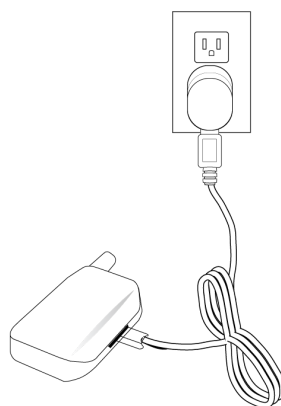

Charging Status LEDs

LED Color	Description
Green (solid)	Device is fully charged
Red (solid)	Charging
Amber (flashing)	Out of temperature range, or battery error
Off	Power supply is disconnected, or no device is docked in the charging bay

Charging Times and Transmitter Runtimes

Use the following table to determine approximate battery runtime based on the duration of charging time when in 5.8 GHz mode. Times shown are in hours and minutes. Transmitters automatically power-off after approximately 1 hour to conserve battery life if the signal from a linked receiver is not detected.

Receiver Bay or AC Power Source Charging	Transmitter Runtime
0:15	up to 1:30
0:30	up to 3:00
1:00	up to 6:00
3:00	up to 11:30*

*Storage time or excessive heat will reduce maximum runtime.

Note: If receiver is powered off and remains plugged in, battery will continue charging.

Important Tips for Care and Storage of Shure Rechargeable Batteries



Proper care and storage of Shure batteries results in reliable performance and ensures a long lifetime.

- Always store batteries and transmitters at room temperature
- Ideally, batteries should be charged to approximately 40% of capacity for long-term storage
- During storage, check batteries every 6 months and recharge to 40% of capacity as needed

Tips to Improve Wireless System Performance

If you encounter interference or dropouts, try the following suggestions:

1. Place receiver at least 3 meters (10 feet) away from Wi-Fi access points, computers, or other active 2.4 GHz and 5.8 GHz sources.
 - Avoid heavy Wi-Fi traffic activities such as downloading large files or viewing a movie.
 - Turn on any Wi-Fi prior to turning on receivers and scanning for the best channel.
2. Reduce transmitter-to-receiver distance by placing receivers on stage or above the audience with a clear line of sight to the transmitter.
 - Move receiver to the top of the equipment rack for a clear line of sight.
 - Mount antennas remotely to place closer to transmitters and improve RF reliability if receivers cannot be moved closer.
 - Make sure people do not block the line of sight between receiver and transmitter.

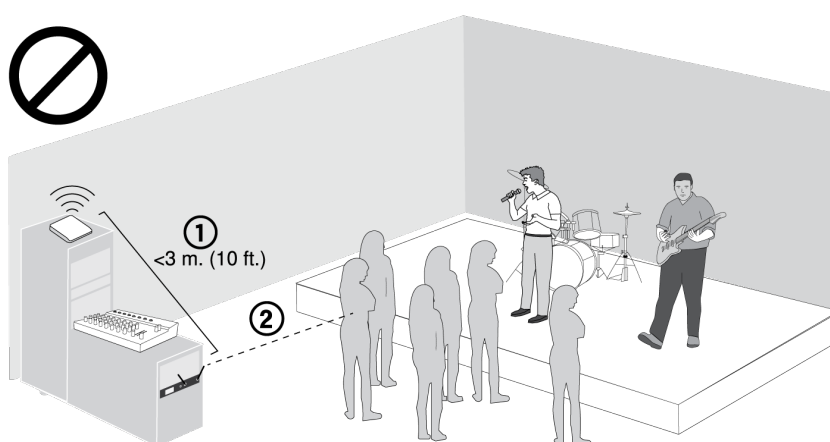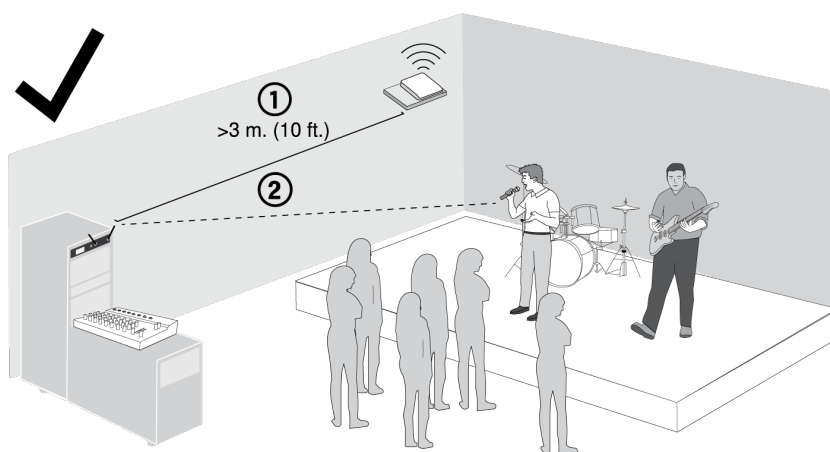

Additional Tips

- Do not place competitive 2.4 GHz and 5.8 GHz receivers near GLXD4R+ receivers.
- Connect more than two GLXD4R+ receivers to a GLX-D+ frequency manager to improve RF reliability.
- Scan for the best available channel by pressing the channel button.

- Keep transmitters more than 2 meters (6 feet) apart. This is less critical with shorter receiver-to-transmitter distances or if receivers are connected to a GLX-D+ frequency manager.

Note: If transmitters are within 6 inches of non-GLX-D+ transmitters or microphone cartridges, audible noise is possible.

- Move transmitter and receiver away from metal or other dense materials.
- During sound check, mark trouble spots and ask performers to avoid those areas.

System Set Up

Important: Before beginning, turn off all receivers and transmitters. Turn on and link each receiver/transmitter pair one at a time to prevent cross-linking.

1. Turn on a receiver.
2. Press and hold the group button to select a group (if necessary). If the group is already set, press the channel button to scan for the best available channel.
3. Turn on a transmitter. The blue RF LED will flash while the transmitter and receiver form a link. When the link has successfully formed, the RF LED will remain illuminated. The transmitter and receiver will remain linked for future usage.

Repeat steps 1-3 for each additional receiver and transmitter. Remember to set each receiver to the same group.

Note: Dashes appearing on the group and channel display after a channel selection indicate that frequencies are not available in the selected group. Choose a group that supports more receivers and repeat the linking steps.

Manually Linking Receivers and Transmitters

1. Turn on a transmitter.
2. Press and hold the link button on the transmitter until the LED begins to flash green.
3. Press and hold the link button on the receiver. The blue RF LED will flash and then remain illuminated when the link has been established.
4. Test the audio to verify the link.

Linking Two Transmitters to a Receiver

Only one transmitter can be active at a time to prevent cross interference. Gain settings for each transmitter can be independently set and stored when the transmitter is active.

Important! Do not turn on and operate both linked transmitters at any time. Turn off both transmitters before beginning.

1. Press the group button to select a group. The receiver automatically scans the selected group to find the best available channel.
2. Turn on transmitter 1 and link it to the receiver. Adjust the gain, and then turn off the transmitter.
3. Turn on transmitter 2 and press and hold the link button on the transmitter and the receiver to link them together. Adjust the gain, and then turn off the transmitter.

Identifying Linked Transmitters and Receivers with Remote ID

Use the remote ID feature to identify linked transmitter and receiver pairs in multiple receiver systems.

To activate remote ID:

1. Momentarily press the link button on the transmitter or receiver.
2. The screen of the linked receiver will blink and display ID, while the status LED on the linked transmitter will flash red/green.
3. To exit remote ID mode, momentarily press the link button or allow the function to timeout.

Multiple Receiver Systems

To run more than two receivers at the same time, the GLX-D+ frequency manager is recommended to improve RF reliability (only compatible with GLXD4R+).

However, you can run multiple receivers without the frequency manager. Select the group by determining the total number of receivers in your system. All receivers in the system must be set to the same group.

2.4 GHz and 5.8 GHz bands:

Group	Number of Receivers	Description
1	2 - 5 typical	Default setting
2	2 - 5 typical	Best multi-channel group if you experience interference
3	1	Best single-channel group if you experience interference
A*	Up to 11 typical, 16 maximum	Default setting
B*		Best multi-channel group if you experience interference

2.4 GHz bands only:

Group	Number of Receivers	Description
1	2 - 4 typical	Default setting
2	2 - 4 typical	Best multi-channel group if you experience interference
3	2 - 4 typical, 8 maximum	Only use Group 3 in controlled Wi-Fi environments because there are no back-up frequencies to avoid interference
4	1	Best single-channel group if you experience interference
A*	Up to 9 typical, 11 maximum	Default setting
B*		Best multi-channel group if you experience interference

*Groups A and B are only for systems with a GLXD4R+ and GLXD+ frequency manager.

See **Tips to Improve Wireless System Performance** for additional information. See the GLXD+FM user guide for information about receiver groups when connected to the GLX-D+ frequency manager.

Receiver Band Modes

There are 3 band modes available for GLXD+ receivers.* The band mode options are:

- 2.4 GHz-only mode
- 5.8 GHz-only mode
- Best band mode – 2.4 and 5.8 GHz (default)

Note: region dependent

To change the band mode:

1. Press and hold the channel button while powering on the receiver. Continue to hold the channel button for approximately 5 seconds until the band selection menu opens.
2. Press the up/down gain button to select a band mode. The screen will flash momentarily and scan for the best channel to use.

Note: Linked receivers and transmitters must be able to operate in the same band. Transmitters that don't support the selected band mode will unlink from the receiver.

Gain Adjustment

Momentarily press the gain buttons on the receiver to adjust the gain of a linked transmitter in 1 dB increments. For faster gain adjustments, press and hold the gain buttons.

Tip: Monitor the audio and observe the receiver audio meter level while adjusting the gain to prevent signal overload.

Locking and Unlocking the Controls

The controls of the receiver and transmitter can be locked to prevent unauthorized setting changes or power-off. The lock status is not changed by power cycles.

Locking the Receiver Controls

Simultaneously press and hold the group and channel buttons until LK appears on the screen. Repeat to unlock.

- LK is displayed if a locked control is pressed
- UN is displayed momentarily to confirm the unlock command

Locking the Transmitter Controls

To lock directly from the transmitter:

Start with the transmitter off, then press and hold the link button while turning on the transmitter. Release the link button when the transmitter powers on to prevent an accidental factory reset. The lock icon appears on the receiver screen when locked. Repeat sequence to unlock.

To lock from the receiver front panel:

Simultaneously press and hold the group and link buttons for approximately 2 seconds until the flashing lock icon appears on the receiver screen. Repeat sequence to unlock.

Note: The transmitter status LED will flash if a locked switch is set to the off position.

Receiver Display Brightness

To adjust the receiver display brightness, press and hold the group button and any gain button simultaneously. Use the gain buttons to set the brightness of the display to low, medium, or high.

- Low = Br 1
- Medium = Br 2
- High = Br 3

Firmware

New versions of the firmware can be uploaded and installed using the Shure Update Utility tool.

Download Shure Update Utility from [shure.com](https://www.shure.com)

To update your firmware, connect the device to your computer using a USB-C cable and open the Shure Update Utility.

Resetting Components

Use the reset function if it is necessary to restore the transmitter or receiver to their factory settings.

Resetting the Receiver

Restores the receiver to the following factory settings:

- Gain level = default
- Controls = unlocked

Press and hold the link button while turning on the receiver power until the display shows RE.

Note: When reset is complete, the receiver will automatically initiate linking to search for a transmitter. Press and hold the transmitter link button within five seconds of powering-on to complete the link.

Resetting the Transmitter

Restores the transmitter to the following factory settings:

- Controls = unlocked

Press and hold the transmitter link button while turning on the transmitter until power LED turns off.

When the link button is released, the transmitter will automatically initiate linking to find an available receiver. Press the link button on an available receiver to relink.

Troubleshooting

Issue	Indicator Status	Solution
No sound or faint sound	Receiver RF LED on	Verify all sound system connections or adjust gain as needed. Verify that the receiver is connected to mixer/amplifier.

Issue	Indicator Status	Solution
	Receiver RF LED off	Turn on transmitter. Make sure the batteries are installed correctly. Link transmitter and receiver. Charge or change transmitter battery.
	Receiver display off	Make sure AC adapter is securely plugged into electrical outlet. Make sure receiver is powered on.
	Transmitter indicator LED flashing red	Charge or change transmitter battery.
	Transmitter plugged into charger.	Disconnect transmitter from charger.
Audio artifacts or dropouts	RF LED flickering or off	Change receiver and transmitter to a different group and/or channel. Identify nearby sources of interference (cell phones, Wi-Fi access points, signal processor, etc.) and shutdown or remove source. Charge or change transmitter battery. Ensure that receiver and transmitter are positioned within system parameters. System must be set up within recommended range and receiver kept away from metallic surfaces. Transmitter must be used in line of sight from receiver for optimal sound.
Distortion	OL indicator appears on receiver display	Reduce transmitter gain.
Transmitter and receiver link unsuccessful	Transmitter and receiver LEDs flash to indicate that linking started, but the link fails	Update both components to the latest firmware version.
Sound level variations when switching to different sources	N/A	Adjust transmitter gain as necessary.
Receiver/transmitter won't turn off	Transmitter LED flashing rapidly	Controls locked.
Receiver gain control cannot be adjusted	N/A	Check transmitter. Transmitter must be on to enable gain changes.

Issue	Indicator Status	Solution
Receiver controls cannot be adjusted	LK shown on receiver display when buttons are pressed	Controls locked.
Transmitter ID function does not respond	Transmitter LED flashes green 3 times	Controls locked.
Transmitter information does not appear on the receiver display	N/A	Linked transmitter is off or the receiver is not linked to a transmitter.
Transmitter powers off after 1 hour	Transmitter status LED off	Transmitters automatically power-off after 1 hour to conserve battery life if the signal from a linked receiver is not detected. Make sure that linked receiver is turned on.

Accessories

Cable, Instrument, 2.5 foot (.75 m), 4 Pin Mini Connector (TA4F) to 1/4-inch Connector.	WA302
Cable, Instrument, 2-foot (0.7m), 4-pin Mini Connector (TA4F) with Right-Angle 1/4-inch Connector, used with Shure Wireless Bodypack Transmitters	WA304
Shure Rechargeable Battery	SB904
USB-C Battery Charger	SBC10-USBC
Premium Guitar Cable TQG Threaded Connector	WA305
Power Supply	PS43

Specifications

Tuning Bandwidth

Z2	2400 - 2483.5 MHz
Z3	2400 - 2483.5 MHz and 5725 - 5850 MHz
Z4	2400 - 2483.5 MHz and 5725 - 5875 MHz
Z5	2400 - 2483.5 MHz and 5725 - 5825 MHz

Dependent on frequency band

Transmit Mode

Shure proprietary digital

RF Output Power

10 mW E.I.R.P. maximum

Ambient Temperature Range

Charging:	0°C (32°F) to 40°C (104°F)
Operating:	0°C (32°F) to 45°C (113°F)

Polarity

Positive pressure on microphone diaphragm (or positive voltage applied to tip of WA302 phone plug) produces positive voltage on pin 2 (with respect to pin 3 of lowimpedance output) and the tip of the high impedance 1/4-inch output.

Audio Frequency Response

20 Hz – 20 kHz

Dynamic Range

122 dB, A-weighted

RF Sensitivity

-88 dBm, typical

Total Harmonic Distortion

0.2%, typical

Battery Life

Up to 11.5 hours

Channel Count

Up to 4 typical, 8 optimal

2.4 GHz only: Up to 4 typical, 5 optimal

GLXD4+

Power Requirements

14.5 V – 17 V, 600 mA (efficiency level VI power supply)

Antenna Type

Dual-band ½ Wave Sleeve Dipole, non-removable

Dimensions

Antenna folded	7.2 x 4.8 x 1.6 in. (182.82 x 121.97 x 40.3 mm)
Antenna opened	7.2 x 4.8 x 7.3 in. (182.82 x 121.97 x 185.6 mm)

Weight

10.9 oz (310 g)

Housing

PC/ABS

Spurious Rejection

> 35 dB, typical

Gain Adjustment Range

-20 to 40 dB, 1 dB increments

Phantom Power Protection

Yes

AUDIO OUTPUT:**Configuration**

XLR Output	Impedance balanced
6.35 mm (1/4") output	Impedance balanced

Impedance

XLR Output	100 Ω
6.35 mm (1/4") output	100 Ω (50 Ω , Unbalanced)

Maximum Audio Output Level

XLR connector	+1 dBV
6.35 mm (1/4") connector	+8.5 dBV

Pin Assignments

XLR Output	1=ground, 2=hot, 3=cold
6.35 mm (1/4") connector	Tip=audio, Ring=no audio, Sleeve=ground

RECEIVER ANTENNA INPUT:**Impedance**50 Ω **Maximum Input Level**

-20 dBm

GLXD1+**Power Requirements**

Shure Rechargeable Li-Ion Battery	SB904
USB Power Supply (US/Canada)	SBC10-USB15WSUSTWJ

Antenna Type

Dual-band Internal Monopole

Dimensions

4.5 x 2.6 x 1.1 in. (115 x 66.94 x 28.51 mm), (H x W x D)

Weight

5.4 oz (153.1 g), without battery

Housing

Aluminum alloy, ABS plastic

Input Impedance900 k Ω **TX INPUT:****Connector**

4-pin male mini connector (TA4M)

Maximum Input Level

+8.4 dBV (7.5 Vp-p)

Configuration

Unbalanced

Pin Assignments

1	Ground (cable shield)
2	+ 5 V bias
3	Audio
4	Tied through active load to ground (on instrument adapter cable, pin 4 floats)

GLXD2+**Power Requirements**

Shure Rechargeable Li-Ion Battery	SB904
USB Power Supply (US/Canada)	SBC10-USB15WSUSTWJ

Dimensions

9.69 in. (246 mm)

Weight

SM58	9.7 oz (275 g), without battery
BETA 58	7.9 oz (225 g), without battery

BETA 87A	9.3 oz (265 g), without battery
-----------------	---------------------------------

Housing

Aluminum alloy, ABS plastic

Maximum Input Level

SM58	146 dB SPL
BETA 58	147 dB SPL
BETA 87A	147 dB SPL

SB904

Battery Type

Rechargeable Li-Ion

Nominal Capacity

2420 mAh (8.71 Wh)

Nominal Voltage

3.6 V

Dimensions

2.87 x 0.83 x 0.82 inches (72.8 x 20.96 x 20.80 mm), (H x W x D)

Weight

1.89 oz. (53.7 g)

Housing

PC/ABS

Ambient Temperature Range

Charging:	0°C (32°F) to 40°C (104°F)
Operating:	-18 °C (0 °F) to 45 °C (113 °F)

SBC10-904

DC Input Voltage

5 V

Ambient Temperature Range

Operating:

0°C (32°F) to 40°C (104°F)

SBC10-USB15W Power Supply

Input Voltage Range

100 to 240 V AC

Maximum Input Power

600 mA @ 100 V AC (full load)

Output Voltage

5 v DC @ 3 A

Maximum Output Power

15 W

SBC10-USB Power Supply**Input Voltage Range**

100 to 240 V AC

Maximum Input Power



200 mA @ 100 V AC (full load)

Output Voltage

5 v DC @ 1 A

Maximum Output Power

5 W

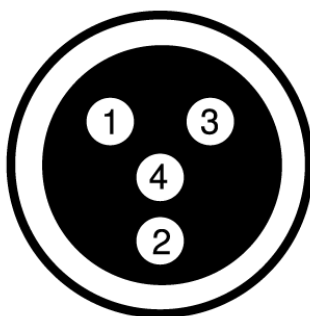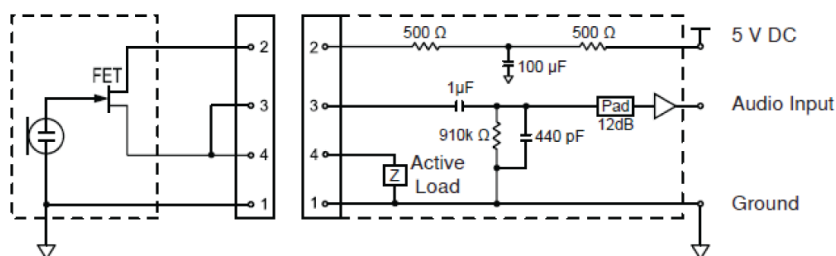Diagrams**TA4M Connector**

Frequency Tables

Z2 (2.4 GHz only)

Group 1						
Gr 1 - Ch 1	2424	2425	2442	2443	2462	2464
Gr 1 - Ch 2	2418	2419	2448	2450	2469	2471
Gr 1 - Ch 3	2411	2413	2430	2431	2476	2477
Gr 1 - Ch 4	2405	2406	2436	2437	2455	2457
Group 2						
Gr 2 - Ch 1	2423	2424	2443	2444	2473	2474
Gr 2 - Ch 2	2404	2405	2426	2427	2456	2457
Gr 2 - Ch 3	2410	2411	2431	2432	2448	2449
Gr 2 - Ch 4	2417	2418	2451	2452	2468	2469
Gr 2 - Ch 5	2437	2438	2462	2463	2477	2478
Group 3						
Gr 3 - Ch 1		2415		2416		2443
Gr 3 - Ch 2		2422		2423		2439
Gr 3 - Ch 3		2426		2427		2457
Gr 3 - Ch 4		2447		2448		2468
Gr 3 - Ch 5		2409		2451		2452
Gr 3 - Ch 6		2431		2462		2463
Gr 3 - Ch 7		2404		2473		2474
Gr 3 - Ch 8		2435		2477		2478
Group 4						
2404	2406	2408	2410	2412	2414	
2416	2418	2420	2422	2424	2426	
2428	2430	2432	2434	2436	2438	
2440	2442	2444	2446	2448	2450	
2452	2454	2456	2458	2460	2462	
2464	2466	2468	2470	2472	2474	

Group 4					
2476	2478				
Group A					
2405	2412	2418	2425	2431	2438
2444	2450	2457	2464	2471	2477
Group B					
2404	2409	2414	2419	2425	2431
2436	2441	2446	2452	2458	2463
2468	2473	2478			

Z3

Group 1 (2.4 GHz)					
Gr 1 - Ch 1	2405	2323	2441	2465	
Gr 1 - Ch 2	2411	2429	2447	2471	
Gr 1 - Ch 3	2417	2435	2453	2477	
Group 2 (2.4 GHz)					
Gr 2 - Ch 1	2404	2424	2444	2464	
Gr 2 - Ch 2	2409	2429	2449	2469	
Gr 2 - Ch 3	2414	2434	2454	2474	
Gr 2 - Ch 4	2419	2439	2459	2478	
Group 3 (2.4 GHz)					
2405	2408	2411	2414	2417	2420
2423	2426	2429	2432	2435	2438
2441	2444	2447	2450	2453	2456
2459	2462	2465	2468	2471	2474
2477					
Group A (2.4 GHz)					
2405	2411	2417	2423	2429	2435
2441	2447	2453	2459	2465	2471
2477					

Group B (2.4 GHz)					
2404	2409	2414	2419	2424	2429
2434	2439	2444	2449	2454	2459
2464	2469	2474	2478		
Group 1 (5.8 GHz)					
Gr 1 - Ch 1		5730	5760	5790	5820
Gr 1 - Ch 2		5736	5766	5796	5826
Gr 1 - Ch 3		5742	5772	5802	5832
Gr 1 - Ch 4		5748	5778	5808	5838
Gr 1 - Ch 5		5754	5784	5814	5845
Group 2 (5.8 GHz)					
Gr 2 - Ch 1		5729	5759	5789	5819
Gr 2 - Ch 2		5734	5764	5794	5824
Gr 2 - Ch 3		5739	5769	5799	5829
Gr 2 - Ch 4		5744	5774	5804	5836
Gr 2 - Ch 5		5749	5779	5809	5841
Gr 2 - Ch 6		5754	5784	5814	5846
Group 3 (5.8 GHz)					
5730	5733	5736	5739	5742	5745
5748	5751	5754	5757	5760	5763
5766	5769	5772	5775	5778	5781
5784	5787	5790	5793	5796	5799
5802	5805	5808	5811	5814	5817
5820	5823	5826	5829	5832	5835
5838	5841	5845			
Group A (5.8 GHz)					
5730	5736	5742	5748	5754	5760
5766	5772	5778	5784	5790	5796
5802	5808	5814	5820	5826	5832
5838	5845				

Group B (5.8 GHz)					
5729	5734	5739	5744	5749	5754
5759	5764	5769	5774	5779	5784
5789	5794	5799	5804	5809	5814
5819	5824	5829	5836	5841	5846

74

Group 1 (2.4 GHz)					
Gr 1 - Ch 1	2405	2323	2441	2465	
Gr 1 - Ch 2	2411	2429	2447	2471	
Gr 1 - Ch 3	2417	2435	2453	2477	
Group 2 (2.4 GHz)					
Gr 2 - Ch 1	2404	2424	2444	2464	
Gr 2 - Ch 2	2409	2429	2449	2469	
Gr 2 - Ch 3	2414	2434	2454	2474	
Gr 2 - Ch 4	2419	2439	2459	2478	
Group 3 (2.4 GHz)					
2405	2408	2411	2414	2417	2420
2423	2426	2429	2432	2435	2438
2441	2444	2447	2450	2453	2456
2459	2462	2465	2468	2471	2474
2477					
Group A (2.4 GHz)					
2405	2411	2417	2423	2429	2435
2441	2447	2453	2459	2465	2471
2477					
Group B (2.4 GHz)					
2404	2409	2414	2419	2424	2429
2434	2439	2444	2449	2454	2459
2464	2469	2474	2478		

Group 1 (5.8 GHz)					
Gr 1 - Ch 1	5730	5766	5802	5838	
Gr 1 - Ch 2	5736	5772	5808	5844	
Gr 1 - Ch 3	5742	5778	5814	5851	
Gr 1 - Ch 4	5748	5784	5820	5858	
Gr 1 - Ch 5	5754	5790	5826	5864	
Gr 1 - Ch 6	5760	5796	5832	5870	
Group 2 (5.8 GHz)					
Gr 2 - Ch 1	5729	5764	5799	5834	
Gr 2 - Ch 2	5734	5769	5804	5839	
Gr 2 - Ch 3	5739	5774	5809	5850	
Gr 2 - Ch 4	5744	5779	5814	5856	
Gr 2 - Ch 5	5749	5784	5819	5861	
Gr 2 - Ch 6	5754	5789	5824	5866	
Gr 2 - Ch 7	5759	5794	5829	5871	
Group 3 (5.8 GHz)					
5730	5733	5736	5739	5742	5745
5748	5751	5754	5757	5760	5763
5766	5769	5772	5775	5778	5781
5784	5787	5790	5793	5796	5799
5802	5805	5808	5811	5814	5817
5820	5823	5826	5829	5832	5835
5838	5841	5844	5847	5851	5855
5858	5861	5864	5867	5870	
Group A (5.8 GHz)					
5730	5736	5742	5748	5754	5760
5766	5772	5778	5784	5790	5796
5802	5808	5814	5820	5826	5832
5838	5844	5851	5858	5864	5870

Group B (5.8 GHz)					
5729	5734	5739	5744	5749	5754
5759	5764	5769	5774	5779	5784
5789	5794	5799	5804	5809	5814
5819	5824	5829	5834	5839	5844
5850	5856	5861	5866	5871	

Z5

Group 1 (2.4 GHz)					
Gr 1 - Ch 1		2405	2323	2441	2465
Gr 1 - Ch 2		2411	2429	2447	2471
Gr 1 - Ch 3		2417	2435	2453	2477
Group 2 (2.4 GHz)					
Gr 2 - Ch 1		2404	2424	2444	2464
Gr 2 - Ch 2		2409	2429	2449	2469
Gr 2 - Ch 3		2414	2434	2454	2474
Gr 2 - Ch 4		2419	2439	2459	2478
Group 3 (2.4 GHz)					
2405	2408	2411	2414	2417	2420
2423	2426	2429	2432	2435	2438
2441	2444	2447	2450	2453	2456
2459	2462	2465	2468	2471	2474
2477					
Group A (2.4 GHz)					
2405	2411	2417	2423	2429	2435
2441	2447	2453	2459	2465	2471
2477					
Group B (2.4 GHz)					
2404	2409	2414	2419	2424	2429
2434	2439	2444	2449	2454	2459
2464	2469	2474	2478		

Group 1 (5.8 GHz)					
Gr 1 - Ch 1		5730	5754	5778	5802
Gr 1 - Ch 2		5736	5760	5784	5808
Gr 1 - Ch 3		5742	5766	5790	5814
Gr 1 - Ch 4		5748	5772	5796	5820
Group 2 (5.8 GHz)					
Gr 2 - Ch 1		5729	5753	5778	5803
Gr 2 - Ch 2		5733	5758	5783	5808
Gr 2 - Ch 3		5738	5763	5788	5813
Gr 2 - Ch 4		5743	5768	5793	5817
Gr 2 - Ch 5		5748	5773	5798	5821
Group 3 (5.8 GHz)					
5730	5733	5736	5739	5742	5745
5748	5751	5754	5757	5760	5763
5766	5769	5772	5775	5778	5781
5784	5787	5790	5793	5796	5799
5802	5805	5808	5811	5814	5817
5820					
Group A (5.8 GHz)					
5730	5736	5742	5748	5754	5760
5766	5772	5778	5784	5790	5796
5802	5808	5814	5820		
Group B (5.8 GHz)					
5729	5734	5739	5744	5749	5754
5759	5764	5769	5774	5779	5784
5789	5794	5799	5804	5809	5814
5820					

IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Allow sufficient distances for adequate ventilation and install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as open flames, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not place any open flame sources on the product.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.
12. USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT expose the apparatus to dripping and splashing. DO NOT put objects filled with liquids, such as vases, on the apparatus.
16. The MAINS plug or an appliance coupler shall remain readily operable.
17. The airborne noise of the Apparatus does not exceed 70dB (A).
18. Apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
19. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
20. Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.
21. Operate this product within its specified operating temperature range.

	This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
	This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



In the European Union and the United Kingdom, this label indicates that the batteries in this product should be collected separately and not be disposed of with household waste. Substances in batteries can have a potential negative impact on health

and environment and you have a role in recycling waste batteries thus contributing to the protection, preservation, and improvement of the quality of the environment. You should contact your local authority or retailer for details of the collection and recycling schemes available.

Please consider the environment, electric products and packaging are part of regional recycling schemes and do not belong to regular household waste.

WARNING

- Battery packs may explode or release toxic materials. Risk of fire or burns. Do not open, crush, modify, disassemble, heat above 140°F (60°C), or incinerate.
- Follow instructions from manufacturer
- Only use Shure charger to recharge Shure rechargeable batteries
- WARNING: Danger of explosion if battery incorrectly replaced. Replace only with same or equivalent type.
- Never put batteries in mouth. If swallowed, contact your physician or local poison control center
- Do not short circuit; may cause burns or catch fire
- Do not charge or use battery packs other than Shure rechargeable batteries
- Dispose of battery packs properly. Check with local vendor for proper disposal of used battery packs.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like
- Do not immerse the battery in liquid such as water, beverages, or other fluids.
- Do not attach or insert battery with polarity reversed.
- Keep away from small children.
- Do not use abnormal batteries.
- Pack the battery securely for transport.

Note:

- This equipment is intended to be used in professional audio applications.
- EMC conformance is based on the use of supplied and recommended cable types. The use of other cable types may degrade EMC performance.
- Use this battery charger only with the Shure charging modules and battery packs for which it is designed. Use with other than the specified modules and battery packs may increase the risk of fire or explosion.
- Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate this equipment.

Information to the user

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause interference with radio and television reception.

Notice: The FCC regulations provide that changes or modifications not expressly approved by Shure Incorporated could void your authority to operate this equipment.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Certified under FCC Part 15.

Shure has determined that this product is a Class B harmonized product. The following sections provide country-specific EMC/EMI or product safety information.

Certifications

FCC ID: DD4GLXD4RZ3, DD4GLXD1Z3, DD4GLXD2Z3 **IC:** 616A-GLXD4RZ3, 616A-GLXD1Z3, 616A-GLXD2Z3

CAN ICES-003 (B)/NMB-003(B)

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The antenna(s) must be installed such that a minimum separation distance of 20 cm is maintained between the radiator (antenna) and all persons at all times.

La ou les antennes doivent être installées de telle façon qu'une distance de séparation minimum de 20 cm soit maintenue entre le radiateur (antenne) et toute personne à tout moment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications. Certified by ISED in Canada under RSS-247 and RSS-GEN.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. L'utilisateur final doit suivre les instructions spécifiques pour satisfaire les normes. Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur.

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.



Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL – <http://www.anatel.gov.br>.

해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음

1. 取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
2. 應避免影響附近雷達系統之操作。
3. 高增益指向性天線只得應用於固定式點對點系統。

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.

Paraguay Distributor: Microsystems S.R.L., Senador Long 664 c/Dr. Lilio, Asunción, Paraguay

Connection and use of this communications equipment is permitted by the Nigerian Communications Commission.

運用に際しての注意

この機器の使用周波数帯では、電子レンジ等の産業・科学・医療用機器のほか工場の製造ライン等で使用されている移動体識別用の構内無線局（免許を要する無線局）及び特定小電力無線局（免許を要しない無線局）並びにアマチュア無線局（免許を要する無線局）が運用されています。

1. この機器を使用する前に、近くで移動体識別用の構内無線局及び特定小電力無線局並びにアマチュア無線局が運用されていないことを確認して下さい。
2. 万一、この機器から移動体識別用の構内無線局に対して有害な電波干渉の事例が発生した場合には、速やかに使用周波数を変更するか又は電波の発射を停止した上、下記連絡先にご連絡頂き、混信回避のための処置等（例えば、パーティションの設置など）についてご相談して下さい。
3. その他、この機器から移動体識別用の特定小電力無線局あるいはアマチュア無線局に対して有害な電波干渉の事例が発生した場合など何かお困りのことが起きたときは、保証書に記載の販売代理店または購入店へお問い合わせください。代理店および販売店情報は Shure 日本語ウェブサイト <http://www.shure.co.jp> でもご覧いただけます。

現品表示記号について

2.4 XX 8

現品表示記号は、以下のことを表しています。この無線機器は 2.4GHz 帯の電波を使用し、変調方式は「その他」の方式、想定干渉距離は 80m です。2,400MHz～2,483.5MHz の全帯域を使用し、移動体識別装置の帯域を回避することはできません。

Waste Electrical and Electronic Equipment (WEEE) Directive



In the European Union and the United Kingdom, this label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

Registration, Evaluation, Authorization of Chemicals (REACH) Directive

REACH (Registration, Evaluation, Authorization of Chemicals) is the European Union (EU) and the United Kingdom (UK) chemical substances regulatory framework. Information on substances of very high concern contained in Shure products in a concentration above 0.1% weight over weight (w/w) is available upon request.

CE Notice:

Hereby, Shure Incorporated declares that this product with CE Marking has been determined to be in compliance with European Union requirements. The full text of the EU declaration of conformity is available at the following site: <https://www.shure.com/en-EU/support/declarations-of-conformity>.

Authorized European Importer / Representative:

Shure Europe GmbH
 Department: Global Compliance
 Jakob-Dieffenbacher-Str. 12
 75031 Eppingen, Germany
 Phone: +49-7262-92 49 0
 Fax: +49-7262-92 49 11 4
 Email: EMEAsupport@shure.de

UKCA Notice:

Hereby, Shure Incorporated declares that this product with UKCA Marking has been determined to be in compliance with UK-CA requirements. The full text of the UK declaration of conformity is available at the following site: <https://www.shure.com/en-GB/support/declarations-of-conformity>.

Authorized UK Importer / Representative:

Shure UK Limited
 Unit 2, The IO Centre, Lea Road,
 Waltham Abbey, Essex, EN9 1 AS, UK

- (一) 本产品符合“微功率短距离无线电发射设备目录和技术要求”的具体条款和使用场景；
- (二) 不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率（包括额外加装射频功率放大器），不得擅自更改发射天线；
- (三) 不得对其他合法的无线电台（站）产生有害干扰，也不得提出免受有害干扰保护；
- (四) 应当承受辐射射频能量的工业、科学及医疗（ISM）应用设备的干扰或其他合法的无线电台（站）干扰；
- (五) 如对其他合法的无线电台（站）产生有害干扰时，应立即停止使用，并采取措施消除干扰后方可继续使用；
- (六) 在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫星地球站（含测控、测距、接收、导航站）等军民用无线电台（站）、机场等的电磁环境保护区域内使用微功率设备，应当遵守电磁环境保护及相关行业主管部门的规定。

部件名称	有害物质					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电路模块	X	○	○	○	○	○
金属模块	X	○	○	○	○	○
线缆及其组件	X	○	○	○	○	○
外壳	○	○	○	○	○	○
电源适配器*	X	○	○	○	○	○
电池组*	X	○	○	○	○	○
本表格依据 SJ/T11364 的规定编制。 O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定的限量要求以下。 X: 表示该有害物质至少在该部件某一均质材料中的含量超出 GB/T26572 规定的限量要求。 注：本产品大部分的部件采用无害的环保材料制造，含有有害物质的部件皆因全球技术发展水平的限制而无法实现有害物质的替代。 *:表示如果包含部分						



WL93 SM93

Omnidirectional Condenser Lavalier Micro- phone

Online user guide for WL93 and SM93 omnidirectional lavalier microphones.
Version: 2 (2019-L)

Table of Contents

WL93 SM93 Omnidirectional Condenser Lavalier Microphone	3	USING OTHER PREAMPLIFIERS OR BODY-PACKS	5
General Description	3	Specifications	6
FEATURES	3	WL93 Specifications	6
VARIATIONS	4	SM93 Specifications	7
CONNECTIONS	4	Furnished Accessories	10
MOUNTING THE MICROPHONE	4	Optional Accessories	11
MOUNTING THE SM93 PREAMPLIFIER	5	Certifications	11
WINDSCREENS	5	Eligible to bear CE Marking. Conforms to European EMC Directive 89/336/EEC. Meets applicable tests and performance criteria in European Standard EN55103 (1996) parts 1 and 2, for residential (E1) and light industrial (E2) environments. The CE Declaration of Conformity can be obtained from: www.shure.com/europe/compliance Authorized European representative: Shure Europe GmbH Headquarters Europe, Middle East & Africa Department: EMEA Approval Jakob-Dieffenbacher-Str. 12 75031 Eppingen, Germany Phone: +49-7262-92 49 0 Fax: +49-7262-92 49 11 4 Email: info@shure.de	11
POWERING THE SM93 PREAMPLIFIER	5		
SM93 PREAMPLIFIER IMPEDANCE	5		


WL93 SM93

Omnidirectional Condenser Lavalier Microphone

General Description

Shure Model WL93 and SM93 Microphones are omnidirectional, subminiature, lavalier electret condenser microphones. Their visually unobtrusive design and tailored frequency response make them ideal for body-worn applications in TV broadcasting, theater, and sound reinforcement. Both the Model WL93 and the SM93 feature a small microphone element that provides full, clear sound comparable to that of much larger microphones.

The WL93, intended for wireless use, connects directly to a Shure wireless body-pack transmitter. The SM93, intended for wired applications, includes a preamplifier assembly for connection to three-pin professional (XLR) audio connectors. The SM93 requires phantom power, and operates over a range of 11 to 52 Vdc, covering both DIN and IEC phantom power standards.

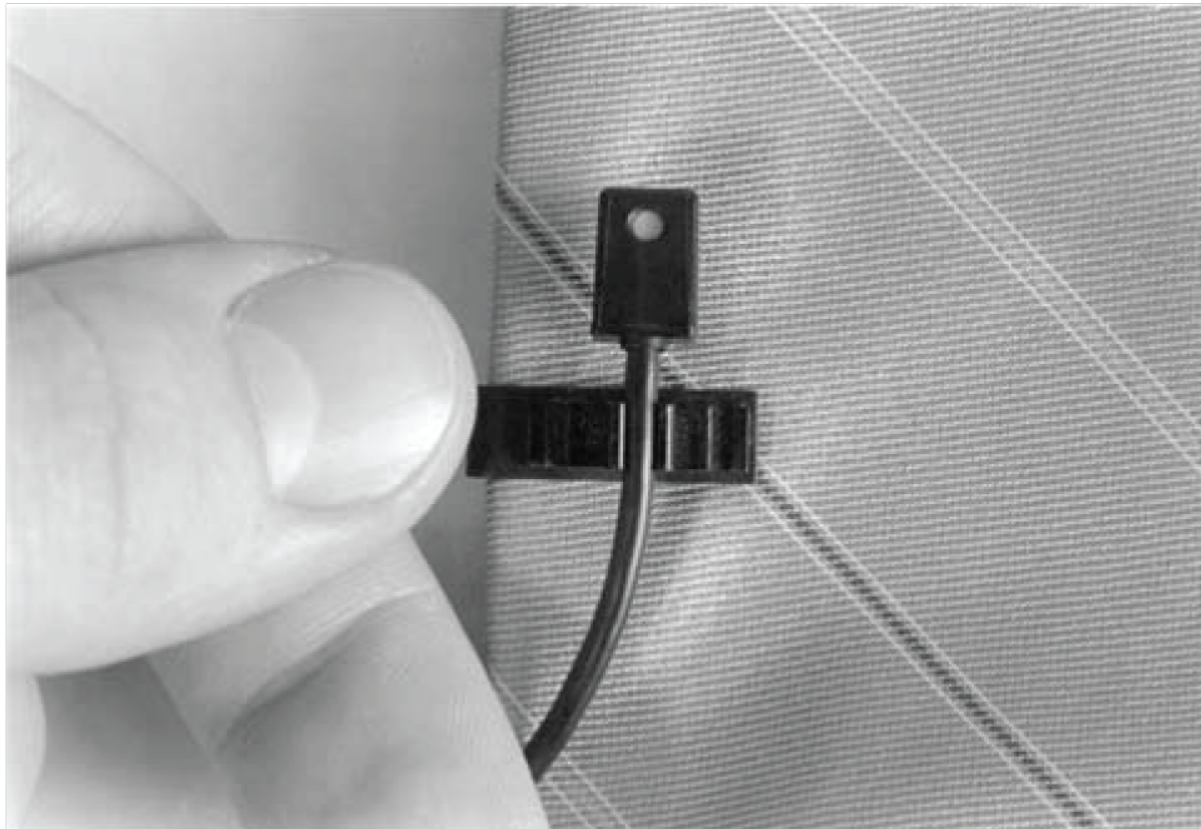

FEATURES

- Subminiature lavalier design; ideal size for theater, television broadcasting, video, film, and sound reinforcement
- Small, inconspicuous mounting hardware
- Full, clear sound comparable to larger microphones

- Smooth extended frequency response with presence rise specially tailored for chest-worn microphone operation
- Controlled low-frequency rolloff reduces low-frequency clothing and room noise
- Low distortion, wide dynamic range
- Uniform omnidirectional polar pattern
- Preamplifier assembly (SM93) can be pocketed, strapped to the body, or clipped to belt or waistband
- Wide-range phantom powering (SM93) accepts all commonly used voltages

VARIATIONS

Version	Cable	Color
WL93	1.2 m (4 ft.)	Black matte microphone and cable with black accessories
SM93		
WL93-6	1.8 m (6 ft.)	
WL93T	1.2 m (4 ft.)	Tan matte microphone and cable with tan accessories
WL93-6T	1.8 m (6 ft.)	

CONNECTIONS


Connect the male, four-pin miniature connector (TA4M) at the end of the 93 microphone cable to the supplied preamplifier (SM93) or to a Shure wireless body-pack (WL93).

NOTE: Do not connect the 93 microphone directly to a mixer without using the supplied preamplifier or body-pack.

MOUNTING THE MICROPHONE

The tie clips and mounting bracket provided with the WL93 and SM93 allow the user to wear the microphone in a variety of ways. To achieve optimum pickup, attach the microphone to the user's chest. You can also obtain high-quality sound when the microphone is worn in the hair, sewn into clothing, or attached to an acoustic instrument such as a guitar.

- **Tie Clip.** A spring-loaded clasp attaches easily to a necktie, lapel, blouse, or shirt. Snap the microphone into the clip's mounting bracket and attach the clip to an article of clothing. The dual tie clip supplied with the SM93 provides simultaneous mounting of two microphones.
- **Sew-On Bracket.** Sew the supplied sew-on mounting bracket directly to a garment (Figure 1). Use dark or light thread as necessary to match the color of the bracket.

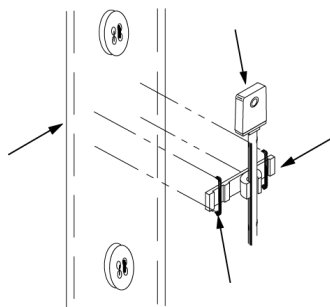**SEW-ON MOUNTING**

MOUNTING THE SM93 PREAMPLIFIER

Use the spring-loaded belt clip to hold the amplifier to a belt, skirt or trouser waistband, or inside pocket.

WINDSCREENS

An acoustic foam windscreen is supplied to help reduce undesirable wind noise associated with outdoor miking.

POWERING THE SM93 PREAMPLIFIER


Power the preamplifier supplied with the SM93 using any phantom supply providing 11 to 52 Vdc, such as the Shure Model PS1A Power Supply.

SM93 PREAMPLIFIER IMPEDANCE

Use a minimum load impedance of 800 Ω or greater for maximum signal handling and minimum distortion. Load as low as 150 Ω can be used, but a reduction in output clipping level will result. Note that the power supply itself may add loading (3300 Ω in the Shure PS1A) to the microphone.

USING OTHER PREAMPLIFIERS OR BODY-PACKS

If connecting the 93 microphone to anything OTHER than a Shure wireless body-pack or the preamplifier supplied with the SM93, make sure it provides a regulated +5 Vdc source (40 μ A minimum) at pin 2 of the microphone connector, as shown in "MICROPHONE WIRING DIAGRAM" Figure.

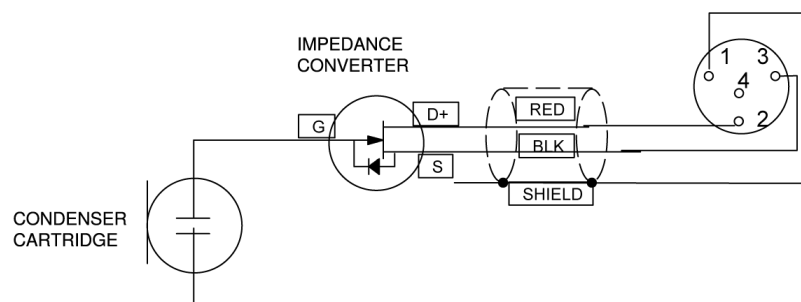

MICROPHONE WIRING DIAGRAM

Specifications

WL93 Specifications

Type

Condenser (electret bias)

Frequency Response

50 to 20,000 Hz

Polar Pattern

Omnidirectional , uniform with frequency

Output Impedance

3000 Ω

Sensitivity

open circuit voltage: -38 dBV/Pa(13 mV)

Clipping Level

at 1 kHz

0.25 V at 120 dB

Maximum SPL

120 dB

Dynamic Range (Maximum SPL, A-weighted)

102 dB

Self Noise

18 dB typical , A-Weighted

Signal-to-Noise Ratio

76 dB at 94 dB SPL (IEC 651)

Polarity

Positive pressure on microphone diaphragm produces positive voltage on pins 3 and 4 with respect to pin 1 (ground)*

Power Requirements

2 to 10 V; 5 V nominal (pin 2 to pins 3 and 4); Current Drain 40 μ A typical

Environmental Conditions

Operating Temperature	: -18 to 57°C (0 to 135°F)
Storage Temperature	: -29 to 74°C (-20 to 165°F)

Cable

Black 1.27 m (4.17 ft), attached, two-conductor, shielded, terminated by miniature Connector Type TA4F
(: Tan 1.27 m [4.17 ft])

Housing

Microphone: Black ABS thermoplastic case with stainless-steel-mesh grille

Weight

Microphone: 16 g (0.57 oz.)

*Produces positive voltage at pin 2 of Shure L4/EC4 wireless receiver three-pin connector.

SM93 Specifications

Type

Condenser (electret bias)

Frequency Response

80 to 20,000 Hz, dB/octave below 100 Hz

Polar Pattern

Omnidirectional, uniform with frequency

Output Impedance

rated at 150 Ω (90 Ω actual) Recommended minimum load impedance: 800 Ω (May be used with loads as low as 150 Ω with reduced clipping level)

Sensitivity

open circuit voltage: -43 dBV/Pa (7.0 mV)

Clipping Level

at 1 kHz

-18 dBV (0.13 V) minimum

Maximum SPL

120 dB

Dynamic Range (Maximum SPL, A-weighted)

98 dB

Self Noise

A-Weighted	22 dB typical
weighted per DIN	26 dB 45 405

Hum Pickup

-4 dB equivalent SPL in a 1millioersted field (60 Hz)

Signal-to-Noise Ratio

72 dB at 94 dB SPL (IEC 651)

Polarity

Positive pressure on microphone diaphragm produces positive voltage on pin 2 relative to pin 3 of preamplifier output cable connector

Power Requirements

11 to 52 V DC phantom . Protected against reverse voltage application . Current Drain 0.33 mA

Environmental Conditions

Operating Temperature	: -18 to 57°C (0 to 135°F)
Storage Temperature	: -29 to 74°C (-20 to 165°F)

Cable

Black 1.27 m (4.17 ft), attached , two-conductor , shielded , terminated by miniature Connector Type (TA4F)


Housing

Microphone	Black ABS thermoplastic case with stainless-steel-mesh grille
Preamplifier	Steel case with non-reflective black finish, black-chrome belt clip


Weight

Microphone	16 g (0.57 oz.)
Preamplifier	: 118 g (4.17 oz.)

^[1] 1 Pascal = 94 dB SPL

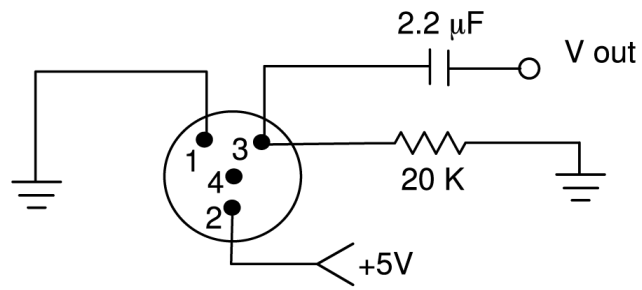


TEST CIRCUIT

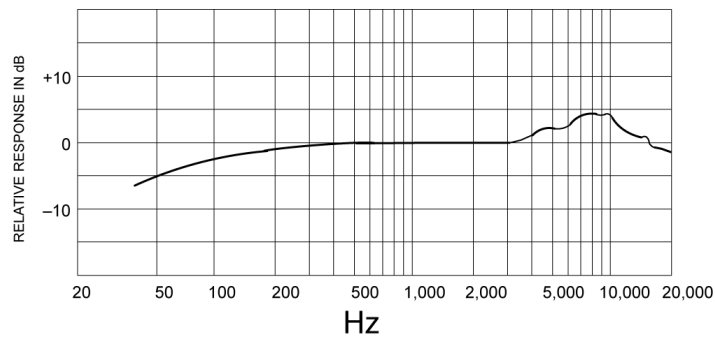


TYPICAL FREQUENCY RESPONSE

SM93/WL93 MICROPHONE

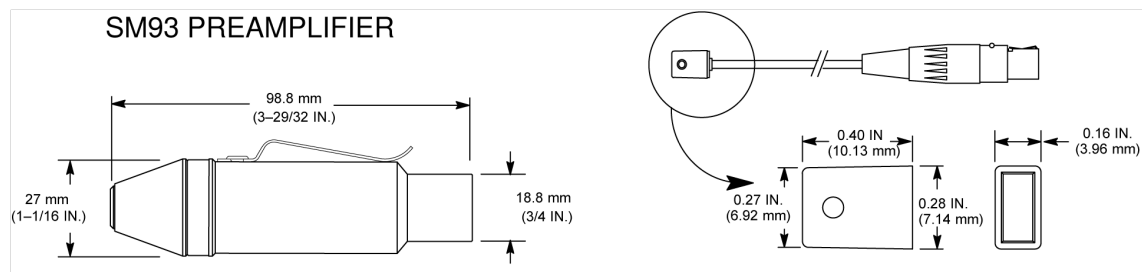

OVERALL DIMENSIONS

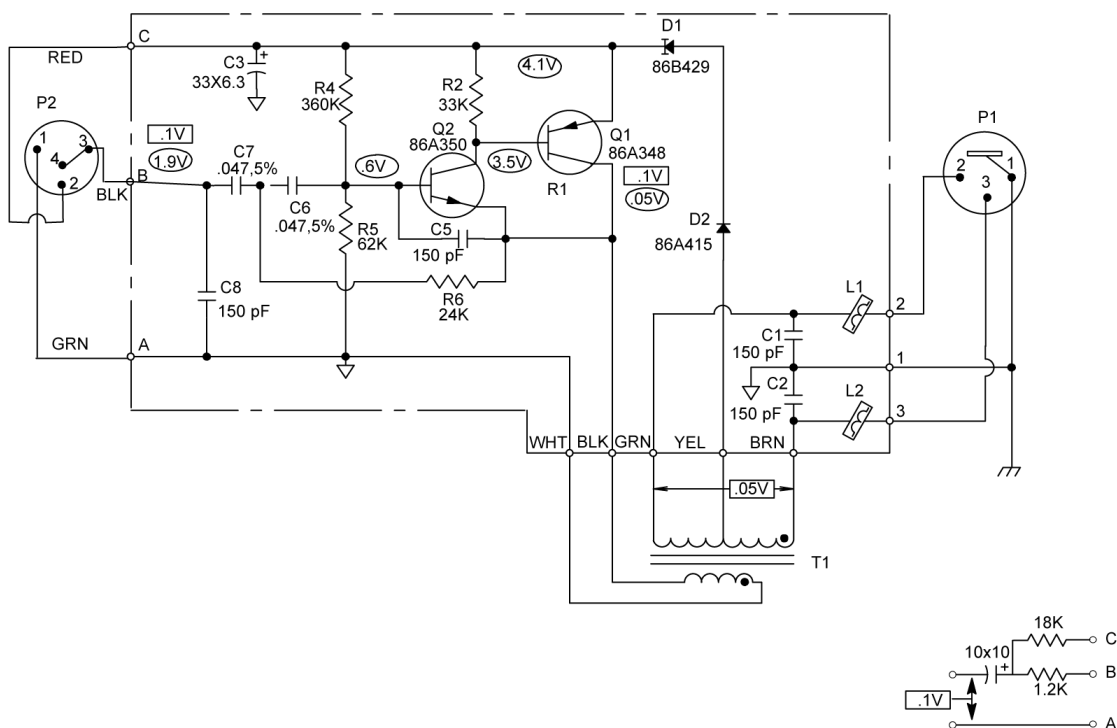

SM93 PREAMPLIFIER CIRCUIT DIAGRAM

NOTES:

1. ALL RESISTORS 5%, 1/8 WATT, UNLESS OTHERWISE SPECIFIED
2. ALL NON-POLAR CAPACITORS IN μF , TOLERANCE 10% AND 50 VOLTS OR MORE UNLESS OTHERWISE SPECIFIED. POLARIZED CAPACITORS SHOWN IN $\mu\text{F} \times \text{VOLTS}$. T1 D.C. VOLTAGE A.C. VOLTAGE
3. D.C. VOLTAGES MEASURED WITH 11 MEG INPUT VOLTMETER; A.C. VOLTAGE MEASURED WITH 1 MEG INPUT VOLTMETER. VALUES SHOWN ARE TYPICAL AND MAY VARY $\pm 20\%$.
4. THE FOLLOWING SYMBOLS DENOTE: CASE GROUND CIRCUIT BOARD GROUND 1 3 2 RED BLK GRN 4 P2
5. POWER SOURCE IS 21 VDC THROUGH TWO 1.691 KOHM, 1% RESISTORS FROM SUPPLY TO PINS 2 AND 3 OF CONNECTOR P1.
6. INPUT SIGNAL OF 0.1V AT 2 KHZ APPLIED TO CIRCUIT BELOW:

Furnished Accessories

Preamplifier (SM93)	90A4360
Black Foam Windscreens (4) for SM93 and WL93*	RK355WS
Black Single Mount Tie-Clips (2) for SM93 and WL93*	RK354SB
Double Mount Tie Clips (2) for SM93 and WL93	RK307DB

Tan Foam Windscreens (2) and Tie Clips (2) for SM93 and WL93**	RK304T
Black Sew-on Mounting Bracket (WL93, SM93)	65A2068A
Tan Sew-on Mounting Bracket (WL93T)	65A2068B
Carrying/Storage Bag	95A2313

*Replacements furnished in multiples of 4.

**RK304 includes 2 tie clips and 2 windscreens.

Optional Accessories

In-Line On/Off Switch	WA360
------------------------------	-------

Certifications

Eligible to bear CE Marking. Conforms to European EMC Directive 89/336/EEC. Meets applicable tests and performance criteria in European Standard EN55103 (1996) parts 1 and 2, for residential (E1) and light industrial (E2) environments.

The CE Declaration of Conformity can be obtained from:

www.shure.com/europe/compliance

Authorized European representative:

Shure Europe GmbH

Headquarters Europe, Middle East & Africa

Department: EMEA Approval

Jakob-Dieffenbacher-Str. 12

75031 Eppingen, Germany

Phone: +49-7262-92 49 0

Fax: +49-7262-92 49 11 4

Email: info@shure.de