

PRO-ELEC



2.0kW FAN HEATER

Model: PELL0410

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before use and retain for future reference.

- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- To avoid fire or shock hazard, plug the appliance directly into a suitable 220-240V AC electrical outlet. DO NOT use external timer, separate remote control system, and extension cable or external adaptor with the appliance. Do not overload the circuit.
- This heater must not be located immediately below a socket-outlet.
- To disconnect the appliance, turn the control switch to "OFF" (Position 'O') BEFORE removing the plug from main power outlet.
- When unplugging, be sure to pull by the plug and not the cord.
- Always unplug the appliance when not in use.
- Discontinue use if plug or outlet becomes hot. It is recommended that the outlet be checked and replaced if plug or outlet is hot to touch.
- Do not abuse or damage the power cord. Fully unwind the cord before use as a coiled cord may overheat. Do not allow the supply cord to touch hot surfaces.
- DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Position the cord away from traffic area and where it will not cause a trip hazard.
- DO NOT operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner.
- If the supply cord is damaged DO NOT attempt to service this appliance yourself. Return it to a qualified service agent for mechanical adjustment, or repair.
- Ensure that the supply cord is kept away from heat or sharp edges that could cause damage.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust vent opening as this may cause an electric shock or fire, or damage to the appliance.


WARNING: In order to avoid overheating, DO NOT COVER the heater.

- To prevent a possible fire, DO NOT block air intakes or exhaust vents in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
- DO NOT move the appliance when it is operating. Only move the appliance when cool.
- The appliance is hot when in use. To avoid burns, DO NOT touch any hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
- This appliance is not intended for use by persons (INCLUDING CHILDREN) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance is not intended for use in bathrooms, laundry areas and similar indoor location where this it may come in contact with water.
- Do not immerse any part of this appliance or supply cord in water.
- DO NOT use in areas where gasoline, paint, or flammable liquids are used or stored.
- This appliance is designed for indoors ONLY.

OPERATION

- Turn the thermostat clockwise until it clicks.
- The heater has three settings: “Fan”, “I” and “II”.
- The “Fan” setting has no heating and just provides ventilation.
- Turn the dial to “I” for low power heating.
- Turn the dial to “II” for full power heating.
- To start the heater oscillating turn the switch on the rear of the heater base to “I” position. The heater will swing from side to side. Switch “O” to stop.
- Turn the right hand dial to “O” to switch the heater off again.

NOTE: The heater may emit a small amount of smoke and odour when used for the first time. This is normal and caused by the lubricant on the heating element during the production process. It is non-toxic. If the smoke and odour are excessive, use the heater in a ventilated area. The smoke and odour should disappear after a few minutes of use.

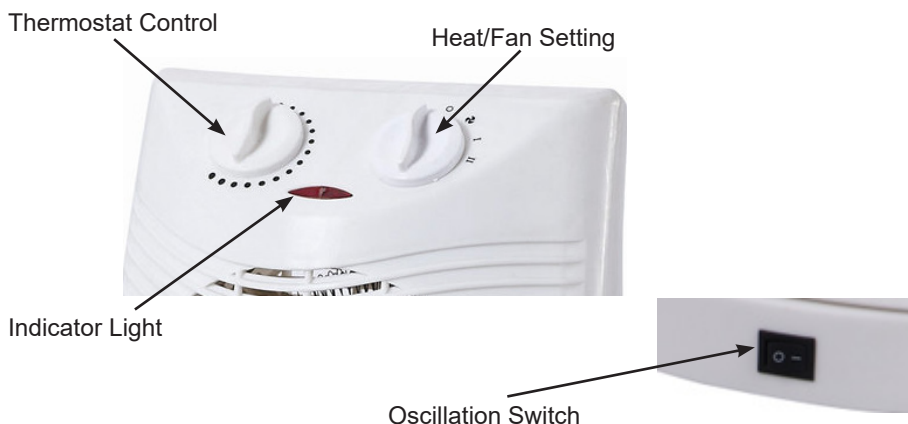

REGULATING THE THERMOSTAT

- If the heater switches off before the room reaches the desired level, turn the thermostat clockwise to increase the temperature setting.
- The heater will switch on and off automatically to maintain this temperature.

WARNING: Do not leave the appliance switched on and unattended at any time.

TROUBLESHOOTING

- The heater is fitted with a safety device which will switch off the heater in the event of accidental overheating (e.g. obstruction of intakes and outlets grilles etc.). To reset the appliance, disconnect the heater from the main power and allow it to cool down, then remove any obstructions.
- If the appliance will not operate, check that the surface is level and the tilt switch is being depressed.

CLEANING & MAINTENANCE

- Always remove the plug from the socket-outlet and allow the heater to cool down before cleaning it.
- Clean the air inlet/outlet grilles frequently, using a soft, dry cloth, to prevent dust building up.
- Do not use any chemicals, abrasives or solvents that may damage the heater.
- Do not allow water to enter the appliance.
- To store the heater, place it in a clean, dry environment, ensuring it is protected from dust.

DO NOT disassemble this appliance as there are no user serviceable parts inside.

Any attempt to do so will void any warranty.

SPECIFICATIONS

Model	PELL0410
Rated Voltage	220-240VAC
Frequency	50-60Hz
Rated Power	1800-2000W
Heat Output	
Nominal heat output P_{nom}	1.8-2.0kW
Min heat output P_{min}	0.9kW
Max heat output P_{max}	2.0kW
Auxiliary electricity consumption	
At nominal heat output $e_{l_{max}}$	0.000kW
At minimum heat output $e_{l_{min}}$	0.000kW
In standby mode $e_{l_{sb}}$	0.000kW
With mechanical thermostat room temperature control	YES



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT

When this product has reached the end of its life it must be treated as Waste Electrical & Electronics Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

Made in China
PO Box 13362 Dublin 2
PR2 9PP

As is typical for all portable heaters -
This product is only suitable for well insulated spaces or occasional use.

Man Ref 1.1