



T370B Wall Mounted 30cm (12") Radio Controlled Clock

Thank you for buying your Sutton Home and Garden Clock. Before use please check over the product for any signs of damage. Please note this clock is only suitable for the UK and Eire.

The radio controlled function means that the time on this clock is automatically set by a time code transmitted by a radio transmitter, the clock will always display the time accurately and will automatically update in spring when the clocks go forward by one hour and in Autumn when the clocks go back by one hour.

OPERATION

How to use the radio controlled (automatic time setting) function:

- 1. Insert 1 x 1.5V AA battery into the battery slot
- 2. If the clock hands begin to move quickly, wait until they come to a stop
- 3. Press and hold the [REC] (3) button for 5 seconds, the clock hands will begin to move quickly before stopping at 12:00
- 4. The clock will then pause for up to 10 minutes, before setting itself to the correct time (GMT)

How to adjust the time:

- 1. Press and hold the [SET] (1) button, the minute hand will begin to move
- 2. Release the [SET] (1) button when the desired time is reached

How to reset the clock:

1. Press and hold the [RESET] (2) button for 5 seconds



MOUNTING YOUR CLOCK

This clock is fitted with a key slot for mounting onto a screw head (not supplied). Care should be taken not to screw into electric cables or gas and water pipes or other such hazards. Make sure the screw head is small enough to fit through the bottom of the key slot but large enough to secure the clock when dropped into place. Make sure the screw is firmly fitted to the wall and enough of the screw head is showing to allow the clock to be slotted onto it.

CLEANING YOUR CLOCK

Only clean with a slightly damp cloth. Avoid using strong detergents or other such cleaning agents. Dust can be removed with a soft brush such as a paint brush.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste.

Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of one year.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816, between 8.30 am and 1 pm, Monday to Friday

Electrovision Ltd., Lancots Lane, Sutton, St. Helens, Merseyside. WA9 3EX Website: www.electrovision.co.uk

Sutton Home and Garden is a Brand of Electrovision Ltd.