

PRO-ELEC



1. Battery cover
2. Power button
3. Focus Adjuster

SMALL HIGH POWER TORCH - FOCUS ADJUSTABLE PELL0514

OPERATION

- Press the red button on the end of the torch to switch the LED lamp on or off.
- Press again to switch through three modes 100%, 50% and flash.
- To focus the beam hold the body of the torch firmly and rotate the top focus adjuster section.

BATTERY REPLACEMENT

- Unscrew the battery cover, remove the battery holder and insert 4 x AAA batteries noting correct polarity as marked on the holder. Refit the holder in the direction of the marked arrow. Replace the battery cover.
 - Always replace all batteries of the same type or equivalent at the same time.
 - Never dispose of batteries in a fire.
- Remove batteries if the item is not to be used for long periods.

SPECIFICATIONS

Power	1.5VDC 4 x AAA batteries
LED (non replaceable)	1 x 6W
Light output (approx)	400 lumens
Dimensins (mm)	39 dia x 137



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT

When this product has reached the end of its life it must be treated as Waste Electrical & Electronics Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.



Made in China
Faraday Drive, Preston, PR2 9PP (UK)
Riverside One, Sir John Rogerson Quay, Dublin 2 (EU)
Man Ref V1.0