

EQUINOX

Fusion Reflecta User Manual



Order code: EQLED079

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

- Before your initial start-up, please make sure that there is no damage caused during transportation.
- Should there be any damage, consult your dealer and do not use the equipment.
- To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.
- Please note that damages caused by user modifications to this equipment are not subject to warranty.



IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power cable come into contact with other cables. Handle the power cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the equipment and do not modify the unit.
- Do not connect this equipment to a dimmer pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available mains supply voltage is between 100~240V AC, 50/60Hz.
- Make sure that the power cable is never crimped or damaged. Check the equipment and the power cable periodically.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not connect power or switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- Never touch the fixture during operation as it may be hot.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately and have a qualified engineer inspect the equipment before operating again.
- If your product fails to function correctly, stop use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Pro Light dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- This lighting fixture is for professional use only - it is not designed for or suitable for household use. The product must be installed by a qualified technician in accordance with local territory regulations. The safety of the installation is the responsibility of the installer. The fixture presents risks of severe injury or death due to fire hazards, electric shock and falls.
- WARRANTY: One year from date of purchase.

This fixture falls under Protection Class 1, therefore it has to be connected to a mains socket with a protective earthing connection.

CAUTION! The maximum ambient temperature (Ta) of 40° must not be exceeded.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void. Incorrect operation may lead to danger e.g: short-circuit, burns and electric shocks etc.

Do not endanger your own safety and the safety of others!

Incorrect installation or use can cause serious damage to people and/or property.


Fusion Reflecta


The Fusion Reflecta is a versatile, multi-application moving head that combines a flat reflective mirror, a half mirror ball, and an LED ring to enhance any light show. It's not just a one-trick pony but adds an extra dimension to your lighting setup. Its flat mirror, with a diameter of 178mm, can reflect high-power beam effects across venues. With a simple change in DMX value, the mirror can flip 180 degrees to reveal the mirror ball, which bathes the room in hundreds of light shards, when a suitable fixture is projected on the surface. The mirror ball has variable rotation speed, continuous 360° tilt, plus 50 tri-colour LEDs fitted around the outer edge of the flat mirror in a ring format, further boosting the fixture's versatility.

- 1 x Half mirror ball (200mmØ)
- 1 x Flat mirror (178mmØ)
- Highly reflective mirrors with 99% reflection
- 50 x tri-colour 5050 SMD LEDs (RGB)
- DMX channels: 3/5/8/13/16/85 or 88 selectable
- Manual mode
- Pan/tilt auto correction
- 16-Bit pan/tilt positioning
- Pan: 540°, Tilt: 360° continuous
- 360° continuous mirror ball rotation in both directions
- Quick release omega clamps included
- Square hole spacing on omega clamp receivers allows for clamps to be mounted in all orientations
- 4 button menu with 2.6" LCD display
- PowerTwist TR1 input/output
- 3-Pin XLR input/output
- 5-Pin XLR input/output
- Convection cooled

Specifications	Fusion Reflecta
Power consumption	30W
Power supply	100~240V, 50/60Hz
Fuse	F2A 250V
Dimensions	411 x 304 x 217mm
Weight	8kg
Order code	EQLED079



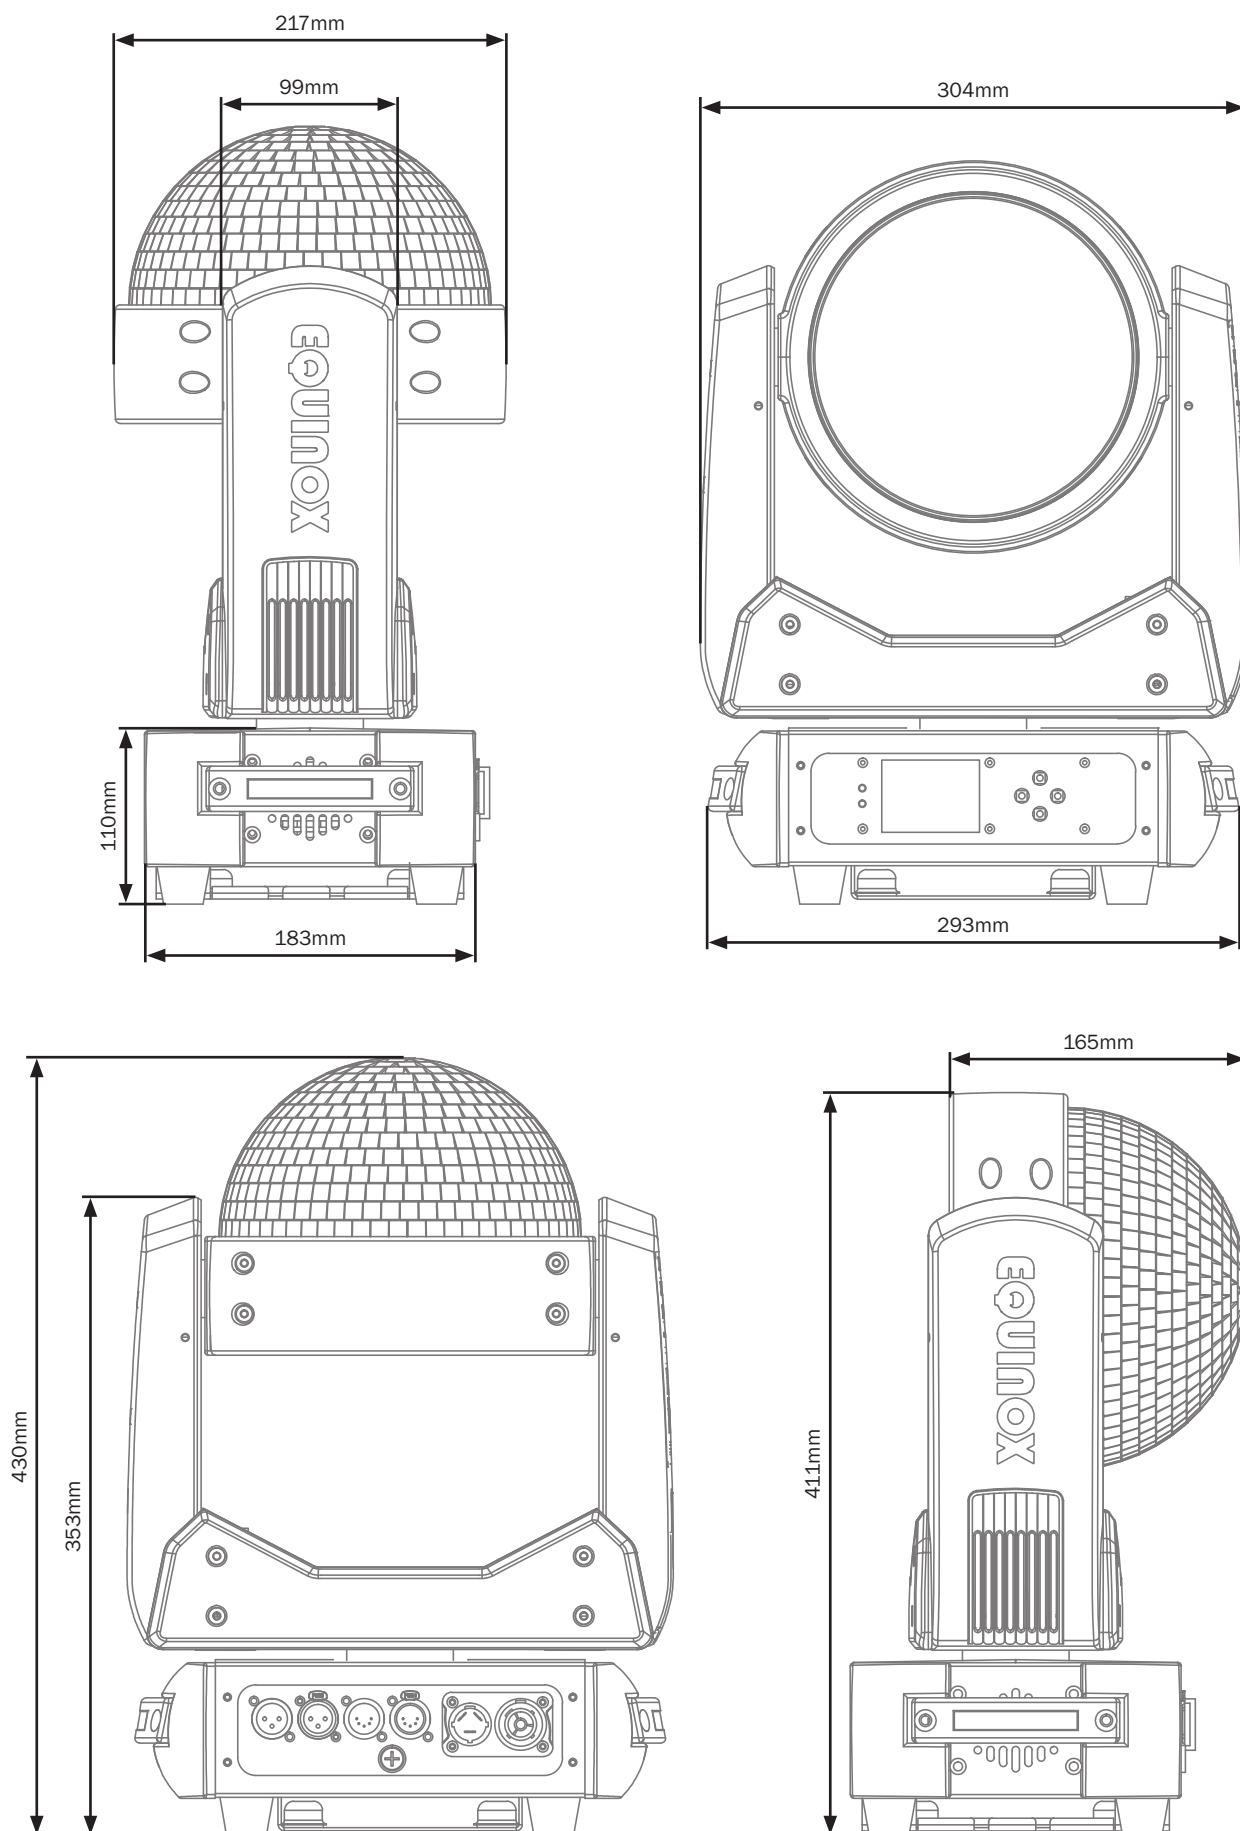

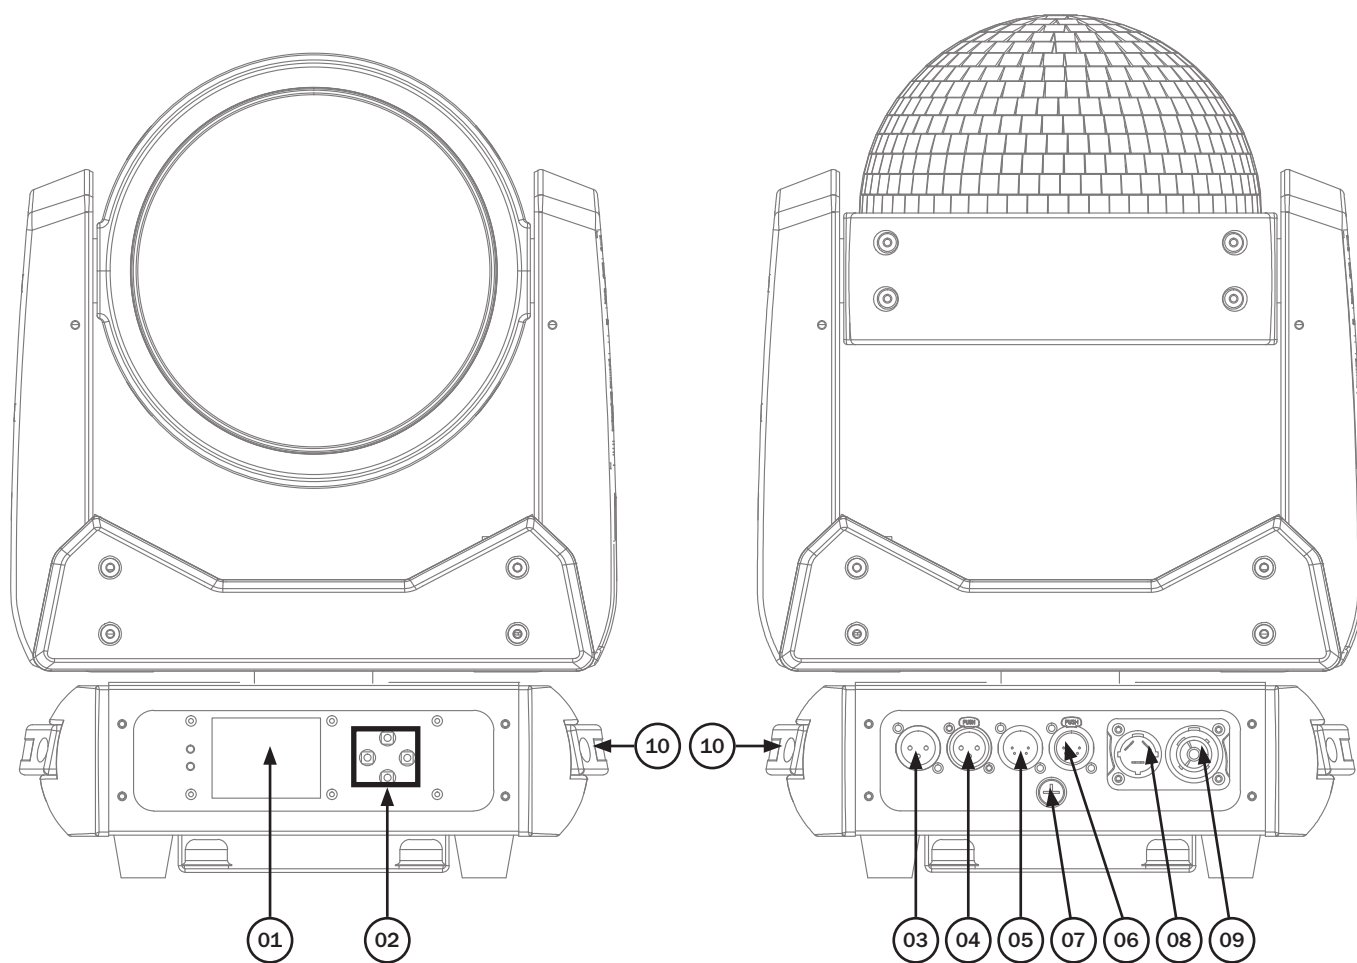

01 - LCD display
 02 - Function buttons
 03 - 3-Pin DMX input
 04 - 3-Pin DMX output


05 - 5-Pin DMX input
 06 - 5-Pin DMX output
 07 - Fuse F2A 250V
 08 - PowerTwist TR1 input

09 - PowerTwist TR1 output
 10 - Carry handles

In the box: **1 x fixture,**
2 x omega clamps,
& 1 x power cable

Before installing the fixture, the supporting structure (ie. truss) must be able to hold a minimum of 10 times the fixtures weight without any deformation (eg. 15kg - 150kg point load). The fixture must be secured with a secondary safety attachment when being installed (ie. an appropriate safety cable). Never stand directly below the fixture when mounting, removing, and/or servicing.


Overhead installation requires experience and qualifications to calculate working load limits, the material being used at the installation area and periodic safety inspections of the fixture and installation material. If you do not have the relevant experience and/or qualifications please do not attempt the installation yourself. The installation should be checked annually by a qualified person.

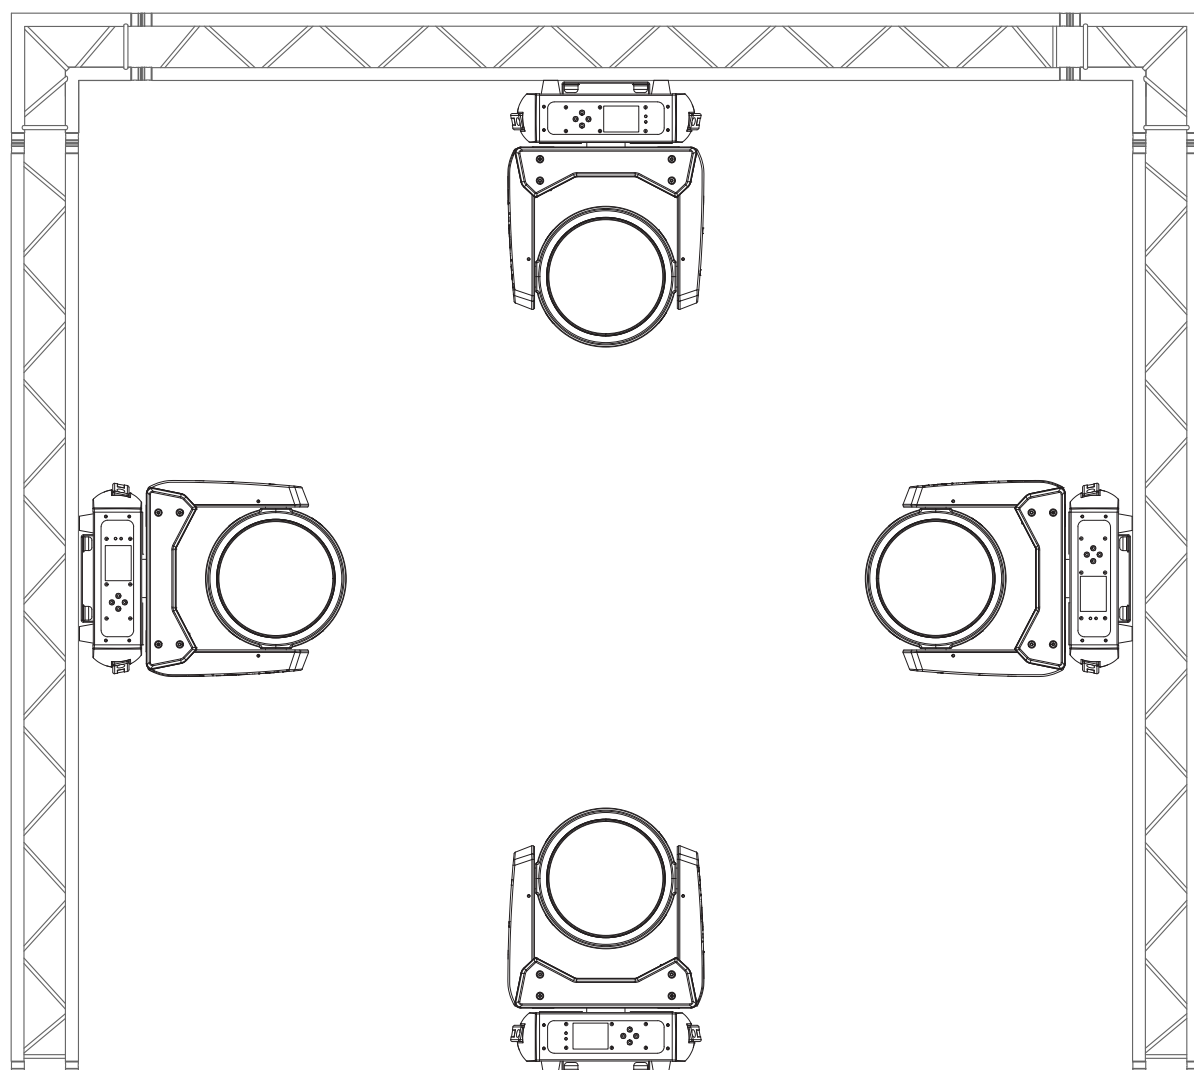

The Equinox Fusion Reflecta can be operated in a number of mounting positions as shown in the diagram above, hanging upside-down from the ceiling or truss, mounting sideways on truss or stood upright on a flat level surface. Always use a safety wire as an extra safety precaution to prevent damage/injury in the event a clamp fails (see the next page for clamp installation). Never use the carry handles for secondary attachments.

Installation:

1. Fasten each clamp to the omega clamps with a bolt and lock nut through the hole in the omega clamp.
2. Align and insert the omega clamp quick-lock fasteners with the respective holes on the bottom of the unit.
3. Tighten both locking fasteners clockwise on each omega clamp ensuring they're fully secure.
4. Mount the fixture onto your truss system via the clamps and tighten to ensure secure.
5. Pull the safety cable through the safety cable holes located on the metal base plate on the underside of the fixture and around the truss.

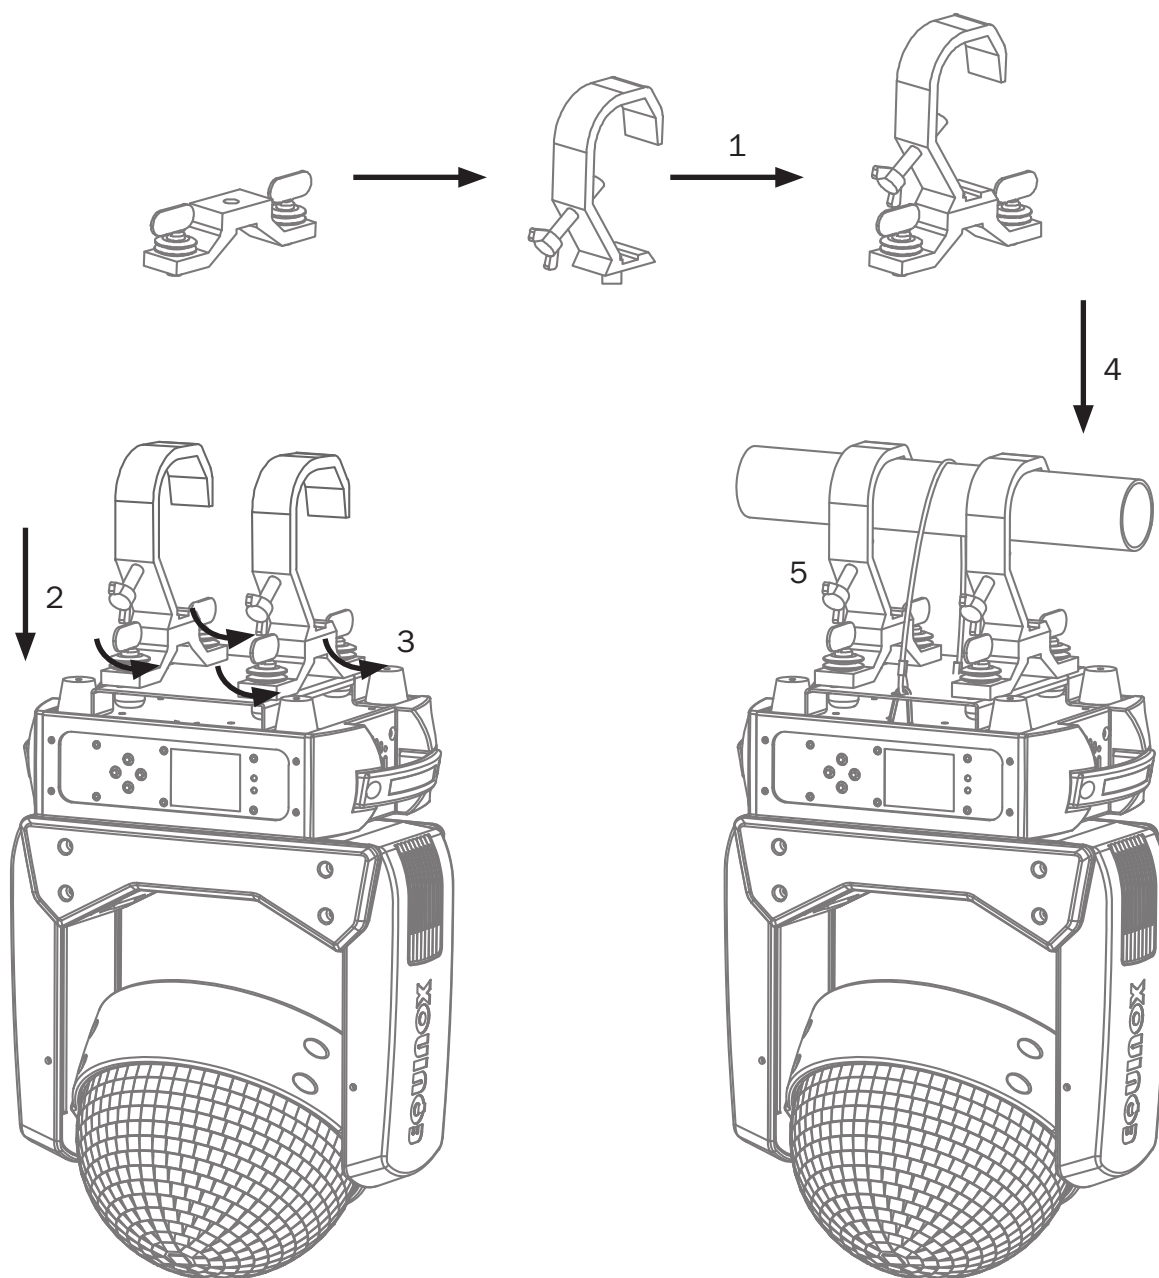


Control Panel Menu:

The LCD control panel situated on the front of the fixture allows the user to access the menu system to adjust the fixtures settings.


When the unit has been powered on the display will show “**Equinox Fusion Reflecta**”, “**Motor Reset... Please Wait...**” whilst the unit performs its motor reset. The fixture will then return to its home screen.

Pressing the “**ENTER**” button once will take the user to the fixtures main menu. Using the “**UP**” and “**DOWN**” buttons you can then navigate between the different options in the main menu. Pressing the “**ENTER**” button on one of these options allows you to access the sub menu where you can use the “**UP**” and “**DOWN**” buttons to select option/value required. Once the option/value has been selected press the “**ENTER**” button once more to confirm the setting.

To exit out of any of the above options, press the “**MENU**” button.

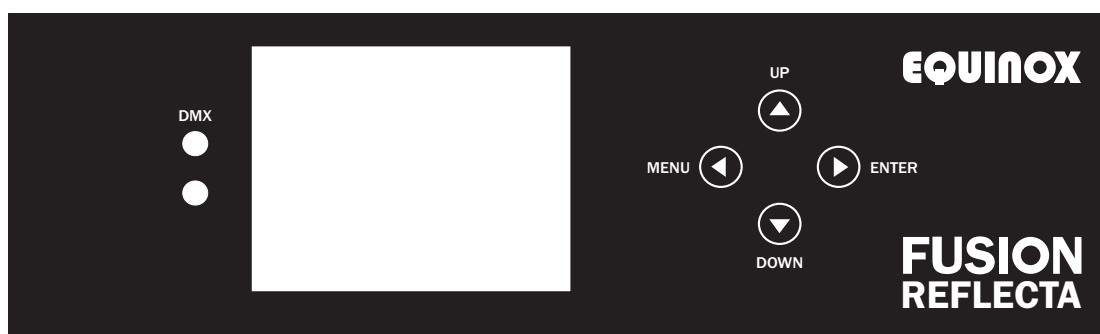

Main Menu - Defaults are in grey

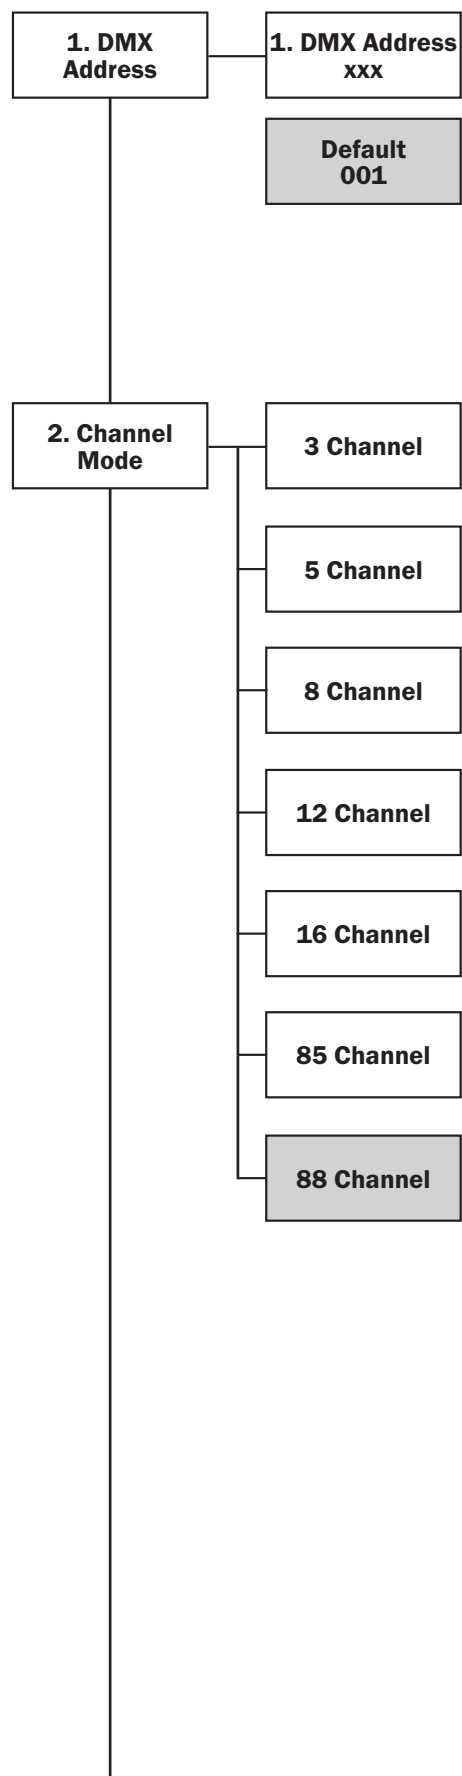


DMX address:

To access the DMX address mode, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “DMX Address” on the LCD display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to set the required DMX address. Press the “ENTER” button to confirm the setting.

DMX channel mode:

To access the DMX channel mode, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Channel Mode” on the LCD display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to set the required DMX channel. Press the “ENTER” button to confirm the setting.

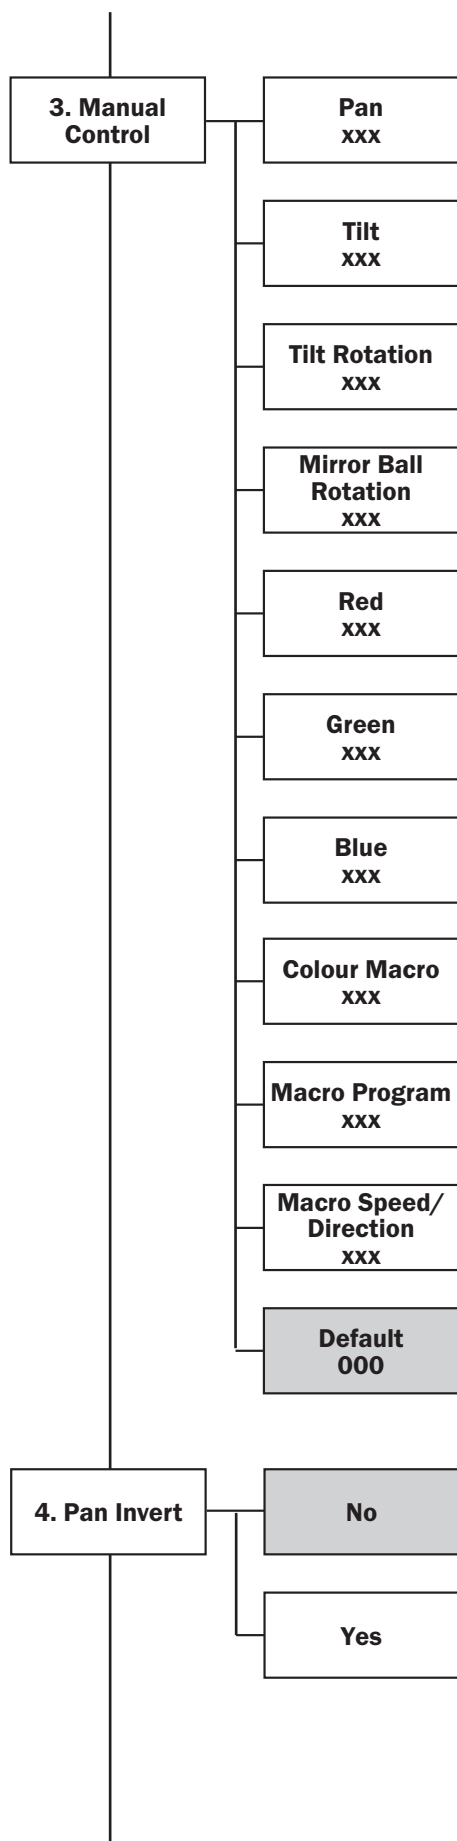


Manual control:

To access manual control mode, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Manual Control” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select the various options. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “000” - “255”. Press the “ENTER” button to confirm the setting.

Pan invert:

To access the pan invert setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Pan Invert” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “No” and “Yes”. Press the “ENTER” button to confirm the setting.

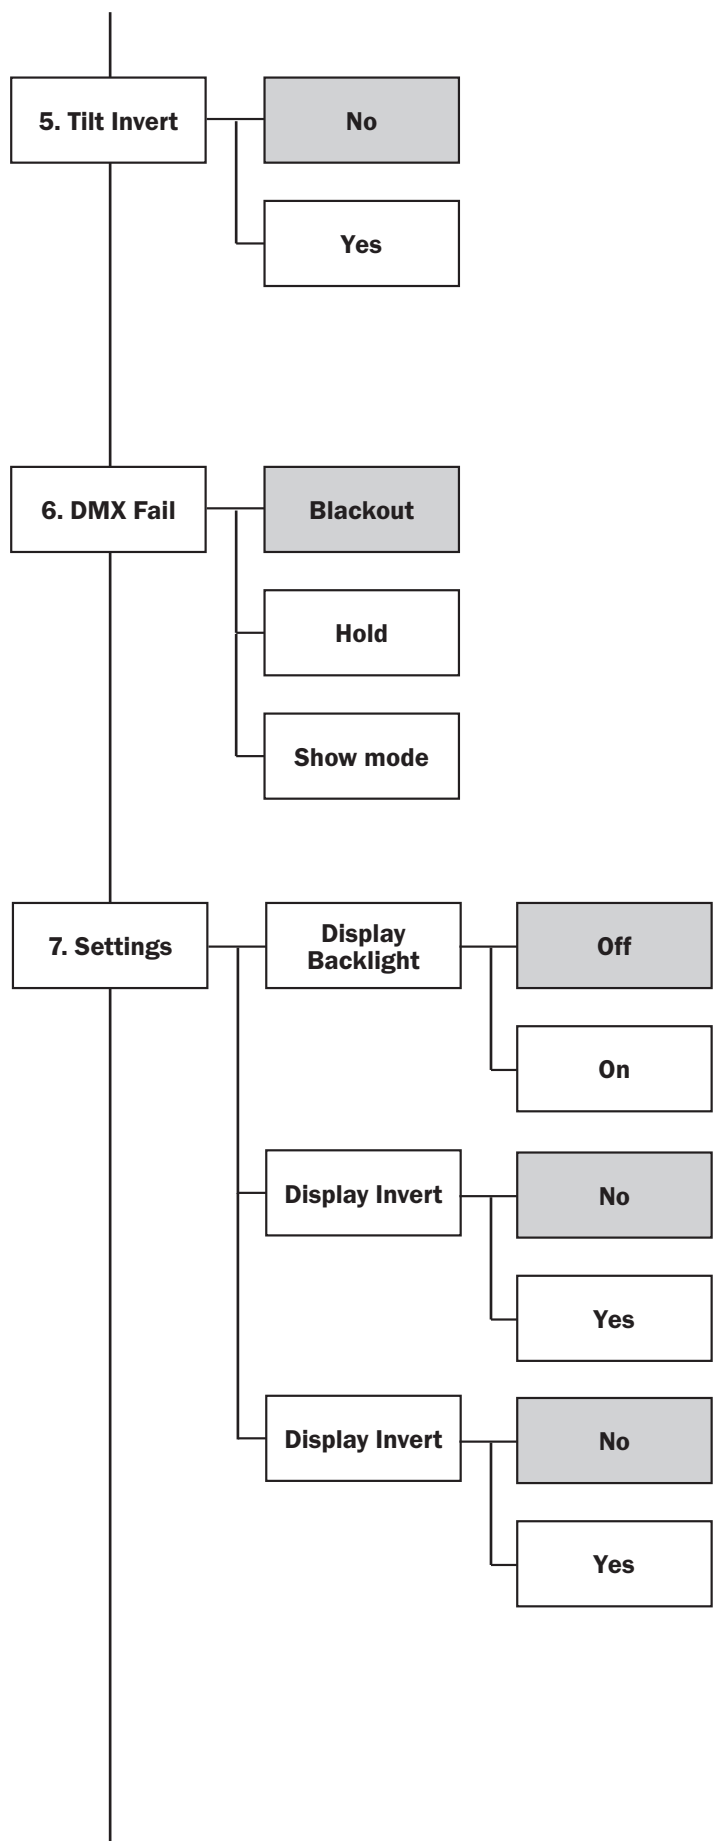

Tilt invert:

To access the tilt invert setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Tilt Invert” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “No” and “Yes”. Press the “ENTER” button to confirm the setting.

DMX fail:


Sets what the fixture does when the DMX signal is lost. To access the DMX fail setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “DMX Fail” on the LCD display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to choose between “Blackout”, “Hold” or “Show mode”. Press the “ENTER” button to confirm the setting.

Display backlight:

To access the display backlight setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Settings” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select “Display Backlight”. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “Off” and “On”. Press the “ENTER” button to confirm the setting.

Display invert:

To access the display invert setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Settings” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select “Display Invert”. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “No” and “Yes”. Press the “ENTER” button to confirm the setting.

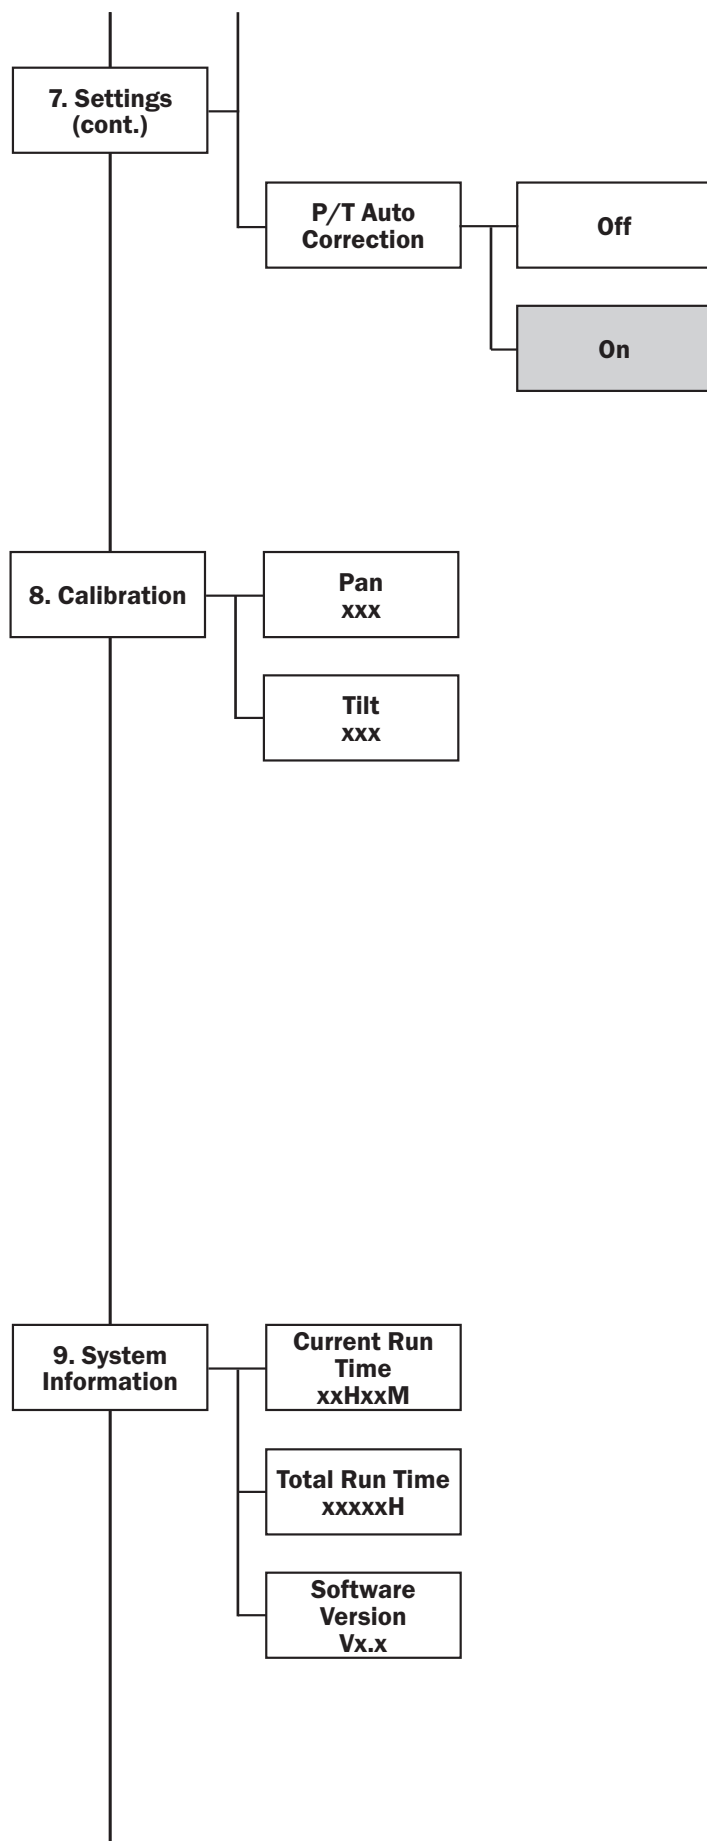

Pan/Tilt Auto Correction:

To access the pan/tilt auto correction setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Settings” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select “P/T Auto Correction”. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “Off” and “On”. Press the “ENTER” button to confirm the setting.

Calibration:

Calibration settings for the fixture.

To access the units calibration menu press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Calibration”. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select the various options. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “000” - “255”.


Press the “ENTER” button to confirm the setting.

Please note: Calibration settings are set when the fixture is manufactured. This can be changed manually for home position adjustment.

Performing a factory reset will not change these settings.

System information:

To display the fixtures system information, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “System Information” on the LCD display. The unit will now display the fixtures current run time, total run time, temperature and software version.

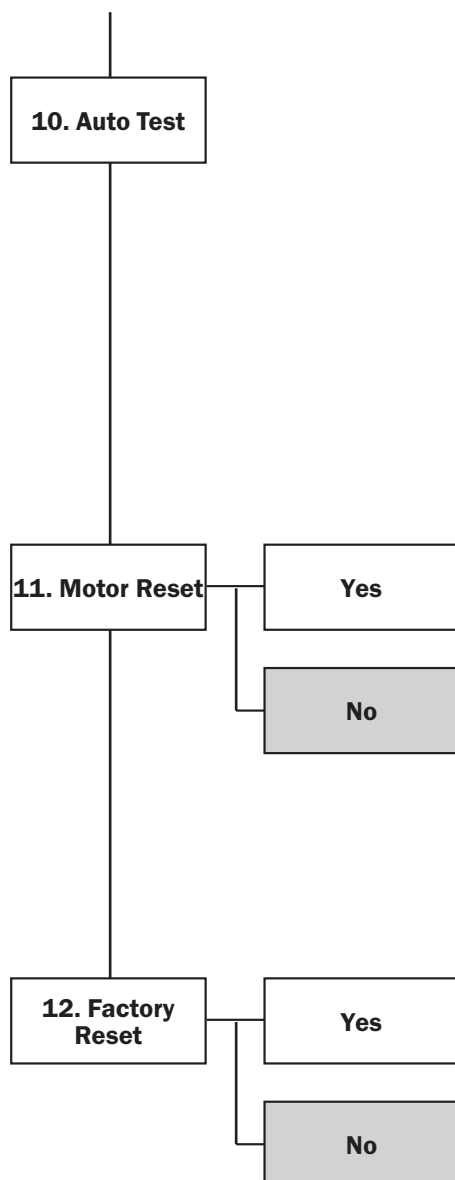

Auto test:

Tests all functions and motors in the fixture.

To access the auto test mode, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Auto Test” on the LCD display. Press the “ENTER” button and the fixture will initiate auto test.

Please note: Auto test will automatically stop when exiting the auto test menu.

Motor reset:

Resets all the fixtures motors.

To access the motor reset setting, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Motor Reset” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “Yes” and “No”. Press the “ENTER” button to perform the motor reset when yes is selected.

Factory Reset:

Resets all the fixtures factory settings.

To access the factory setting reset, press the “ENTER” button and use the “UP” and “DOWN” buttons to show “Factory Reset” on the LCD display. Press the “ENTER” button and use the “UP” and “DOWN” buttons to select between “Yes” and “No”. Press the “ENTER” button to perform the factory reset when yes is selected.

DMX channel modes:

Channel							Value	Function	Default Value
3CH	5CH	8CH	12CH	16CH	85CH	88CH			
1	1	1	1	1	1	1	000-255	Pan adjustment 0-540°	127
-	-	-	2	2	2	2	000-255	Pan fine	127
2	2	2	3	3	3	3	000-255	Tilt adjustment 0-270°	127
-	-	-	4	4	4	4	000-255	Tilt fine	127
-	3	3	5	5	5	5	000-255	Pan/tilt speed (fast-slow)	000
-	4	4	6	6	6	6	000-007	No function	000
							008-126	Continuous tilt forwards (fast-slow)	
							127-138	No function	
							139-255	Continuous tilt backwards (slow-fast)	
3	5	5	7	7	7	7	000-007	No function	000
							008-127	Mirror Ball Rotation CW rotation (fast-slow)	
							128-137	No function	
							138-255	Mirror Ball Rotation CCW rotation (slow-fast)	
-	-	6	8	8	-	8	Ring Colour Macros		000
							000-009	No function	
							010-021	White	
							022-033	Red	
							034-045	Green	
							046-057	Blue	
							058-069	Light Blue	
							070-081	Pink	
							082-093	Yellow	
							094-105	Magenta	
							106-117	Amber	
							118-129	Lime Green	
							130-141	Pastel Pink	
							142-153	Light Pink	
							154-165	Medium Yellow	
							166-177	Peach	
							178-189	Purple	
							190-201	Light Purple	
							202-213	Violet	
							214-225	Pink	
							226-237	Turquoise	
							238-255	Hot Pink	

DMX channel modes:

Channel							Value	Function	Default Value
3CH	5CH	8CH	12CH	16CH	85CH	88CH			
-	-	7	9	9	-	9	Ring Macro Programs		
							000-009	No function	000
							010-021	Macro 1 (Red chase)	
							022-033	Macro 2 (Green chase)	
							034-045	Macro 3 (Blue chase)	
							046-057	Macro 4 (White chase)	
							058-069	Macro 5 (Cyan chase)	
							070-081	Macro 6 (Magenta chase)	
							082-093	Macro 7 (Yellow chase)	
							094-105	Macro 8 (Red with blue chase)	
							106-117	Macro 9 (Green with blue chase)	
							118-129	Macro 10 (Blue with red chase)	
							130-141	Macro 11 (Red with white chase)	
							142-153	Macro 12 (Green with pink chase)	
							154-165	Macro 13 (Yellow with blue chase)	
							166-177	Macro 14 (Red, green, blue chase)	
							178-189	Macro 15 (Red, green, blue, white, cyan, magenta, yellow chase)	
							190-201	Macro 16 (Red, green, blue, white, cyan, magenta, yellow chase) (7 segments)	
							202-213	Macro 17 (Chase)	
							214-225	Macro 18 (Colour change)	
							226-237	Macro 19 (Colour fade)	
238-255	Macro 20 (Rainbow chase)								
-	-	8	10	10	-	10	Ring Macro Program Speed/Direction		
							000-124	Anti-clockwise (fast-slow)	000
							125-130	Macro stop	
							131-255	Clockwise (slow-fast)	
							Ring		
-	-	-	11	11	8	11	000-255	Master dimmer (0-100%)	000
-	-	-	12	12	9	12	000-009	Blackout	000
							010-253	Strobe (slow-fast)	
							254-255	Ring on	
-	-	-	-	13	-	-	000-255	Red dimmer (0-100%)	000
-	-	-	-	14	-	-	000-255	Green dimmer (0-100%)	000
-	-	-	-	15	-	-	000-255	Blue dimmer (0-100%)	000

DMX channel modes:

Channel							Value	Function	Default Value
3CH	5CH	8CH	12CH	16CH	85CH	88CH			
							Ring Pixel Control		
-	-	-	-	-	10	13	000-255	Red dimmer (0-100%) - Pixel 1 & 2	000
-	-	-	-	-	11	14	000-255	Green dimmer (0-100%) - Pixel 1 & 2	000
-	-	-	-	-	12	15	000-255	Blue dimmer (0-100%) - Pixel 1 & 2	000
-	-	-	-	-	13	16	000-255	Red dimmer (0-100%) - Pixel 3 & 4	000
-	-	-	-	-	14	17	000-255	Green dimmer (0-100%) - Pixel 3 & 4	000
-	-	-	-	-	15	18	000-255	Blue dimmer (0-100%) - Pixel 3 & 4	000
-	-	-	-	-	16	19	000-255	Red dimmer (0-100%) - Pixel 5 & 6	000
-	-	-	-	-	17	20	000-255	Green dimmer (0-100%) - Pixel 5 & 6	000
-	-	-	-	-	18	21	000-255	Blue dimmer (0-100%) - Pixel 5 & 6	000
-	-	-	-	-	19	22	000-255	Red dimmer (0-100%) - Pixel 7 & 8	000
-	-	-	-	-	20	23	000-255	Green dimmer (0-100%) - Pixel 7 & 8	000
-	-	-	-	-	21	24	000-255	Blue dimmer (0-100%) - Pixel 7 & 8	000
-	-	-	-	-	22	25	000-255	Red dimmer (0-100%) - Pixel 9 & 10	000
-	-	-	-	-	23	26	000-255	Green dimmer (0-100%) - Pixel 9 & 10	000
-	-	-	-	-	24	27	000-255	Blue dimmer (0-100%) - Pixel 9 & 10	000
-	-	-	-	-	25	28	000-255	Red dimmer (0-100%) - Pixel 11 & 12	000
-	-	-	-	-	26	29	000-255	Green dimmer (0-100%) - Pixel 11 & 12	000
-	-	-	-	-	27	30	000-255	Blue dimmer (0-100%) - Pixel 11 & 12	000
-	-	-	-	-	28	31	000-255	Red dimmer (0-100%) - Pixel 13 & 14	000
-	-	-	-	-	29	32	000-255	Green dimmer (0-100%) - Pixel 13 & 14	000
-	-	-	-	-	30	33	000-255	Blue dimmer (0-100%) - Pixel 13 & 14	000
-	-	-	-	-	31	34	000-255	Red dimmer (0-100%) - Pixel 15 & 16	000
-	-	-	-	-	32	35	000-255	Green dimmer (0-100%) - Pixel 15 & 16	000
-	-	-	-	-	33	36	000-255	Blue dimmer (0-100%) - Pixel 15 & 16	000
-	-	-	-	-	34	37	000-255	Red dimmer (0-100%) - Pixel 17 & 18	000
-	-	-	-	-	35	38	000-255	Green dimmer (0-100%) - Pixel 17 & 18	000
-	-	-	-	-	36	39	000-255	Blue dimmer (0-100%) - Pixel 17 & 18	000
-	-	-	-	-	37	40	000-255	Red dimmer (0-100%) - Pixel 19 & 20	000
-	-	-	-	-	38	41	010-255	Green dimmer (0-100%) - Pixel 19 & 20	000
-	-	-	-	-	39	42	000-255	Blue dimmer (0-100%) - Pixel 19 & 20	000
-	-	-	-	-	40	43	000-255	Red dimmer (0-100%) - Pixel 21 & 22	000
-	-	-	-	-	41	44	000-255	Green dimmer (0-100%) - Pixel 21 & 22	000
-	-	-	-	-	42	45	000-255	Blue dimmer (0-100%) - Pixel 21 & 22	000
-	-	-	-	-	43	46	000-255	Red dimmer (0-100%) - Pixel 23 & 24	000
-	-	-	-	-	44	47	000-255	Green dimmer (0-100%) - Pixel 23 & 24	000
-	-	-	-	-	45	48	000-255	Blue dimmer (0-100%) - Pixel 23 & 24	000
-	-	-	-	-	46	49	000-255	Red dimmer (0-100%) - Pixel 25 & 26	000
-	-	-	-	-	47	50	000-255	Green dimmer (0-100%) - Pixel 25 & 26	000
-	-	-	-	-	48	51	000-255	Blue dimmer (0-100%) - Pixel 25 & 26	000

DMX channel modes:

Channel							Value	Function	Default Value
3CH	5CH	8CH	12CH	16CH	85CH	88CH			
							Ring Pixel Control		
-	-	-	-	-	49	52	000-255	Red dimmer (0-100%) - Pixel 27 & 28	000
-	-	-	-	-	50	53	000-255	Green dimmer (0-100%) - Pixel 27 & 28	000
-	-	-	-	-	51	54	000-255	Blue dimmer (0-100%) - Pixel 27 & 28	000
-	-	-	-	-	52	55	000-255	Red dimmer (0-100%) - Pixel 29 & 30	000
-	-	-	-	-	53	56	000-255	Green dimmer (0-100%) - Pixel 29 & 30	000
-	-	-	-	-	54	57	000-255	Blue dimmer (0-100%) - Pixel 29 & 30	000
-	-	-	-	-	55	58	000-255	Red dimmer (0-100%) - Pixel 31 & 32	000
-	-	-	-	-	56	59	000-255	Green dimmer (0-100%) - Pixel 31 & 32	000
-	-	-	-	-	57	60	000-255	Blue dimmer (0-100%) - Pixel 31 & 32	000
-	-	-	-	-	58	61	000-255	Red dimmer (0-100%) - Pixel 33 & 34	000
-	-	-	-	-	59	62	000-255	Green dimmer (0-100%) - Pixel 33 & 34	000
-	-	-	-	-	60	63	000-255	Blue dimmer (0-100%) - Pixel 33 & 34	000
-	-	-	-	-	61	64	000-255	Red dimmer (0-100%) - Pixel 35 & 36	000
-	-	-	-	-	62	65	000-255	Green dimmer (0-100%) - Pixel 35 & 36	000
-	-	-	-	-	63	66	000-255	Blue dimmer (0-100%) - Pixel 35 & 36	000
-	-	-	-	-	64	67	000-255	Red dimmer (0-100%) - Pixel 37 & 38	000
-	-	-	-	-	65	68	000-255	Green dimmer (0-100%) - Pixel 37 & 38	000
-	-	-	-	-	66	69	000-255	Blue dimmer (0-100%) - Pixel 37 & 38	000
-	-	-	-	-	67	70	000-255	Red dimmer (0-100%) - Pixel 39 & 40	000
-	-	-	-	-	68	71	000-255	Green dimmer (0-100%) - Pixel 39 & 40	000
-	-	-	-	-	69	72	000-255	Blue dimmer (0-100%) - Pixel 39 & 40	000
-	-	-	-	-	70	73	000-255	Red dimmer (0-100%) - Pixel 41 & 42	000
-	-	-	-	-	71	74	000-255	Green dimmer (0-100%) - Pixel 41 & 42	000
-	-	-	-	-	72	75	000-255	Blue dimmer (0-100%) - Pixel 41 & 42	000
-	-	-	-	-	73	76	000-255	Red dimmer (0-100%) - Pixel 43 & 44	000
-	-	-	-	-	74	77	000-255	Green dimmer (0-100%) - Pixel 43 & 44	000
-	-	-	-	-	75	78	000-255	Blue dimmer (0-100%) - Pixel 43 & 44	000
-	-	-	-	-	76	79	000-255	Red dimmer (0-100%) - Pixel 45 & 46	000
-	-	-	-	-	77	80	010-255	Green dimmer (0-100%) - Pixel 45 & 46	000
-	-	-	-	-	78	81	000-255	Blue dimmer (0-100%) - Pixel 45 & 46	000
-	-	-	-	-	79	82	000-255	Red dimmer (0-100%) - Pixel 47 & 48	000
-	-	-	-	-	80	83	000-255	Green dimmer (0-100%) - Pixel 47 & 48	000
-	-	-	-	-	81	84	000-255	Blue dimmer (0-100%) - Pixel 47 & 48	000
-	-	-	-	-	82	85	000-255	Red dimmer (0-100%) - Pixel 49 & 50	000
-	-	-	-	-	83	86	000-255	Green dimmer (0-100%) - Pixel 49 & 50	000
-	-	-	-	-	84	87	000-255	Blue dimmer (0-100%) - Pixel 49 & 50	000
-	-	-	-	16	85	88	Motor Reset		
							000-200	No function	000
							201-255	Motor reset (hold 5s)	

Setting the DMX address:

The DMX mode enables the use of a universal DMX controller. Each fixture requires a “start address” from 1- 512. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 7 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100, 101, 102, 103, 104, 105 and 106. Choose a start address so that the channels used do not overlap. E.g. the next unit in the chain starts at 107.

DMX 512:

DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

DMX linking:

DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

DATA cable (DMX cable) requirements (for DMX operation):

This fixture can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit requires either a standard 3-pin or 5-pin XLR connector for data input/output, see images below.



Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight Concepts dealers.



Please quote:	3-Pin:	CABL10 – 2m	CABL11 – 5m	CABL12 – 10m
	5-Pin:	CABL185 – 2m	CABL187 – 5m	CABL188 – 10m

Also remember that DMX cable must be daisy chained and cannot be split.

Notice:

Be sure to follow the diagrams below when making your own cables. Do not connect the cables shield conductor to the ground lug or allow the shield conductor to come in contact with the XLRs outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

Pin Configuration	
3-Pin	5-Pin
	Pin 1 - Ground
	Pin 2 - Negative
	Pin 3 - Positive
-	Pin 4 - N/C
-	Pin 5 - N/C

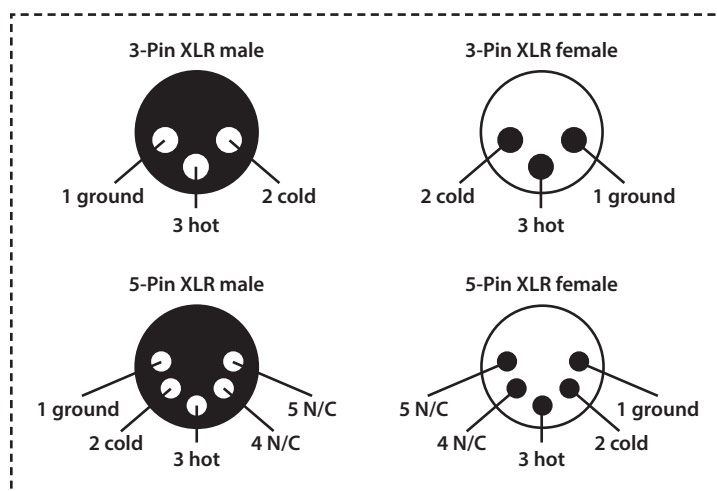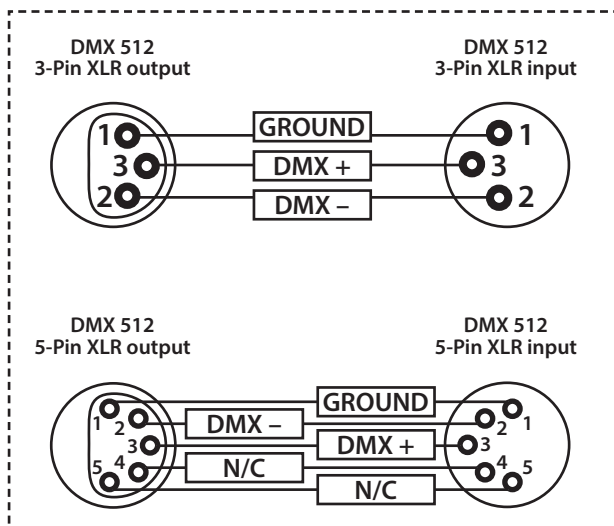


Line termination:

When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

Using a cable terminator will decrease the possibilities of erratic behaviour.


(3-pin - Order ref: CABL90,

5-pin - Order ref: CABL89)

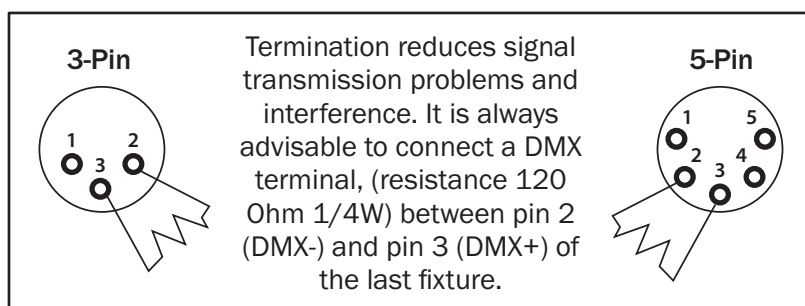

5-pin XLR DMX connectors:


Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The diagram below details the correct cable conversion.

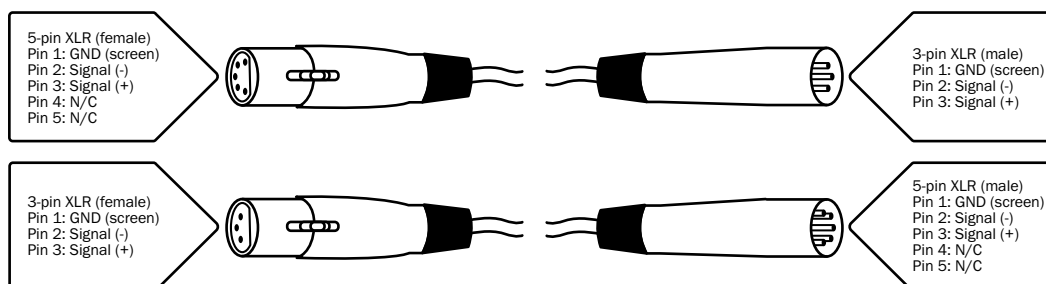

Power linking:

This fixture provides power linking via the power output on the rear allowing multiple units to be connected together. The maximum number of fixtures that can be connected is 32 fixtures @ 240V or 16 fixtures @ 120V (including the first fixture). After the maximum number of fixtures are connected a new power run will need to be started.

Please note: Caution should be used when power linking other fixtures to the Fusion Reflecta as the power consumption of other fixtures will vary. Fixtures fitted with lamps often require 2/3 times more current on startup, these may require their own power source.

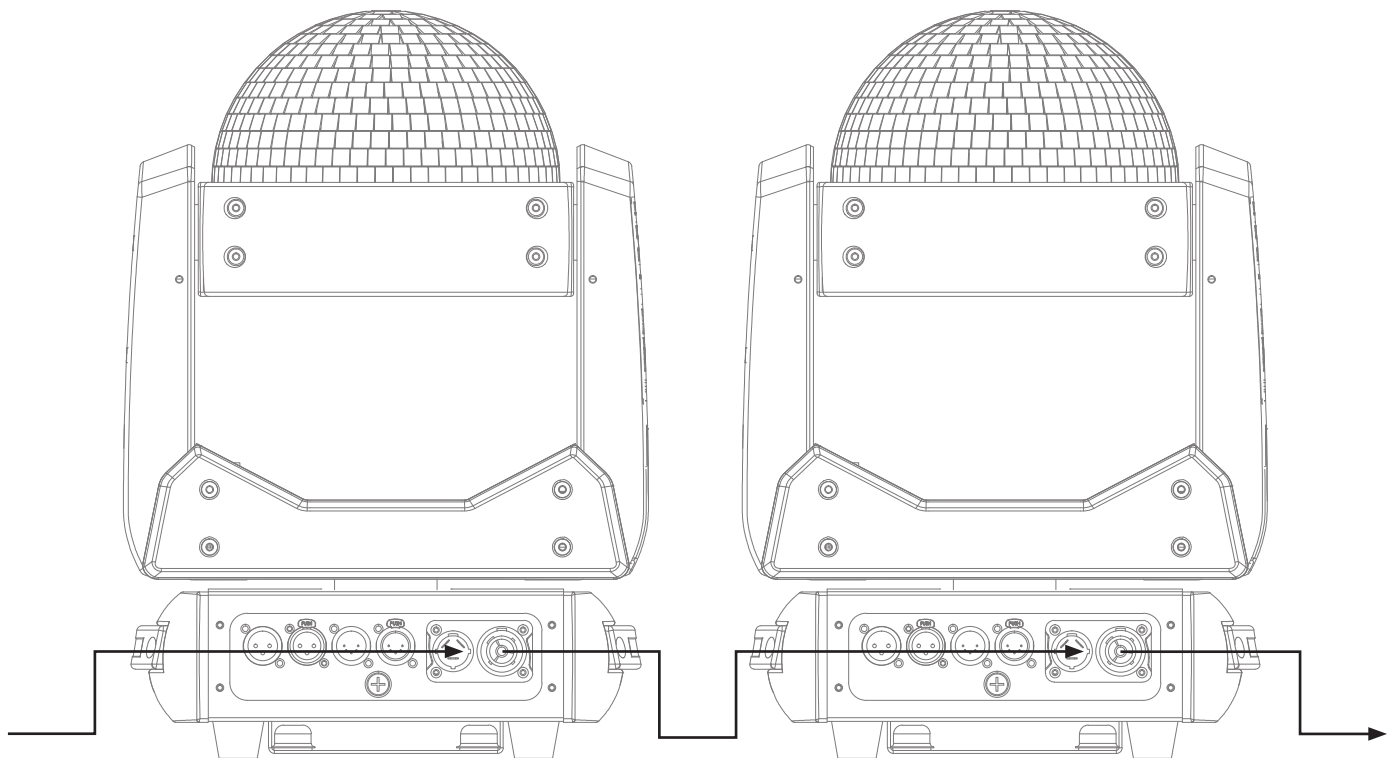



Correct Disposal of this Product (Waste Electrical & Electronic Equipment)

**(Applicable in the European Union and other European countries
with separate collection systems)**

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

