

multicomp^{PRO}



DC Electronic Load User Manual Model No.72-13200 and 72-13210

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons or property.

Read all instructions before using the appliance and retain for future reference.

- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Check the product before use for any damage. Should you notice any damage on the cable or casing, do not use.
- This appliance contained no user-serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
- Do not block or obstruct the cooling fan vent opening.
- Avoid severe impacts or rough handling that leads to damage.
- Do not discharge static electricity.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Always disconnect from the mains when the product is not in use or before cleaning.
- Do not use the appliance for any purpose other than that for which it is designed.
- Do not operate or store in an environment of high humidity or where moisture may enter the product as this can reduce insulation and lead to electric shock.

PRODUCT OVERVIEW


Main Features

- High accuracy/resolution 0-120V DC power supply
- 0.1mV/0.1mA overvoltage protection
- Constant voltage/constant current
- Four modes CV/CC/CR/CW
- Digital panel control - 5 digit LED display
- Battery test function
- External trigger function
- Remote compensation function
- Input adjustment lock
- Power off 100 group memory function
- Standard interfaces: USB, RS232 & LAN

WHAT'S INCLUDED

- Power Supply Unit
- Mains power lead
- User Manual

OPERATION

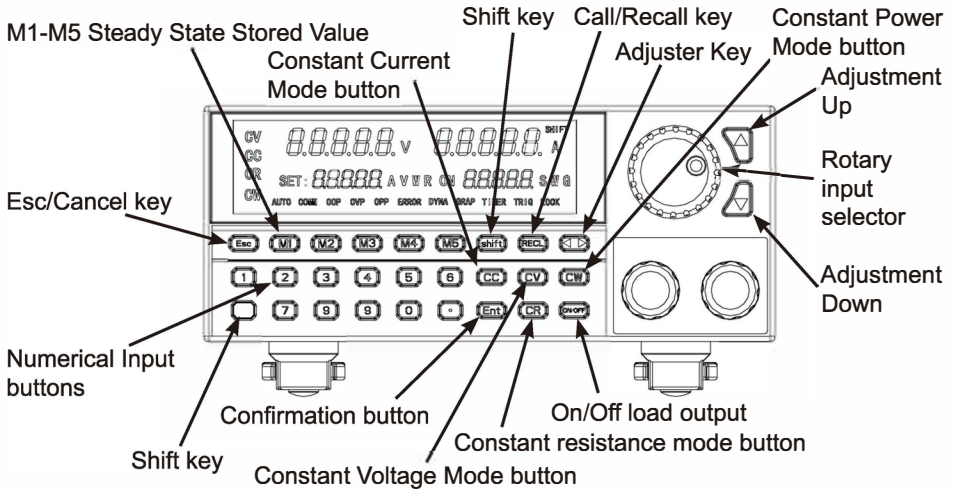

STEADY STATE FUNCTION MODES

- The electronic load can work in the following 4 steady-state modes.

Constant Current Operation Mode CC

Note: In constant current mode, the load holds the tested equipment on the set current no matter how the input voltage changes.

- Operation Method:
 - Press the CC button on the panel to enter constant current operation mode.
 - Set the desired constant current through the numerical buttons
 - Press ENTER to confirm.
 - Press the ON/OFF button to start the electronic load.

Constant Voltage Operation Mode CV

Note: In constant voltage mode, the load holds the tested equipment on the set voltage no matter how the input current changes.

- Operation Method:
 - Press the CV button on the panel to enter constant voltage operation mode.
 - Set the desired constant voltage through the numerical buttons.
 - Press ENTER to confirm.
 - Press the ON/OFF button to start the electronic load.

Constant Resistance Operation Mode CR

Note: In constant resistance mode, the load holds the tested equipment on the set resistance no matter how the input voltage and current change.

- Operation Method:
 - Press the CR button on the panel to enter constant resistance operation mode.
 - Set the desired constant resistance through the numerical buttons.
 - Press ENTER to confirm.
 - Press the ON/OFF button to start the electronic load.

Constant Power Operation Mode CW

Note: In constant power mode, the load holds the tested equipment on the set wattage no matter how the input voltage and current change.

- Operation Method:
 1. Press the CW button on the panel to enter constant wattage operation mode.
 2. Set the desired constant wattage through the numerical buttons.
 3. Press ENTER to confirm.
 4. Press the ON/OFF button to start the electronic load.

Note: Values for all inputs can be entered using either the rotary input selector, up or down buttons or number keys in all modes.

Setting the maximum values of a load

- Setting low voltage (18V), low current (3A) and below will improve the accuracy.

Example: Setting the max current to 3A, max voltage to 18V and max power to 100W, and the max resistance to 1000ohms.

1. Press SHIFT+CV to enter settings mode.
2. Set the required current (3A) value and press ENTER.
3. Press CV to enter next input mode.
4. Set the required voltage (18V) and press ENTER.
5. Press CV to enter next input mode.
6. Set the required power (100W) and press ENTER.
7. Press CV to enter next input mode.
8. Set the desired resistance (1000 Ω) and press ENTER.
9. Press ESC to complete and enter steady mode. The steady mode status is displayed.

Storing steady state values and recalling from memory

Note: The memory can save and recall 100 sets of steady mode settings.

- Once a set of values are input press SHIFT+2 to enter memory storage mode.
- Each location can be saved as a numerical identifier 1-100.
- Press ENTER to store the location.

Restoring steady state values from memory

Press CALL+2 to enter memory storage mode.

- Select the location of the stored values required from 1-100.
- Press ENTER to recover the saved values.

Quick access steady state value memory

For commonly used values there are 5 quick access and storage buttons.

- Once a set of values are input press button M1 to M5 to store the settings.
- To recover the required saved settings instantly, press M1 to M5.

Short circuit function

Note: the load will make the tested equipment output the max current.

- Press SHIFT+7 to enter the short circuit test mode.

Dynamic test function

There are 6 settings, Dynamic CV, Dynamic CC, Dynamic CR, Dynamic CW, Dynamic Pulse and Dynamic Flip. There are no memory storage functions for these.

Dynamic CV (CR and CW modes similar sequence)

- Press SHIFT+ENTER to enter the dynamic setting mode.
- Press 1 then press ENTER to enter the setting mode.
 1. Set the required first voltage and press ENTER.
 2. Set the required second voltage then press ENTER.
 3. Set the required frequency then press ENTER.
 4. Set the required duty cycle percentage and press ENTER to finish.
- Press the ON/OFF button to start or pause.
- The LED display on the lower left displays the count.

Note: Dynamic CR selects mode 3 while Dynamic CW selects mode 4.

To use Dynamic CR or Dynamic CW choose setting values of resistance or power.

Dynamic CC

- Press SHIFT+ENTER to enter the dynamic setting mode.
- Press 2 then press ENTER to enter the setting mode.
 1. Set the required first current change rate and press ENTER.
 2. Set the required second current change rate then press ENTER.
 3. Set the required first current then press ENTER.
 4. Set the required second current and press ENTER.
 5. Set the required first duty cycle and press ENTER.
 6. Set the required second duty cycle setting and press ENTER to finish.
- Press the ON/OFF button to start or pause.
- The LED display on the lower left displays the count.

Dynamic Pulse

Note: Initially the first setting current is used and the load will switch to the second setting current on receiving a trigger. After maintaining the setting time, it will switch back to the first current. Press SHIFT+ENTER to enter the dynamic setting mode.

- Press 5 then press ENTER to enter the setting mode.
 1. Set the required first current change rate and press ENTER.
 2. Set the required second current change rate then press ENTER.
 3. Set the required first current then press ENTER.
 4. Set the required second current and press ENTER.
 5. Set the required pulse width setting and press ENTER to finish.
- Press the ON/OFF button to start or pause. Press button 3 to trigger once only.

Dynamic Toggle

Initially the first setting current is used and the load will switch to the second setting current on receiving a trigger. After maintaining the setting time, it will switch back to the first current.

- Press SHIFT+ENTER to enter the dynamic setting mode.
- Press 6 then press ENTER to enter the setting mode.
 1. Set the required first current change rate and press ENTER.
 2. Set the required second current change rate then press ENTER.
 3. Set the required first current then press ENTER.
 4. Set the required second current and press ENTER to finish setting.
- Press the ON/OFF button to start or pause. Press button 3 to trigger once only.

Sequential Operation Function

7 locations can be stored in memory and each can have up to 84 dynamic currents. The current can be cycled through in sequence.

- Press SHIFT+CC to enter the dynamic setting mode.
- Enter location 1 to 7 then press ENTER to enter the memory storage mode.
 1. Set the required max current and press ENTER.
 2. Set the first dynamic change current value and press ENTER.
 3. Set the change rate and press ENTER.
 4. Set the sequence time and press ENTER
 5. Set the second dynamic change current value and press ENTER.
 6. Set the change rate and press ENTER.
 7. Set the sequence time and press ENTER
 8. Set the third dynamic change current value and press ENTER.
 9. Set the change rate and press ENTER.
 10. Set the sequence time and press ENTER
 11. Set the number of repetitions and press ENTER to store the settings.
 12. Press ESC button to exit the input mode.
- To use the settings press ON/OFF to start or pause.

Note: Pressing ESC after entering an incorrect value will erase the entry allowing you to repeat the value again before pressing ENTER to store.

Sequential Recall Function

Use to recall any of the 7 stored sequential operation in memory.

- Press CALL+CC to enter the recall function mode.
- Enter location 1 to 7 as required.
- The sequential setting will be displayed on the LED readout.
- To use the settings press ON/OFF to start or pause.
- When the number of repetitions is complete, press ON/OFF to repeat.
- The LED display on the lower left displays the repetition count.

Battery Test Function

Up to 10 test settings can be stored in memory.

- Press SHIFT+6 to enter the battery test mode.
- Enter location 1 to 10 then press ENTER to enter the memory storage mode.
 1. Set the current rate and press ENTER.
 2. Set the discharge current and press ENTER
 3. Set the discharge end-off voltage and press ENTER.
 4. Set the discharging end-off capacity and press ENTER.
 5. Set the discharging end-off time and press ENTER to store the settings.
 6. Press ESC button to exit the input mode.

Note: Pressing ESC after entering an incorrect value will erase the entry allowing you to repeat the value again before pressing ENTER to store.

Battery Test Recall Function

Use to recall any of the 10 stored battery test operations in memory.

- Press CALL+6 to enter the recall function mode.
 1. Enter location 1 to 10 as required.
 2. To use the settings press ON/OFF to start or pause.
- When the testing parameters are reached, the test will be terminated automatically.

Over Current Protection Test Function

Up to 10 test settings can be stored in memory.

- Press SHIFT+9 to enter the OCP test function mode.
- Enter location 1 to 10 then press ENTER to enter the memory storage mode.
 1. Set the VON voltage and press ENTER.
 2. Set the VON time delay and press ENTER
 3. Set the current range and press ENTER.
 4. Set the start current and press ENTER.
 5. Set the step current and press ENTER.
 6. Set the step reduction time and press ENTER.
 7. Set the end current and press ENTER.
 8. Set the OCP voltage and press ENTER.
 9. Set the maximum current and press ENTER.
 10. Set the minimum current and press ENTER to store the settings.
 11. Press ESC button to exit the input mode.
- To use the settings press ON/OFF to start or pause.
- The LED display on the lower right displays the trigger count.

Note: Pressing ESC after entering an incorrect value will erase the entry allowing you to repeat the value again before pressing ENTER to store.

Over Current Protection Test Recall Function

Use to recall any of the 10 stored OCP test values in memory.

- Press SHIFT+9 to enter the OCP recall function mode.
- Enter location 1 to 10 as required.
- To use the settings press ON/OFF to start or pause.
- When one of the conditions is met the output will cease, press ON/OFF to repeat.
- The LED display on the lower left displays pass or fail.

Note: When the voltage reaches the VON value, it will maintain value for some time, and the current outputs will decrease progressively at intervals set by the step value until it reaches the cutoff current, or the voltage is higher than that set by OCP then the output ends. If the voltage is higher than the OCP voltage and also the current value is between the maximum and the minimum set currents, it passes, otherwise it fails.

Over Power Protection Test Function

Up to 10 test settings can be stored in memory.

- Press SHIFT+5 to enter the OCP test function mode.
- Enter location 1 to 10 then press ENTER to enter the memory storage mode.
 1. Set the VON voltage and press ENTER.
 2. Set the VON time delay and press ENTER
 3. Set the current range and press ENTER.
 4. Set the start power and press ENTER.
 5. Set the step power and press ENTER.
 6. Set the step reduction time and press ENTER.
 7. Set the end power and press ENTER.
 8. Set the OPP voltage and press ENTER.
 9. Set the maximum power and press ENTER.
 10. Set the minimum power and press ENTER to store the settings.
 11. Press ESC button to exit the input mode.
- To use the settings press ON/OFF to start or pause.

Note: Pressing ESC after entering an incorrect value will erase the entry allowing you to repeat the value again before pressing ENTER to store.

Over Power Protection Test Recall Function

Use to recall any of the 10 stored OPP test values in memory.

- Press SHIFT+9 to enter the OPP recall function mode.
- Enter location 1 to 10 as required.
- To use the settings press ON/OFF to start or pause.
- When one of the conditions is met the output will cease, press ON/OFF to repeat.
- The LED display on the lower left displays pass or fail.

Note: When the voltage reaches the VON value, it will maintain value for some time, and the power outputs will decrease progressively at intervals set by the step value until it reaches the cutoff power, or the voltage is higher than that set by OPP then the output ends. If the voltage is higher than the OPP voltage and also the power value is between the maximum and the minimum set power, it passes, otherwise it fails.

Baud Rate Setting Function

This allows users to manually adjust the baud rate for the RS232 connection port.

- Press SHIFT+0 to enter the OCP test function mode.
 1. Adjust the baud rate setting and press ENTER.
 2. The steady state mode is restored.

Note: Only modify the baud rate when there is no active connection or the lead is disconnected.

Remote Control Trigger Function

- Press SHIFT+CR to switch the remote control function.
- Through the remote control, the steady state mode, dynamic test mode state, the sequence operation mode and the battery test mode can be entered.

Note: When GRAP on the LED display illuminates, the remote control has the facility to save each function to a preset button on the remote.

Remote Compensation Function

Note: No memory function available in this mode.

- Press SHIFT+CW to enter the remote compensation mode.
- The LED COMM will illuminate.

Keyboard Lock Function

- Press SHIFT+O to enter the control panel lock mode.

Note: Only the ON/OFF and SHIFT buttons are operational. In dynamic pulse and dynamic toggling mode button 3 is also operational. There is no memory function in this mode.

When the keyboard is not locked pressing ESC at any time reverts to the steady state mode. From here you can enter any mode by pressing the function keys.

Button Sounder ON/OFF Function

- Press SHIFT+1 to switch the button press sound on or off.

SPECIFICATIONS

Models		72-13200	72-13210
Input rating	Power Voltage Current	150W 0-120V 0-30A	300W 0-120V 0-30A
CC mode	Range Resolution Accuracy	0-3A / 0-30A 0.1mA / 1mA $\pm (0.05\% \text{ of set} + 0.045\% \text{ off.s})$	0-3A / 0-30A 0.1mA / 1mA $\pm (0.05\% \text{ of set} + 0.045\% \text{ off.s})$
CV mode	Range Resolution Accuracy	0-18V / 0-120V 0.1mV / 10mV $\pm (0.05\% \text{ of set} + 0.025\% \text{ off.s})$	0-18V / 0-120V 0.1mV / 10mV $\pm (0.05\% \text{ of set} + 0.025\% \text{ off.s})$
CR mode	Range Resolution Accuracy	0.05 Ω -10 Ω / 10 Ω -7.5k Ω 0.1 Ω $\pm (0.05\% \text{ of set} + 0.025\% \text{ off.s})$	0.05 Ω -10 Ω / 10 Ω -7.5k Ω 0.1 Ω $\pm (0.05\% \text{ of set} + 0.025\% \text{ off.s})$
CW mode	Range Resolution Accuracy	150W 0.01W $\pm (0.1\% \text{ of set} + 0.1\% \text{ off.s})$	300W 0.01W $\pm (0.1\% \text{ of set} + 0.1\% \text{ off.s})$
STOP	Range Rising Falling	0-3A / 0-30A 0.0001-0.3A/us- 0.001-1.5A/us 0.0001-0.3A/us- 0.001-1.5A/us	0-3A / 0-30A 0.0001-0.3A/us- 0.001-1.5A/us 0.0001-0.3A/us- 0.001-1.5A/us
Voltage Measurement	Range Resolution Accuracy	0-18V / 0-120V 1mV / 10mV $\pm (0.03\% \text{ of set} + 0.025\% \text{ off.s})$	0-18V / 0-120V 1mV / 10mV $\pm (0.03\% \text{ of set} + 0.025\% \text{ off.s})$
Current Measurement	Range Resolution Accuracy	0-3A / 0-30A 0.1mA / 1mA $\pm (0.05\% \text{ of set} + 0.045\% \text{ off.s})$	0-3A / 0-30A 0.1mA / 1mA $\pm (0.05\% \text{ of set} + 0.045\% \text{ off.s})$
Power Measurement	Range Resolution Accuracy	150W 0.01W $\pm (0.1\% \text{ of set} + 0.1\% \text{ off.s})$	150W 0.01W $\pm (0.1\% \text{ of set} + 0.1\% \text{ off.s})$
Over Power Protection		165W	330W
Over Current Protection		35A	35A
Over Voltage Protection		125k Ω	125k Ω
Over Temperature Protection		85°C	85°C
Input Impedance		150k Ω	150k Ω
Dimension W x D x H		214mm x 345mm x 88.5mm	

Note: The above specifications are given in the ambient temperature 25°C \pm 5°C and after a 20 minute warm up time.

MAINTENANCE

Cleaning

- Use a damp cloth and a small amount of liquid detergent if necessary.
- Never submerge the power supply in liquid or allow any liquid to enter the case.
- Do not use any chemicals, abrasives or solvents that could damage the power supply casing.

Changing the fuse

- Replace the fuse only with one of exactly the same type and rating.
- Disconnect the mains power and unplug the mains lead before replacing the fuse.

Model	110/120V	220/230V
72-13200	T1.25A/250V	T0.5A/250V
72-13210	T1.25A/250V	T0.5A/250V



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.



When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment(WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

Made in China
150 Armley Road, Leeds, LS12 2QQ (UK)
Riverside One, Sir John Rogerson Quay, Dublin 2, D02 X576 (EU)
Man Rev 2.0