# GV-BT1800 Fusion



# **User Manual**

wireless

PLAYBACK | wired

Wireless Headphones with Active Noise Cancelling





# 30 Day Right To Return

We do not envisage any problems occuring with your Groov-e GV-BT1800 Fusion Wireless Active Noise Cancelling Headphones. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



#### 12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



# **Extended Warranty**

Please register your product within 30 days from date of purchase **www.groov-e.co.uk/warranty**.

Proof of purchase required.



# Contact Us

Reach out to us at **info@groov-e.co.uk** or visit **www.groov-e.co.uk** 

"Congratulations on your purchase and Thank You for choosing the groov-e GV-BT1800 Fusion Wireless Headphones with Active Noise Cancelling.

Please read the quide carefully before usina".


# **CAUTION**

- **1.** When not in use for a long period of time please turn off the headphones and store carefully to avoid any damage.
- 2. In order to prolong the battery life, please charge every 6 months.
- 3. Please charge the headphones first if it has been left unused for a long time.
- 4. The battery in the headphones is original and please do not attempt to change it yourself.
- **5.** Please keep the headphones in a dry place.
- 6. Please keep away from temperatures in excess of 60 C to avoid battery blast accident.
- 7. Please don't bend or twist the headphones bracket to avoid deformation.
- 8. Please do not remove the ear-cushions.
- **9.** Do not play at high volumes for long periods at a time. to avoid potential hearing damage.
- **10.** Do not use the headphones in a dangerous place or whilst driving.


# **OVERVIEW**

#### In the box:

- **1x** GV-BT1800 Headphones
- **1x** USB-C Charging Cable
- 1x Removable Audio Cable

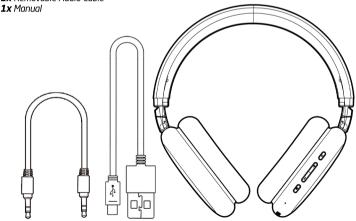


# **OVERVIEW**

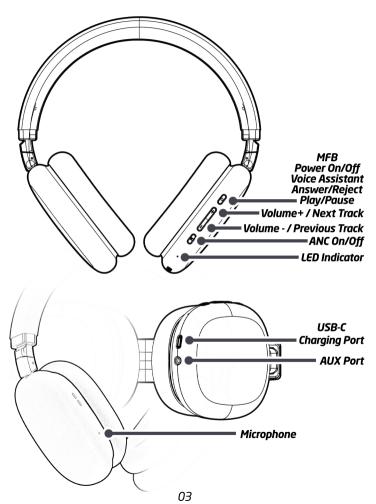


# Charging the Headphones

The headphones come with a USB-C cable that can be connected to your computer or other device made for charging.


- 1. Plug the USB-C end of the included USB cable into the USB-C port under the right ear-cup of the headphones.
- **2.** Plug the other end into a USB port on your computer or other devices made for USB charging.

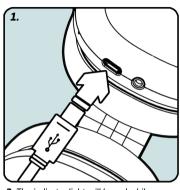

**3.** The indicator light will be red while charging.

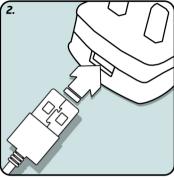


**4.** Once fully charged the indicator light will go out.
Charging time is about 3 hours on an empty battery.

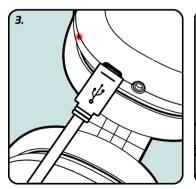




#### SWITCH ON/OFF BLUETOOTH

- **1.** To switch on, press and hold the **MFB** for about 3 seconds. The headset enters Bluetooth searching mode, and the blue and red indicator light starts to flash.
- 2. To switch off, press and hold the **MFB** for about 3 seconds, the red indicator light goes to flashing red then the light goes out.

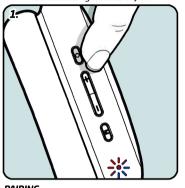

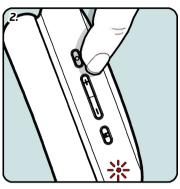



#### PAIRING

Ensure that your phone or Bluetooth device you wish to pair is switched on.

**3.** To pair the headphones if it has not been previously paired with a device, firstly switch on the headphones using the **MFB**.

4. The headphones enter pairing mode, the LED indicator light will start to flash blue and red alternately.

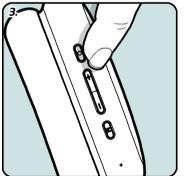

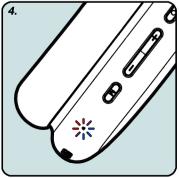


**Note:** To pair the headphones with a new device if it has previously been paired, ensure that the original paired device is switched off.


# PAIRING


- Activate the Bluetooth feature on your phone or Bluetooth devices, and set it to search for Bluetooth devices.
- **6.** Select "GV-BT1800" from the list of found devices on your phone or Bluetooth devices, Bluetooth is connected once there is the "BLUETOOTH CONNECTED" prompt.



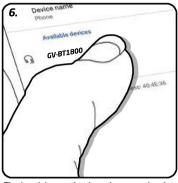

 **7.** When successfully connected, and while playing music or paused, the blue light will flash slowly.



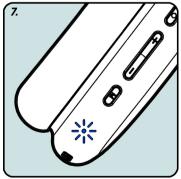

"GV-BT1800" can make and receive calls hands-free with your compatible mobile phone and listen to music from a compatible Bluetooth device, but they should be with 10 meters (33 feet) of each other.

#### **VOLUME/NEXT TRACK**


**1.** During a call or while listening to music. **Volume Up:** Press the **+** Button

**Volume Down:** Press the - Button **To select the next song:** Durina plavback,

long press the + button.


To select the previous song: Long press the - button.

**Note:** A "Volume Maximum" tone is heard when the volume reaches maximum level.

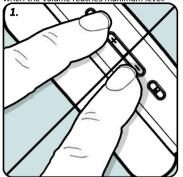


#### **VOICE ASSISTANT**

To use voice assistant function, double press the **MFB** button to activate the assistant on your phone. This function is based on your phone support Siri/Google/Alexa.

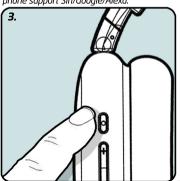


#### CALLS/MUSIC

2. To make a call: use your mobile phone in the normal way when the headset is connected to it. During an incoming call, quickly press the MFB to answer it, or press and hold about 2 seconds to reject the call. During a call, short press MFB to end it. To Play Music: To play or pause a music track press the MFB button.

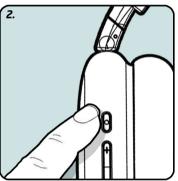

ACTIVE NOISE CANCELLING (ANC)
Turn ANC On: Long press the ANC Button
with a "ANC On" prompt.

**Turn ANC Off:** Long press the ANC Button with a "ANC Off" prompt.

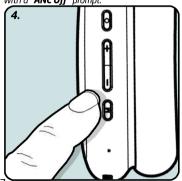


27

#### PASSIVE MODE

**1.** You can use the "GV-BT1800" as a wired headphone to save batteries.

Simply connect one end of the 3.5mm audio cable to the bottom of the Right ear-cup and the other end to your phone or audio device. Inserting the 3.5mm audio cable will disable the wireless functionality, so previous/next track, volume and phone call functions will be controlled on your device.

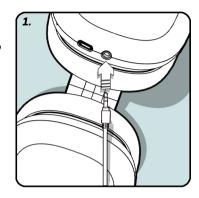

#### DISCONNECT THE HEADPHONES

To disconnect the headphones from your device, switch off the headset, or disconnect it in Bluetooth menu of your device.

#### RECONNECT THE HEADPHONES

To connect the headphones to the phone or Bluetooth devices that you have last used with it, switch on the headset, or make the connection in the Bluetooth menu of your device.

#### LOW BATTERY WARNING

At power on condition, there will be a warning prompt "battery is low".

#### POWER OFF AT LOW BATTERY

At power on condition, the headset will switch off automatically when the battery power drops below certain level.

# **SPECIFICATIONS**

Wireless range: 10M (open area) Battery: Lithium battery: 400mAh Music plavina time: 32 hours @50% volume Charging time: 3 hours Standby time: 200 hours Driver unit 40mm ANC: 20dB +/- 3dB Impedance: 32 ohms +/- 15% Speaker frequency: 20-20KHz Speaker sensitivity: 114dB +/- 3dB Microphone sensitivity: -38dB +/- 3dB Supports hands-free conversation LËD battery indicator

Rluetooth version: V5 3

# *FFATURES*

- 40mm Neodymium drivers for premium sound
- ANC (Active Noise Cancelling) technology blocks out external poise
- Bluetooth or Corded both ontions for you to eniov!
- 32 hours wireless music playback (Bluetooth) 3.5mm headphone jack for corded audio
- playback (non-Bluetooth) • Voice assistant enabled
- Super bass
- Soft, on-ear cushions for long listening comfort
- Swivel ear cups
- Recharaeable batterv
- Built-in mic for hands-free calls
- USB-C charging cable (included)
- Removable audio cable (includéd)















Cancelling (ANC)

Active Nosie Wireless Audio Playback (32 hours)

Suner Bass

Assistant

Hands-Free Microphone

Design

Removable Audio Cable

# BATTERY REMOVAL/DISPOSAL

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

Never throw batteries into a fire or attempt to open the outer casing.

Should your product develop a fault and your battery needs replacing for further advice on how to safely remove your battery please visit our website at www.arooy-e.co.uk

#### Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recyclina advice.







#### GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

- 1) Claims under this quarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.
- 2) This quarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.
- 3) This Guarantee Excludes:
- (i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.
- (ii) Alterations or adjustments made to equipment
- (iii) Loss of data resultant from malfunction of hard drive or other storage device
- (iv) Damage caused to any third party device as a result of using the product.
- 4) No liability under this augrantee shall be incurred:
- (i) In respect of damage or loss occurring during transit to or from the purchaser
  (ii) Where the serial number plate of the equipment has been removed or altered in any way. **5)** Groov-e shall not be liable for consequential damage, loss or injury arising from or in
- connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.
- 6) The cost of carriage to and from Groov-e shall be borne by the purchaser.
- 7) This quarantee is personal to the original purchaser and is not transferable.
- 8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002. The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

# **DECLARATION OF CONFORMANCE**

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

Groov»e Unit J Braintree Industrial Estate Braintree Road Ruislip Middlesex HA4 OEJ UK

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty **www.groov-e.co.uk/warranty** 

# Authorised EU Representative

Rashmian EU Ltd Robwyn House Suite 3E Corrintra Castleblayney Co. Monaghan Ireland