

ER400PEN Pendant Transmitter



Features:

- FM Transmitter
- 2 Colour Coded Push Buttons
- Pull Cord Lanyard
- Up to 150 Meters Range *
- 7 possible functions **
- Unique Serial Number

Operating Instructions:

Pressing either/both of the buttons or pulling the pull cord lanyard will cause the ER400PEN to transmit for the duration of the action. The LED (next to the GREEN button) will illuminate during this period with a colour that relates to the function pressed as shown below.

Green	Red	Pull Cord	LED Colour
✓	✗	✗	Green
✗	✓	✗	Red
✓	✓	✗	Orange
✗	✗	✓	Orange
✓	✗	✓	Orange
✗	✓	✓	Orange
✓	✓	✓	Orange

Fitting/Replacing the battery:

- 1) Using a small cross-headed screwdriver, remove the two rear case screws.
- 2) Carefully, separate the front from the back, so as to not dislodge the Buttons/Spring assembly.
- 3) Remove existing battery being careful not to apply too much force on the battery retention clip.
- 4) Without making hand contact across the polarities of the battery (this will reduce battery expectancy), fit the new battery and push firmly into place.
- 5) Re-assemble the case and re-tighten the screws. Be careful not to over tighten to prevent the case thread being damaged.
- 6) Activate all functions to test.

* Range may vary to environmental conditions, receiver sensitivity & antenna etc.

** Depending on receiver connection.