

EASYFIND SET-UP

CONNECT RECEIVER TO MAINS/12v

CONNECT SCART LEAD TO RECEIVER AND TV

PRESS OK (on the receiver remote)

SELECT EASYFIND ASTRA 28*

PRESS OK

PRESS INFO AND TURN ON LED (1)

THE SYSTEM IS NOW READY



The reason you press info is so that when you are aligned you can finely tune to maximum signal, the picture will automatically come in the background when the dish is on the correct satellite

CONNECT THE ANTENNA FROM THE RECEIVER, LNB 'IN' TO THE DISH

DISH FACE VERTICAL

TURN LNB SO THE ARROW IS AT 12 O'CLOCK & THE CABLE COMES OUT AT 5 O'CLOCK

RED LED LIGHTS/FLASHES

MOVE DISH EAST (FROM A DUE SOUTH START) TO THE SATELLITE, WHEN ON THE CORRECT SATELLITE THE LED WILL BURN 'GREEN'

IF IT GOES 'GREEN & AMBER/RED' FLASHING THEN YOU ARE ON THE WRONG ASTRA

IT WILL ONLY BURN STEADY GREEN WHEN YOU ARE ON THE SATELLITE SELECTED IN THE EASYFIND MENU

THE DISH ELEVATION IS NOT REALLY CRITICAL JUST LOOK FROM THE SIDE AND MAKE SURE IT'S VERTICAL ASSUMING A CENTRAL UK LOCATION. WITHIN THE UK THE CORRECT ELEVATION WILL VARY BETWEEN +5° (SOUTH COAST) AND -2° (NORTH SCOTLAND).

PLEASE READ FIRST