



Oct.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case that the application demands a high level of reliability, such as automotive,
please contact a company representative for further information.

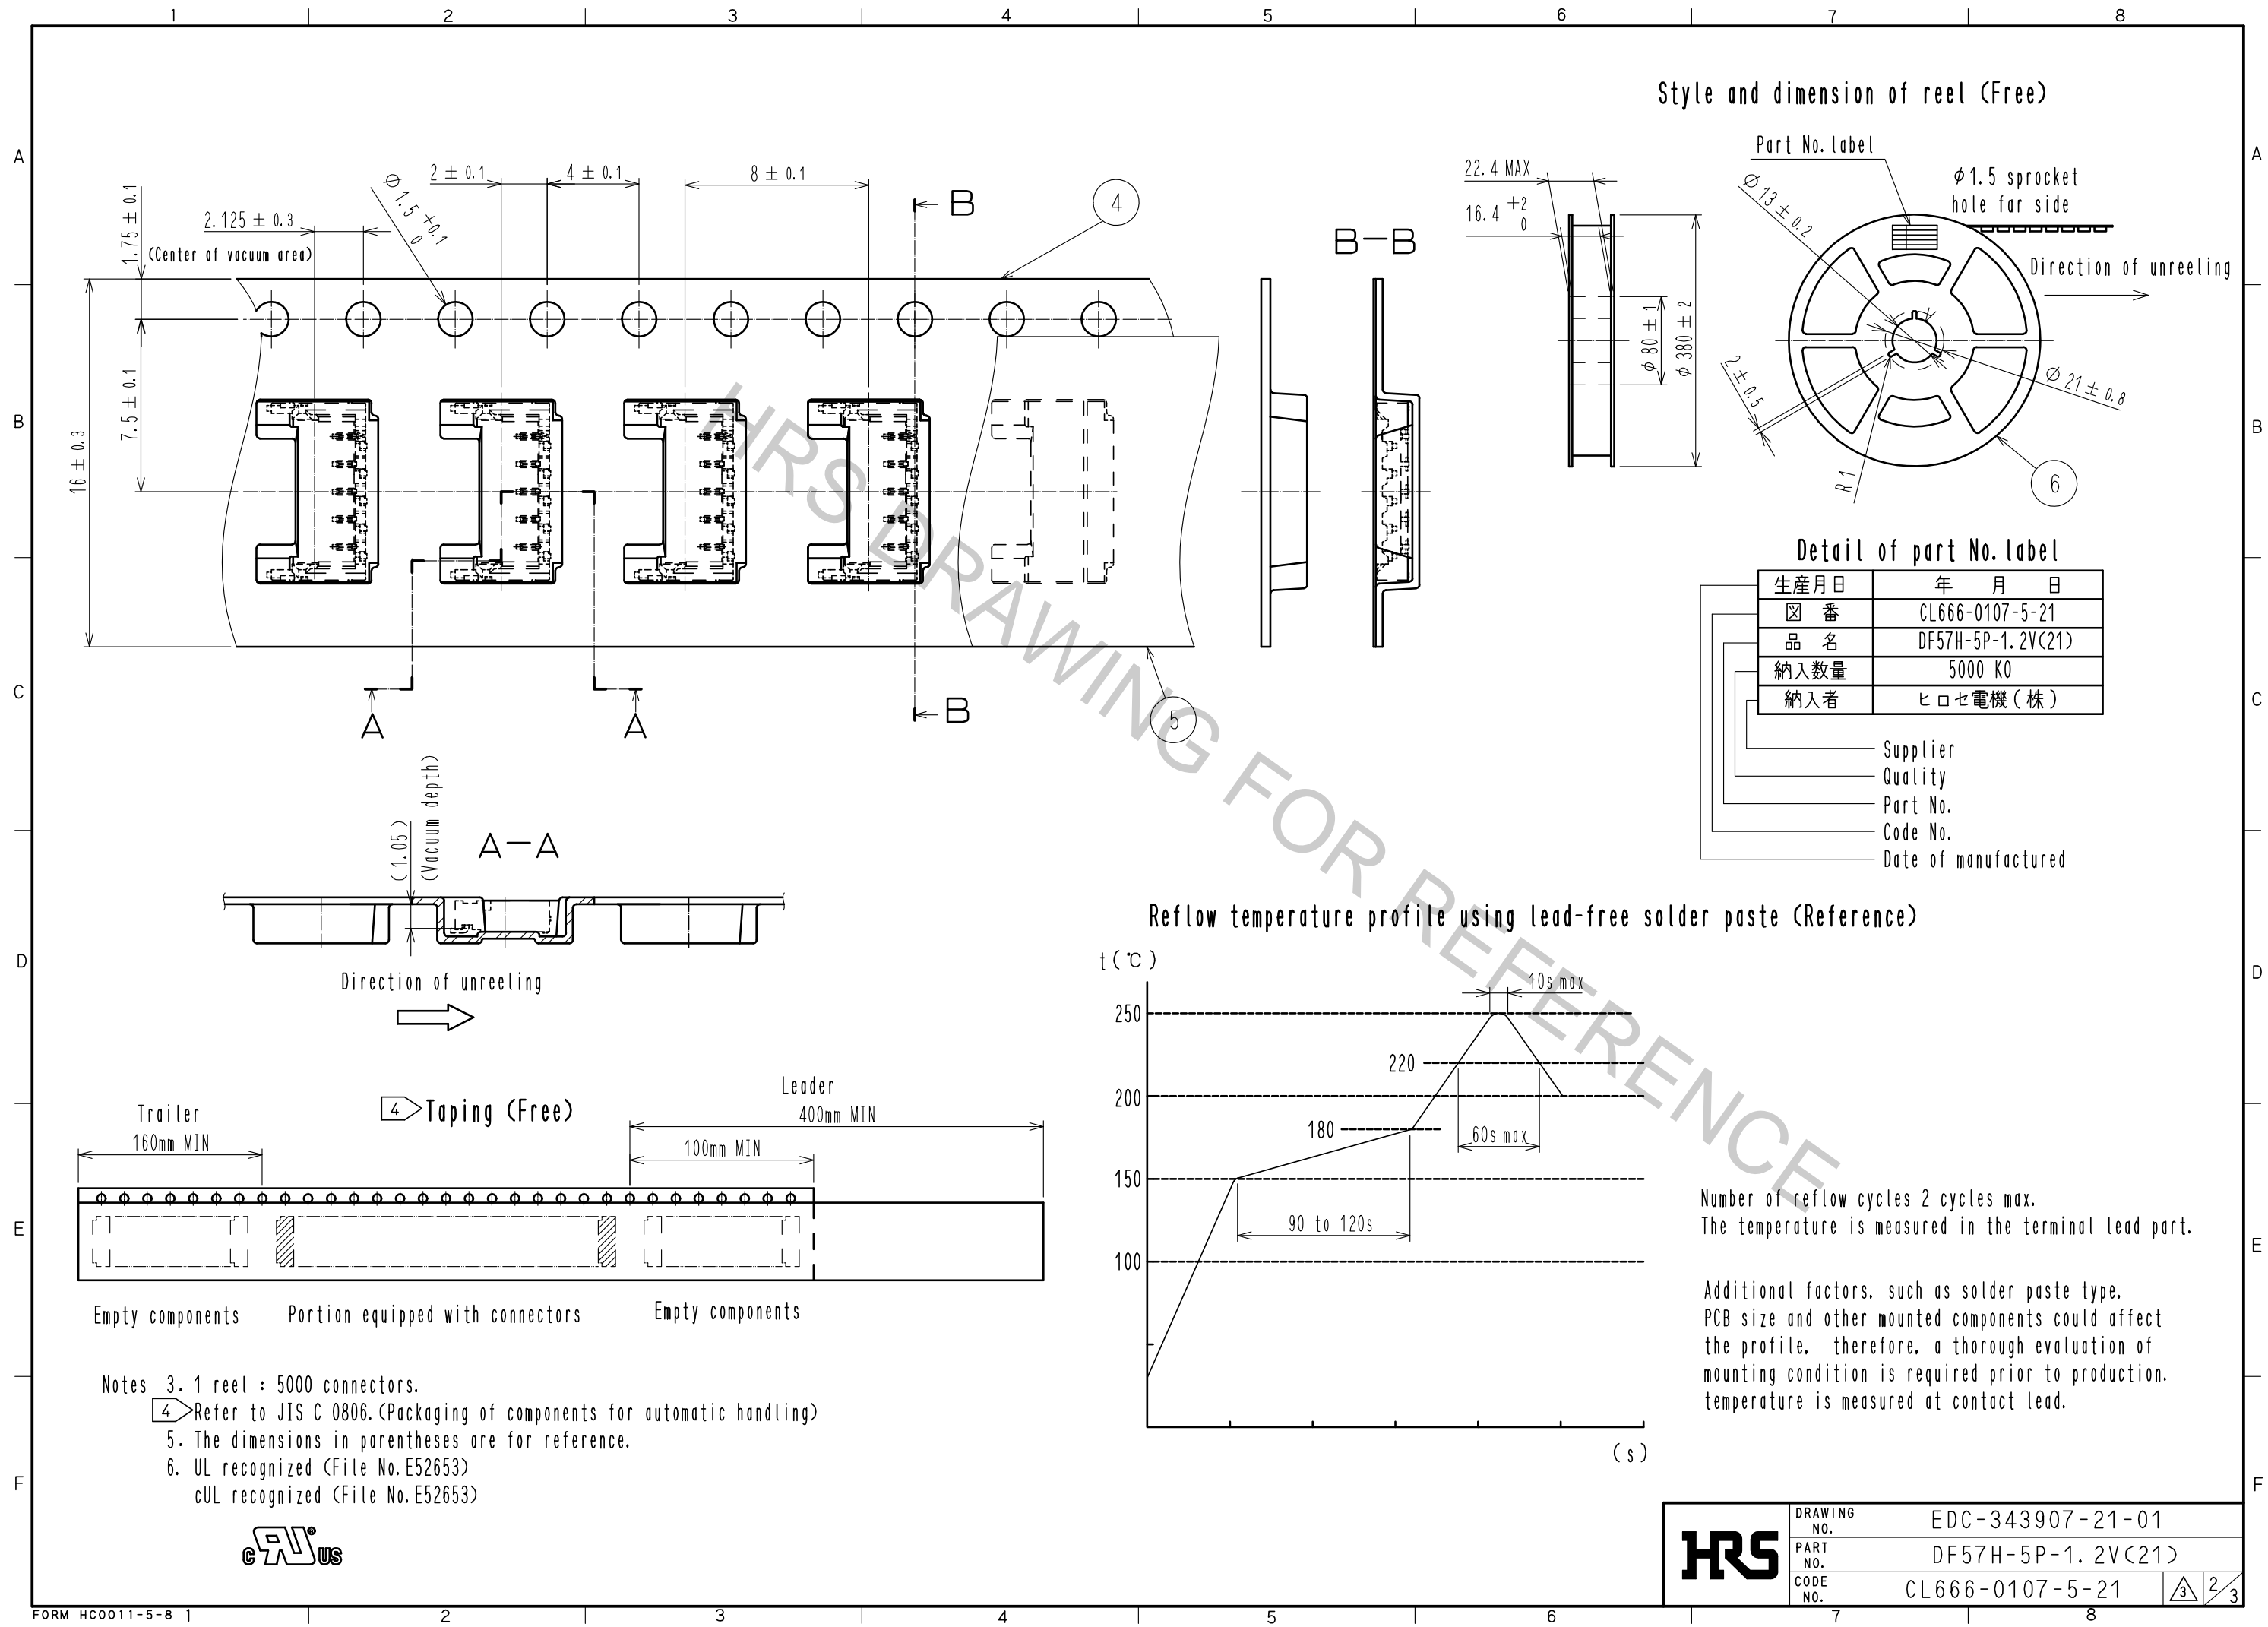


DF57 Series Mating / Unmating Operation Instruction

Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

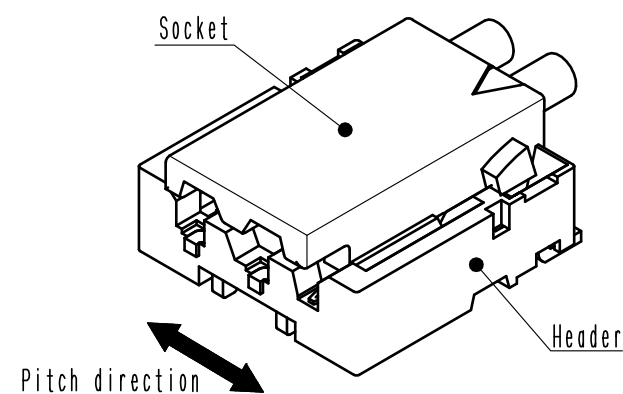

②Slightly press the socket down at cable side to tilted angle.

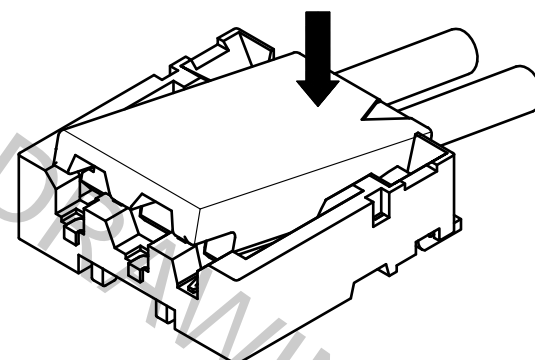


③Press down at the lever side with stabilizing the cable side to insert. Mating completes.

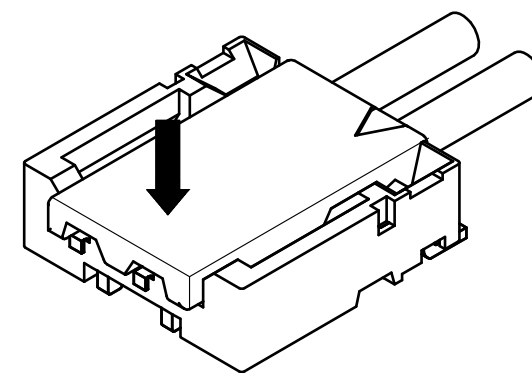


Unmating


①Hook the lever with finger nail.

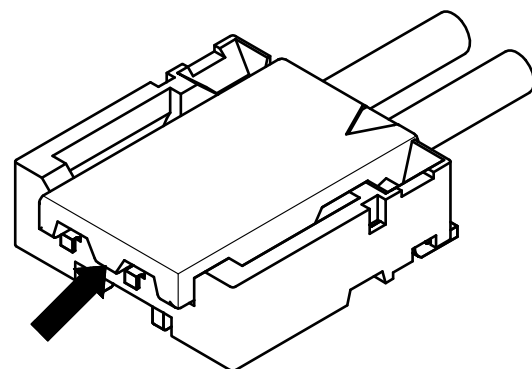

②Lift up to the upper direction and friction lock is released.

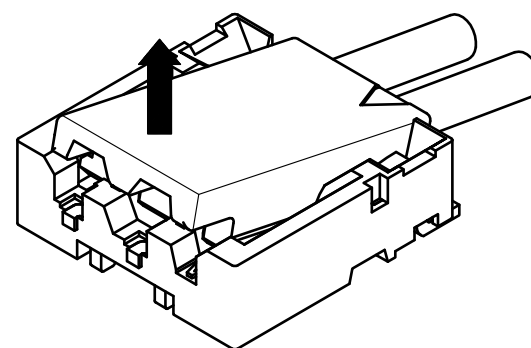

③Lift up to the upper direction and positive lock is released. Removal completes.

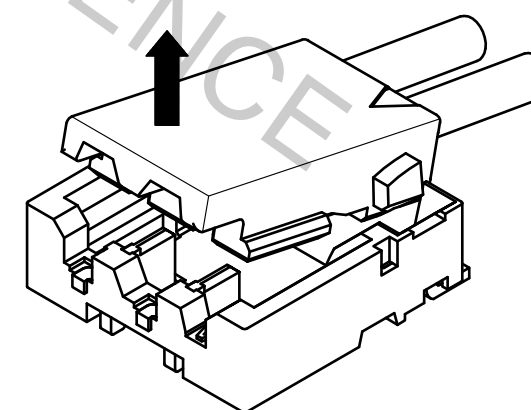

HRS

| | |
|-------------|-------------------|
| DRAWING NO. | EDC-343907-21-01 |
| PART NO. | DF57H-5P-1.2V(21) |
| CODE NO. | CL666-0107-5-21 |

3/3