


## DF58 Series Mating / Unmating Operation Instruction


## Mating


① By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

② Slightly press the socket down at the center of the socket.

③ Press down at the lever side with stabilizing the cable side to insert. Mating completes.

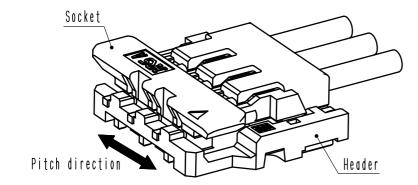


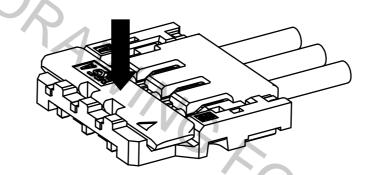

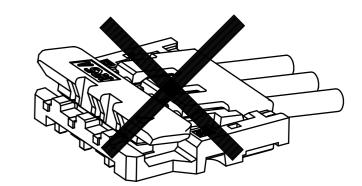





① Hook the lever with finger nail. (Possible with one side)

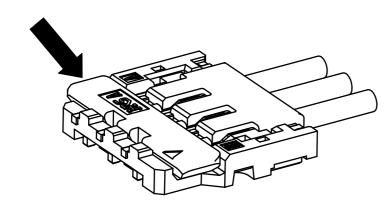

② Lift up to the upper difrection and friction lock is released.

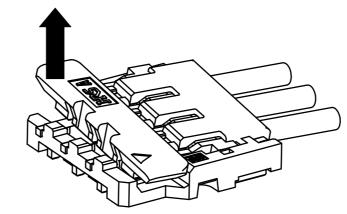

3 Lift it up to the upper direction more. and removal completes.

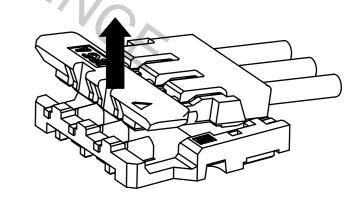

жs	DRAWING NO.	EDC-371175-00-00	
	PART NO.	DF58-*P-1.2V(21)	)
	CODE NO.	CL666-	$$ $$ $$ $$

RM HC0011-5-8 1 2 3 1 1 5