



JST

12

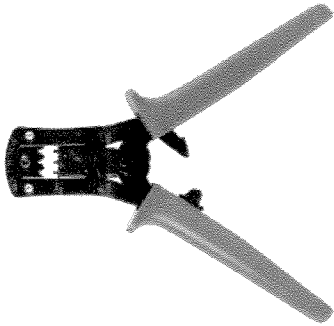

Open the tool.

13

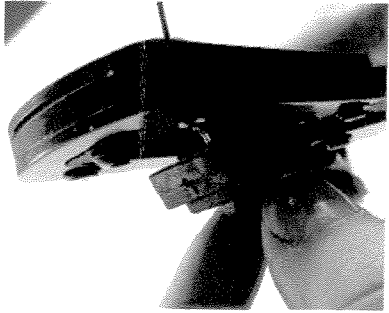

Loosen the flap locator.

14




Remove the crimped contact.

JST

Instruction Manual

Crimp Tool CS 10 – WC 1091

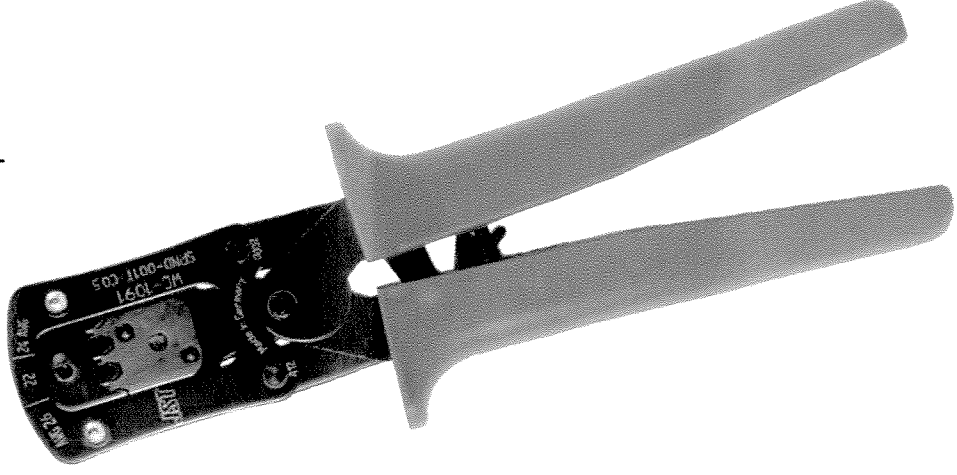


Application:

For processing of JST contacts


SPND-001T-C0.5 AWG 26-22

JST

JST

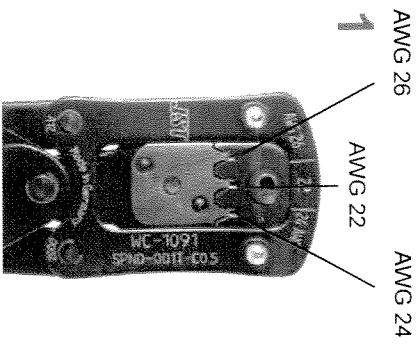


1

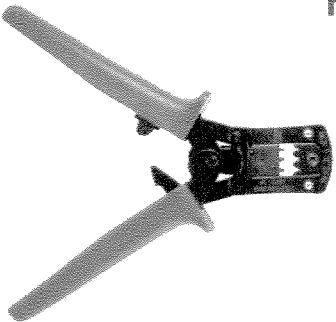


2

Open the tool.

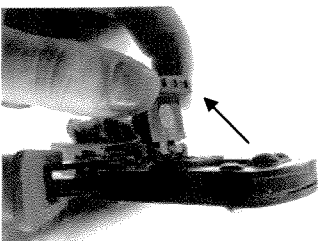

3

Click out the flap locator.

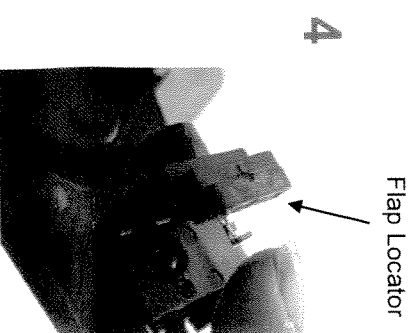

Contact has to be inserted until stop. Please pay attention to the cross section.




5

Close the flap locator.




6

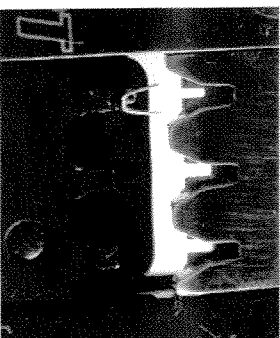


7

The contact lies in the centre of the respective profile.

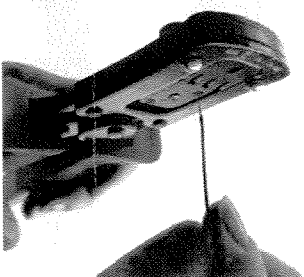


10

Insert the cable until insulation stop blade.

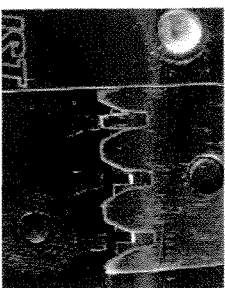

8

Close the tool slightly until the contact is held (1. Ratchet Lever)

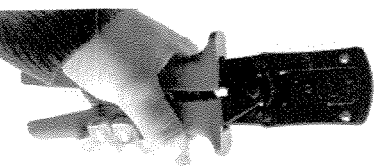

11

Close the tool.

