

LFSTBEB8491 Quick Start Guide

The MMA8491Q Xtrinsic low-power, 45 degree tilt sensor enables smart meters, home appliances and asset tracking applications through integrated auto-on/auto-sleep energy-efficient operation housed in a specialized industrial package.

1 Unpack the Board

- Unpack the board. Verify package contents according to the kit website: freescale.com/sensortoolbox.
- Assemble the hardware by connecting a development board to the LFSTBUS interface board. This kit comes with one accelerometer development board that represents the MMA8491Q accelerometer. The development board can be connected to the LFSTBUS interface board. Both of these board types have a small arrow to indicate where to connect (see image above). More information can be found at freescale.com/sensortoolbox.




2 Download Latest Software

- Download the latest version at freescale.com/sensortoolbox.
- This Sensor Toolbox kit uses the general Sensor Toolbox communication driver. The installation only needs to be done once. Follow the on-screen instructions to install the communication driver for the tool.
- This Sensor Toolbox uses a specific device driver and is factory programmed out of the box. It can also be found at freescale.com (search for AN4296_SW).

3 Power Up

- Plug in the USB and turn the board on using the power switch, located on the USB board.
- Follow AN4296 chapter 5 to run the HyperTerminal program to interact with the LFSTBEB8491 kit.

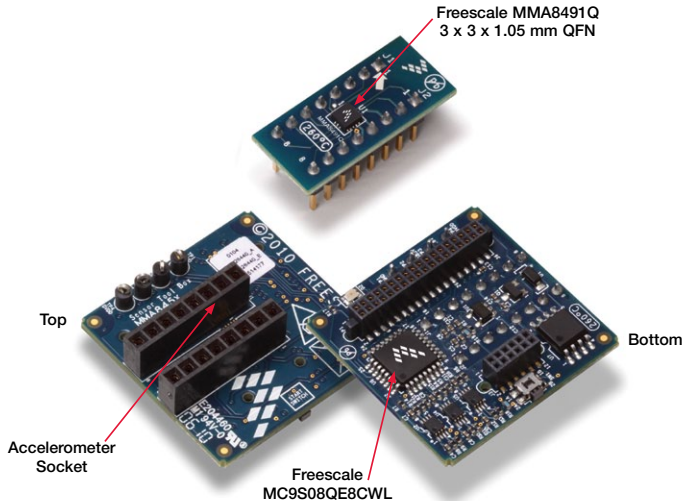

Learn more at freescale.com/sensortoolbox

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Xtrinsic is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © 2012 Freescale Semiconductor, Inc.

Doc Number: LFSTBEB8491QSG REV 1
Agile Number: 926-78658 REV B