

---

## SAMA5D2 (Rev. C) Xplained Ultra Evaluation Kit User's Guide

---

### Introduction

---



This user guide introduces the Microchip SAMA5D2 (Rev. C) Xplained Ultra evaluation kit (SAMA5D2C-XULT kit) and describes the development and debugging capabilities for applications running on the SAMA5D2 Arm® Cortex®-A5-based microprocessor unit (MPU). The SAMA5D2C-XULT kit supports the following part numbers:

- ATSAMA5D21C
- ATSAMA5D22C
- ATSAMA5D23C
- ATSAMA5D24C

## **32-BIT ARM-BASED MICROPROCESSORS**

---

---

- ATSAMA5D26C
- ATSAMA5D27C
- ATSAMA5D28C

## Table of Contents

---

Introduction.....	1
1. Kit Contents.....	5
2. Evaluation Kit Specifications.....	6
2.1. Electrostatic Warning.....	6
2.2. Power Supply Warning.....	6
3. Board Powerup.....	8
4. Sample Code and Technical Support.....	9
5. Hardware Overview.....	10
5.1. Introduction.....	10
5.2. Equipment List.....	10
5.3. Board Features.....	10
6. Board Components.....	12
6.1. Board Overview.....	12
6.2. Connectors On Board.....	13
6.3. Function Blocks.....	13
6.4. PIO Usage and Interface Connectors.....	26
6.5. PIO Usage on Expansion Connectors.....	47
7. Board Schematics.....	61
7.1. Schematics.....	61
8. Errata.....	76
8.1. NRST.....	76
8.2. nLBO.....	76
8.3. R63.....	76
9. Revision History.....	77
The Microchip Web Site.....	78
Customer Change Notification Service.....	78
Customer Support.....	78
Microchip Devices Code Protection Feature.....	78
Legal Notice.....	79
Trademarks.....	79

# **32-BIT ARM-BASED MICROPROCESSORS**

---

---

Quality Management System Certified by DNV.....	80
Worldwide Sales and Service.....	81

# 32-BIT ARM-BASED MICROPROCESSORS

## Kit Contents

---

---

### 1. Kit Contents

The SAMA5D2 (Rev. C) Xplained Ultra evaluation kit includes:

- One SAMA5D2C-XULT board
- One Micro-AB type USB cable

# 32-BIT ARM-BASED MICROPROCESSORS

## Evaluation Kit Specifications

## 2. Evaluation Kit Specifications

Table 2-1. Evaluation Kit Specifications

Characteristic		Specifications
Board		SAMA5D2C-XULT
Board Supply Voltage		USB and/or Battery powered
Temperature	Operating	0°C to +70°C
	Storage	-40°C to +85°C
Relative Humidity		0 to 90% (non-condensing)
Main Board Dimensions (L x W x H)		135 × 88 × 20 mm
Board Identification		SAMA5D2 XPLAINED ULTRA (see <b>Note 1</b> )

**Note:**

1. No change to board name marking from Revision A and B. The bill of materials of mounted components has changed but the PCB itself remains unchanged.

### 2.1 Electrostatic Warning



#### ESD-Sensitive Electronic Equipment!

The evaluation kit is shipped in a protective anti-static package. The board system must not be subject to high electrostatic potentials.

We recommend using a grounding strap or similar ESD protective device when handling the board in hostile ESD environments (offices with synthetic carpet, for example). Avoid touching the component pins or any other metallic element on the board.

### 2.2 Power Supply Warning



#### Hardware Power Supply Limitation

Powering the board with voltages higher than 5 VCC (e.g., the 12 VCC power adapters from other kits such as Arduino kits) may damage the board.

# 32-BIT ARM-BASED MICROPROCESSORS

## Evaluation Kit Specifications

---



### Hardware Power Budget

Using the USB as the main power source (max. 500 mA) is acceptable only with the use of the on-board peripherals and low-power LCD extension.

When external peripheral or add-on boards need to be powered, we recommend the use of an external power adapter connected to the USB Micro-AB connectors (can provide up to 1.2A on the 3.3V node).

---

### 3. Board Powerup

Three sources are available to power up the SAMA5D2C-XULT board:

- USB-powered through the USB Micro-AB connector (J23 - default configuration)
- Powered through the USB Micro-AB connector on the Embedded Debugger (EDBG) interface (J14)
- Powered through a rechargeable battery Li-polymer 3.7V connected to J3 or J4



Unlike Arduino Uno boards, the SAMA5D2C-XULT board runs at 3.3V. The maximum voltage that the I/O pins can tolerate is 3.3V. Providing higher voltages (e.g., 5V) to an I/O pin could damage the board.

The sequence for the initial powerup of the board is the following:

1. Unpack the board, taking care to avoid electrostatic discharge.
2. Connect the USB Micro-AB cable to the connector J23 (or J14).
3. Connect the other end of the cable to a free USB port of your PC.

**Table 3-1. Electrical Characteristics**

Parameter	Value
Input voltage	5 VCC
Maximum input voltage (limits)	6 VCC
Maximum DC 3.3V current available	1.2A
I/O voltage	3.3V only

### 4. Sample Code and Technical Support

After boot up, you can run sample code or your own application on the evaluation kit. Sample code and technical support is available on <http://www.microchip.com>. In particular, the software package (example source code and drivers) can be found on the “SAMA5D2 Software Package” page of our website.

Linux software and demos can be found on <http://www.at91.com/linux4sam/bin/view/Linux4SAM/>.



Make sure that the latest software version is downloaded before starting your evaluation. For more information, go to <http://www.at91.com/linux4sam/bin/view/Linux4SAM/>.

---

## 5. Hardware Overview

### 5.1 Introduction

The SAMA5D2C-XULT kit is a full-featured evaluation platform for the SAMA5D2 series ARM-based microprocessor units (MPU). It allows users to extensively evaluate, prototype and create application-specific designs.

### 5.2 Equipment List

The SAMA5D2C-XULT board is based on the integration of an ARM Cortex-A5-based microprocessor with external memory, one Ethernet physical layer transceiver, one SD/MMC interface, one host USB port and one device USB port, one 24-bit RGB LCD and debug interfaces.

Seven headers, compatible with Arduino R3 (Uno, Due) and two Xplained headers are available for various shield connections.

### 5.3 Board Features

**Table 5-1. Board Specifications**

Characteristics	Specifications
Dimensions (L x W x H)	135 x 88 x 20 mm
Processor	SAMA5D27C (289-ball BGA package), 14x14 mm body, 0.8 mm ball pitch
Oscillators	MPU, EDBG: 12 MHz crystal RTC: 32.768 kHz  PHY: 25 MHz
Main memory	2 x DDR3L SDRAM 2 Gbit - 16 Mbit x 16 x 8 banks (total 4 Gbit = 512 Mbyte) 1 x eMMC NAND Flash 4 Gbit
Accessory memories	One Serial EEPROM SPI One QSPI Serial Flash MX25L25673G  One EEPROM with MAC Address and Serial Number
SD/MMC	One 4-bit SD card connector
USB	One USB Host with power switch One Micro-AB USB device
Display	One LCD interface connector, LCD TFT Controller with overlay, alpha-blending, rotation, scaling and color space conversion
Image sensor	One ISC interface and connector
Ethernet	One Ethernet PHY (RMII 10/100 MHz)
Debug port	One JTAG interface connector

# 32-BIT ARM-BASED MICROPROCESSORS

## Hardware Overview


Characteristics	Specifications
	One EDBG interface with CDC One serial debug console interface (3.3V level)
Expansion connector	Arduino R3 compatible set of connectors XPRO set of connectors
Board supply voltage	5V from USB On-board power regulation by PMIC External battery-powered capability
Battery	On-board PowerCap
User interface	Reset, Wakeup and user configurable push buttons One tri-color user LED (red, green, blue)

## 6. Board Components

### 6.1 Board Overview

The fully-featured SAMA5D2C-XULT board integrates multiple peripherals and interface connectors as shown in the figure below.

**Figure 6-1. SAMA5D2C-XULT Board Overview**

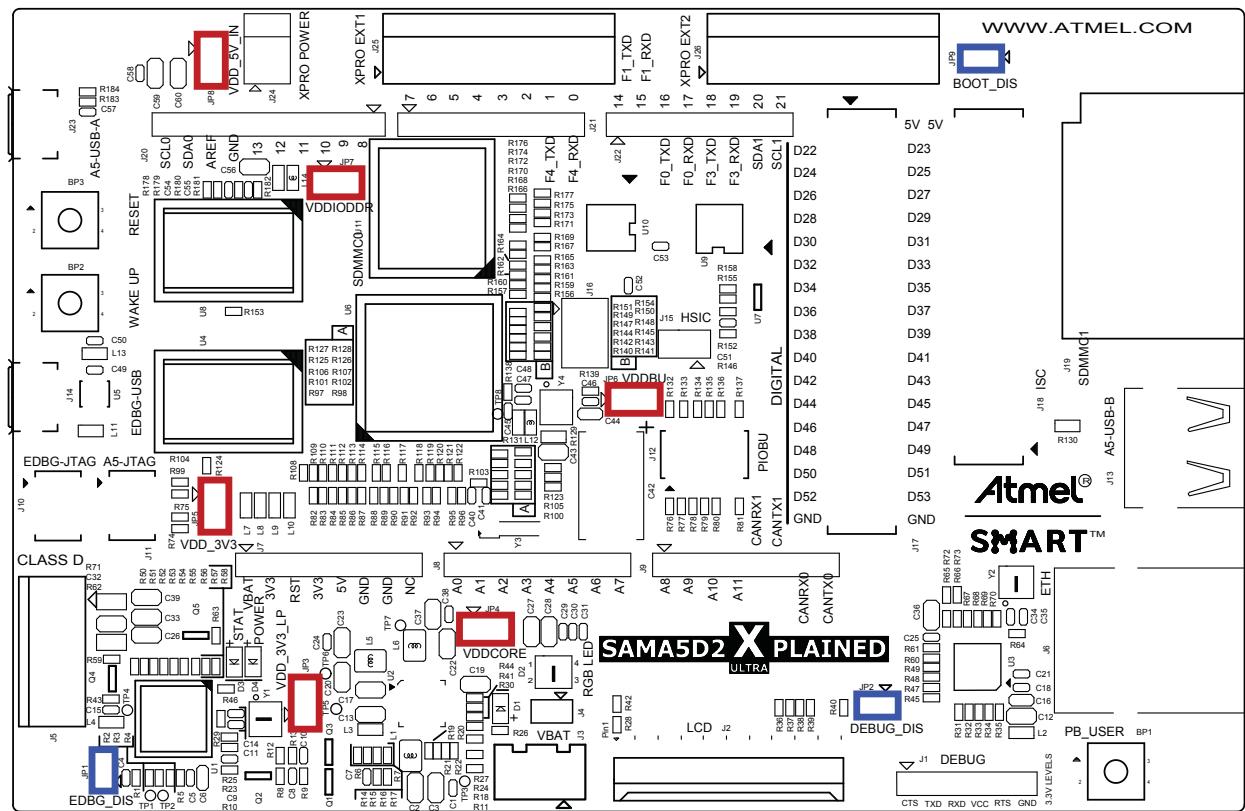

#### 6.1.1 Default Jumper Settings

The board overview shows the default jumper settings. Blue jumpers are configuration items. Red jumpers are current measurement points. The table below describes the functionality of the jumpers.

**Table 6-1. SAMA5D2C-XULT Jumper Settings**

Jumper	Default	Function
JP1	OPEN	Disable EDBG
JP2	OPEN	Disable Debug
JP3	CLOSE	VDD_3V3_LP current measurement
JP4	CLOSE	VDDCORE current measurement
JP5	CLOSE	VDDISC + VDDIOP0/1/2 current measurement
JP6	CLOSE	VDDBU current measurement

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

Jumper	Default	Function
JP7	CLOSE	VDDIODDR_MPUs current measurement
JP8	CLOSE	VDD_5V_IN current measurement
JP9	OPEN	Disable CS of SPI, QSPI and eMMC memories

## 6.2 Connectors On Board

The table below describes the interface connectors on the SAMA5D2C-XULT board.

**Table 6-2. SAMA5D2C-XULT Board Interface Connectors**

Connector	Interfaces to
J23	USB A Device. Supports USB device using a type Micro-AB connector
J13	USB Host B. Supports USB host using a type A connector
J1	Serial DBGU (3.3V level)
J11	JTAG, 10-pin IDC connector
J14	EDBG USB connector
J15	USB C (not populated)
J6	Ethernet
J2	Expansion connector with all LCD controller signals for display module connection (QTouch®, TFT LCD display with touchscreen and backlight)
J19	SDHCI SD/MMC connector
J3, J4	Battery connectors
J12	Tamper connector (not populated)
J7, J8, J9, J16, J17, J20, J21, J22	Expansion connectors with Arduino R3 compatible PIO signals
J24, J25, J26	Xplained Pro Expansion connectors
J10	EDBG JTAG (not populated)
J18	ISC interface
J5	Class-D amplifier output

## 6.3 Function Blocks

### 6.3.1 Processor


The SAMA5D2 Series is a high-performance, power-efficient MPU based on the ARM Cortex-A5 processor. Refer to the SAMA5D2 Series datasheet for more information.

### 6.3.2 Power Supply Topology and Power Distribution

#### 6.3.2.1 Power Supplies

Detailed information on the device power supplies is provided in the tables “SAMA5D2 Power Supplies” and “Power Supply Connections” in the SAMA5D2 Series datasheet.

**Figure 6-2. Processor Power Lines Supplies**

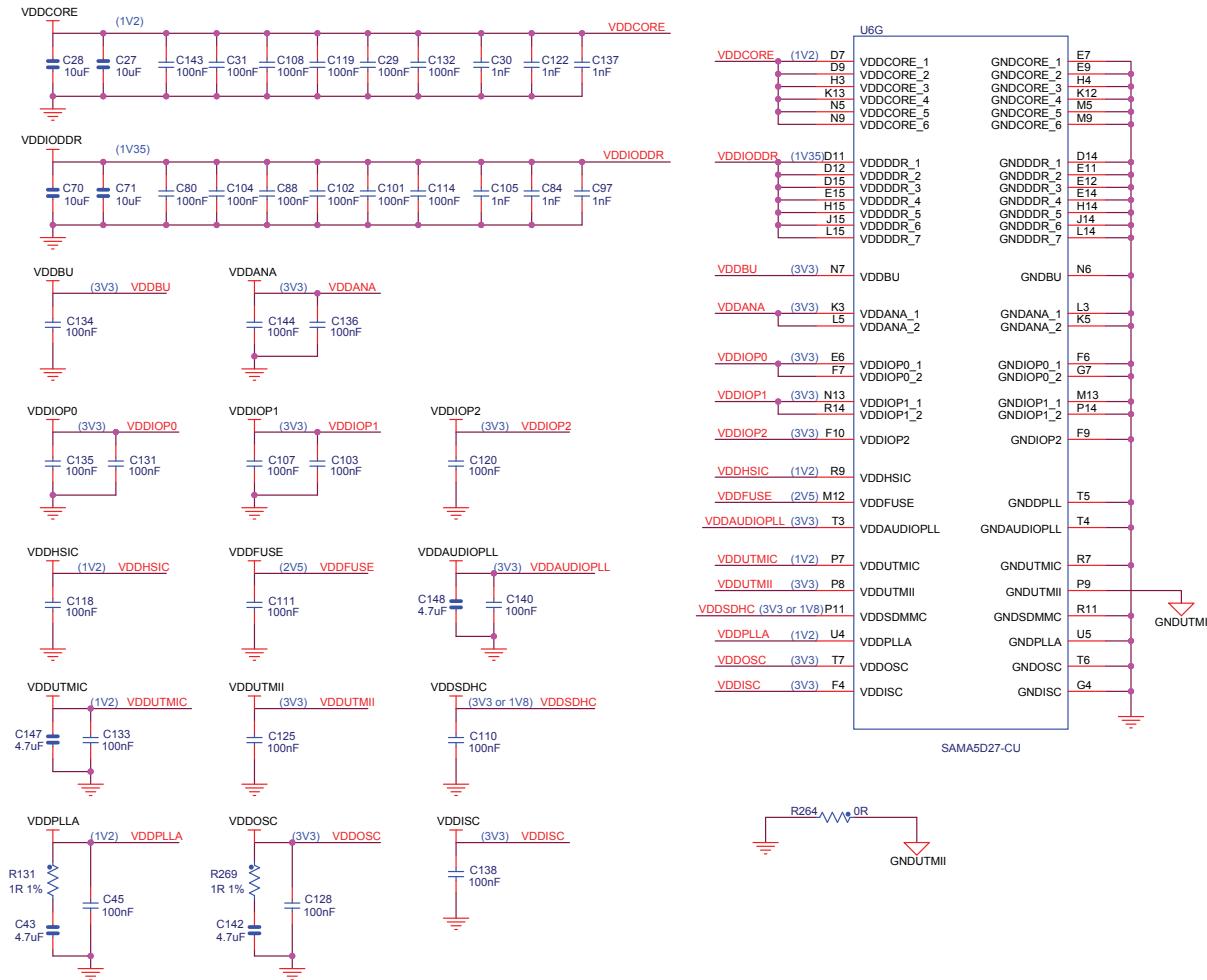

#### 6.3.2.2 Powerup and Powerdown Considerations

Powerup and powerdown considerations are described in section “Power Considerations” of the SAMA5D2 Series datasheet.



The powerup sequence provided in the SAMA5D2 Series datasheet must be respected for reliable operation.

#### 6.3.2.3 ACT8945A Power Management IC

The ACT8945A is a complete, cost-effective and highly-efficient ActivePMU™ power management solution, optimized to provide a single-chip power solution and voltage sequencing for SAMA5D2/SAMA5D3/SAMA5D4 and SAM9 series MPUs. It also meets the control requirements of these devices.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

The ACT8945A features three step-down DC-DC converters and four low-noise, low-dropout linear regulators along with a complete battery charging solution featuring the advanced ActivePath™ system-power selection function.

Refer to the ACT8945A datasheet at <http://www.active-semi.com/> for more details.

The three DC-DC converters utilize a high efficiency, fixed-frequency (2 MHz), current-mode PWM control architecture that requires a minimum number of external components. Two DC-DC converters are capable of supplying up to 1100 mA of output current, while the third supports up to 1200 mA. All four low-dropout linear regulators are high performance, low-noise regulators that supply up to 320 mA of output current.

### **Figure 6-3. Board Power Management**

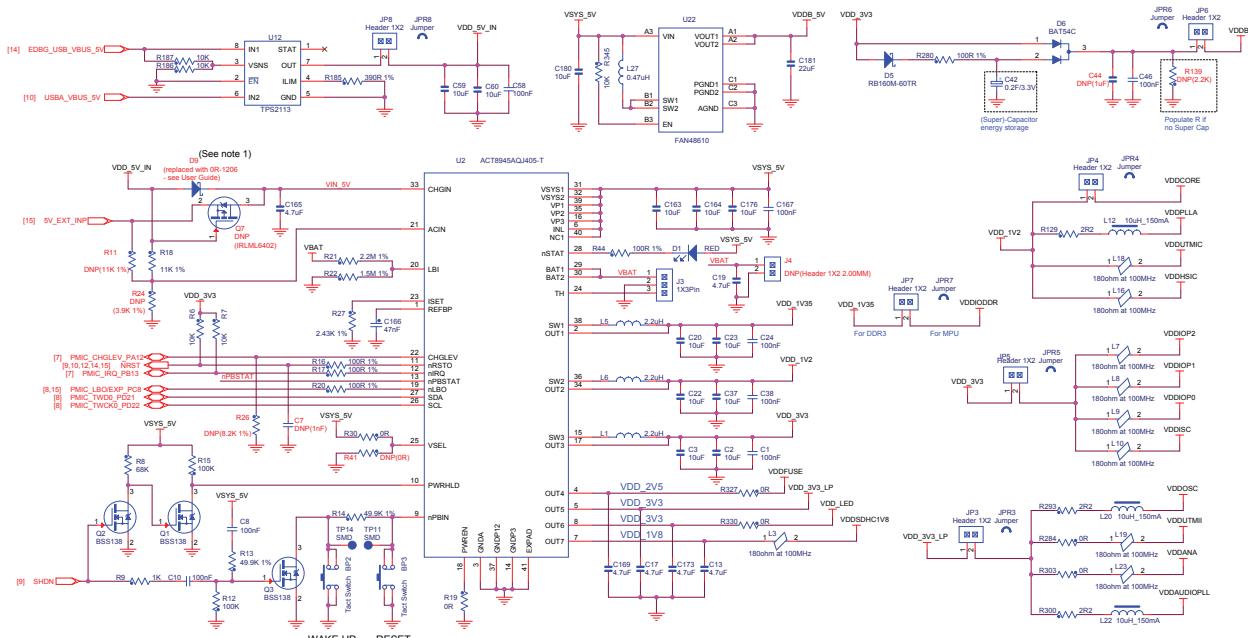

**Note:** Occasional board startup problems occurred when powered from a USB source with a weak VBUS level below 4.8V. To avoid the voltage drop and resulting startup problems, production boards were assembled with a  $0\ \Omega$  resistor in place of the Schottky diode D9 shown here.

## Supply Group Configuration

The ACT8945A provides:

- All power supplies required by the SAMA5D2 device:
    - 1.2V VDDCORE, VDDPLLA, VDDUTMIC, VDDHSIC
    - 1.35V VDDIODDDR
    - 2.0V VDDBU
    - 3.3V VDDIOP, VDDISC
    - 1.8V or 3.3V VDDSDHC (= VDDSDMMC)
    - 2.5V VDDFUSE
    - 3.3V VDDOSC, VDDUTMII, VDDANA, VDDAUDIOPLL
  - Power supplies to external chips on the main board:

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

- 2.5V VDDLED
- 4.8V VSYS\_5V

### 6.3.2.4 Power Boost 5V

To generate a true 5V voltage from the PMIC output (4.8V typical), a FAN48610 low-power boost regulator is integrated into the design. This feeds the 5V USB host and the 5V LCD.

**Figure 6-4. Power Boost 5V**

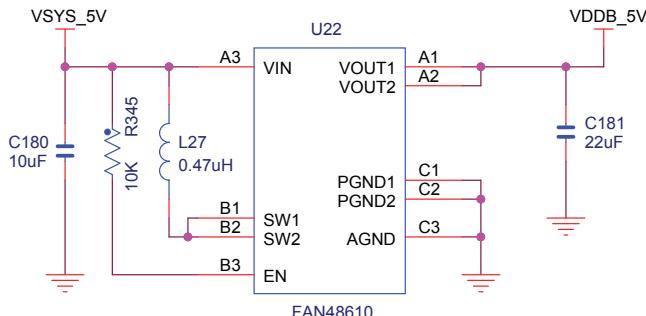


### 6.3.2.5 Input Power Options

There are several power options for the SAMA5D2C-XULT board.

USB-powered operation is the default configuration, where the USB device port is connected to a PC or a 5V DC supply. The USB supply is sufficient to power the board in most applications. It is important to note that when the USB supply is used, the USB-B Host port has limited power. If USB Host port is required for the application, it is recommended that an external DC supply be used.

The figure below provides the schematics of power options.

**Figure 6-5. Input Powering Scheme**

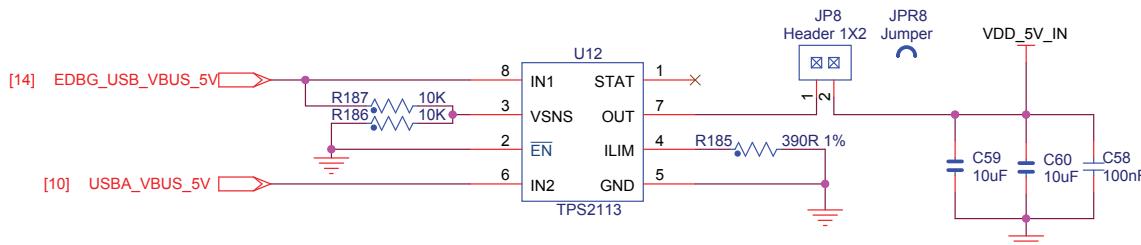

**Note:** USB-powered operation eliminates additional wires and batteries. It is the preferred mode of operation for any project that requires only a 5V source at up to 500 mA.

### 6.3.2.6 Battery Supply Source


The ACT8945A features an advanced battery charger that incorporates the ActivePath architecture for system power selection. This combination of circuits provides a complete, advanced battery-management system that automatically selects the best available input supply, manages charge current to ensure system power availability, and provides a complete, high accuracy ( $\pm 0.5\%$ ), thermally regulated, full-featured single-cell linear Li+ charger.

The ActivePath circuitry monitors the state of the input supply, the battery, and the system, and automatically reconfigures itself to optimize the power system. If a valid input supply is present, ActivePath powers the system from the input while charging the battery in parallel. This allows the battery to charge as quickly as possible, while supplying the system. If a valid input supply is not present, ActivePath powers the system from the battery. Finally, if the input is present and the system current requirement exceeds the capability of the input supply, ActivePath allows system power to be drawn from both the battery and the input supply.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-6. Battery Powering Scheme**

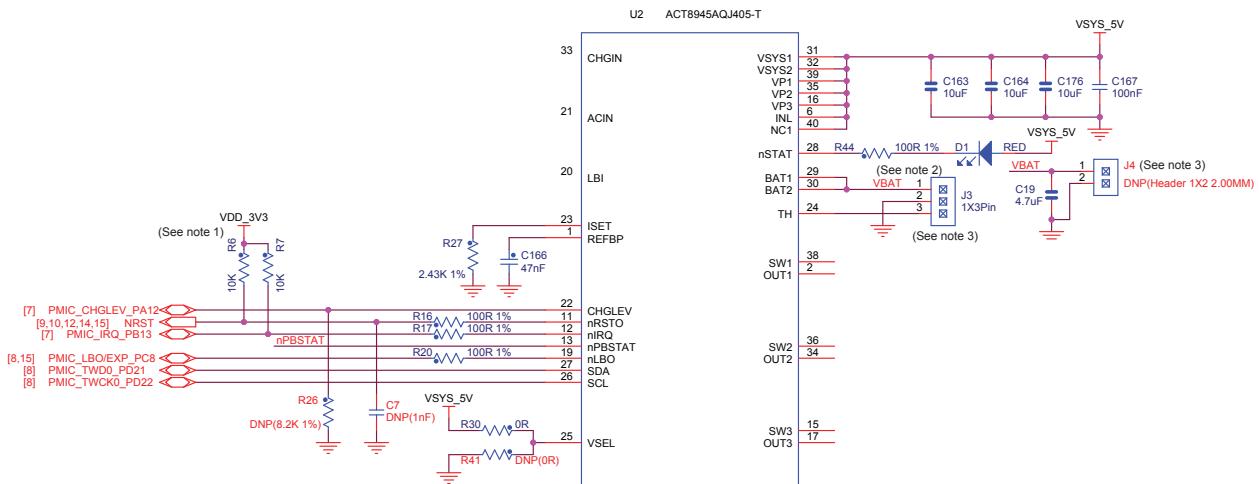

**Note:**

1. Refer to errata [NRST](#).
2. If the battery does not have a pack embedded thermistor (i.e., battery temperature monitoring), the TH pin should be connected to ground => short J3 pins 2 and 3.
3. If no battery is connected on connector J3 or J4, it is recommended that the charging function be disabled in the ACT8945 chip. To do so, write the SUSCHG bit to '1' in APCH register (REG 0x71, SUSCHG = 1).

**Charger Input Interrupts**

To facilitate input supply detection and eliminate the size and cost of external detection circuitry, the charger has the ability to generate interrupts based upon the status of the input supply. This function is capable of generating an interrupt when the input is connected, disconnected, or both, when the charger state machine transitions.

**Charge Status Indicator**

The charger provides a charge-status indicator output, nSTAT. nSTAT is an open-drain output which sinks current when the charger is in an active-charging state, and is high-Z otherwise. nSTAT features an internal 8 mA current limit, and is capable of directly driving an LED (D1).

**Precision Voltage Detector**

The low battery input (LBI) connects to one input of a precision voltage comparator, which can be used to monitor a system voltage such as the battery voltage. An external resistive-divider network can be used to set voltage monitoring thresholds. The output of the comparator is present at the open-drain low battery indicator output (nLBO) and connected to the red LED D1.


**Table 6-3. PIOs Used to Control the Battery Charger**

PIO	Function
PA12	CHGLEV: Charge Current Selection Input
PB13	nIRQ: Open-Drain Interrupt Output. nIRQ is asserted any time an unmasked fault condition exists or a charger interrupt occurs.
PC8	nLBO: Low Battery Indicator Output. nLBO is asserted low whenever the voltage at LBI is lower than 1.2V; it is high-Z otherwise.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-7. Battery Connector J3 and Optional J4**

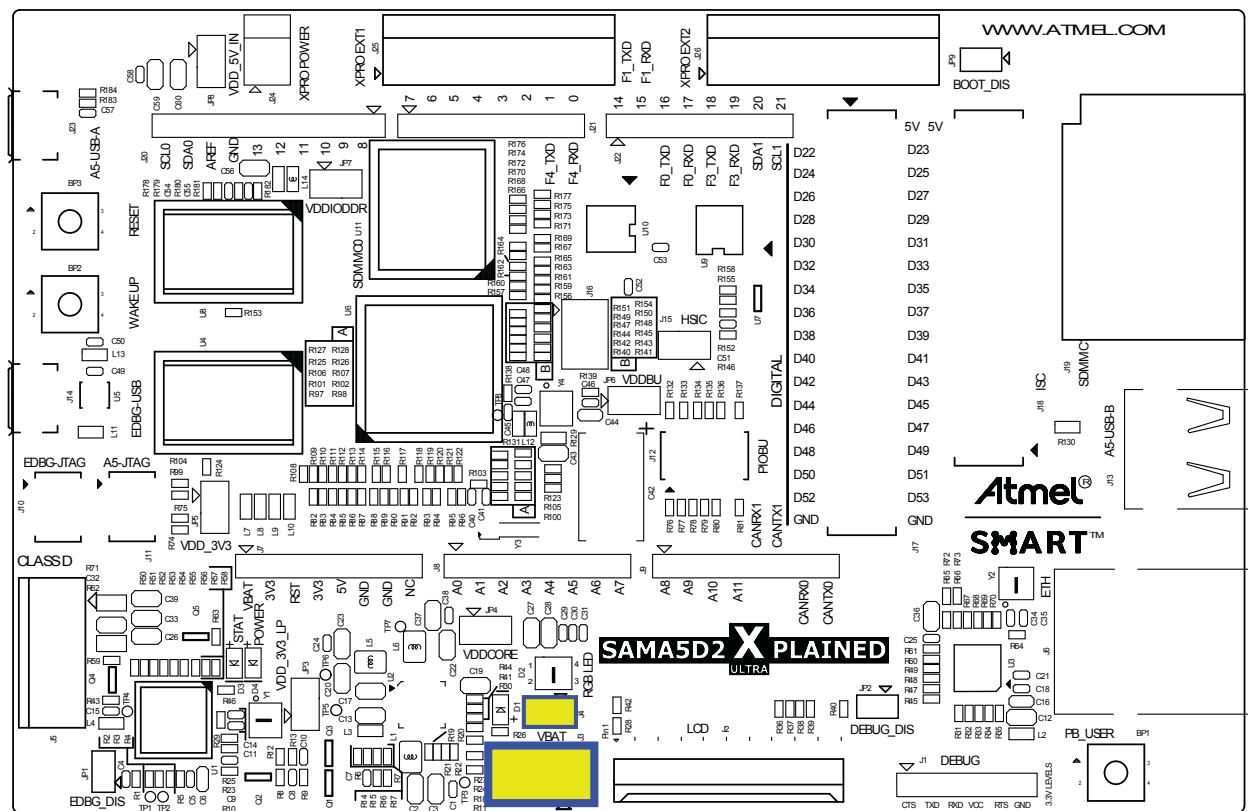


**Table 6-4. Battery J3 Signal Descriptions**

Pin	Mnemonic	Signal Description
1	VBAT	Battery I/O (exploitation and charging). Connect this pin directly to the battery anode (+ terminal)
2	GND	Common ground
3	TH	Temperature Sensing Input. Connect to battery thermistor. TH is pulled up with a 102 $\mu$ A (typical) current internally.

### 6.3.2.7 Backup Power Supply

The SAMA5D2C-XULT board requires a power source to permanently power the backup part of the SAMA5D2 device (refer to SAMA5D2 Series datasheet). A super capacitor sustains such permanent power to VDDBU when all system power sources are off.

**Figure 6-8. VDDBU Powering Scheme Option**

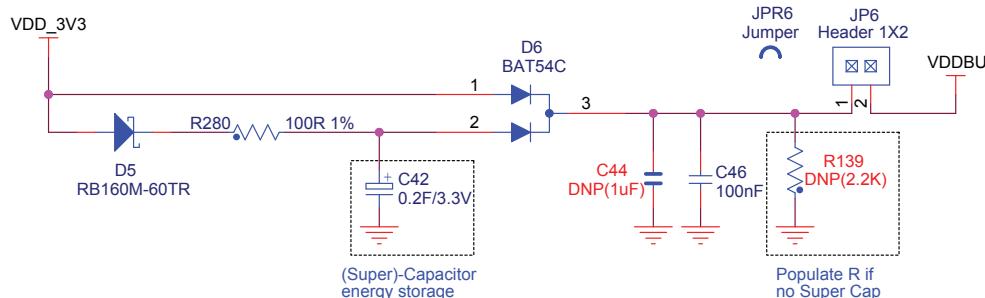

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

### 6.3.2.8 Power Supply Control

In the ACT8945A, three DC-DC converters (1.8V, 1.2V, 3.3V) and two LDO outputs are available.

All ACT8945A outputs can be controlled by the TWI interface through software.

The three DC-DC outputs can be enabled or disabled by the SAMA5D2 SHDN output:

- SHDN = 0: The DC-DC output is disabled.
- SHDN = 1: The DC-DC output is enabled.

Two push buttons are also available:


- Wakeup push button: When pressed, the ACT8945A power outputs are restarted if the ACT8945A is in shutdown mode.
- Reset push button: When pressed, the ACT8945A transfers the reset signal to the MPU.

### 6.3.3 Reset Circuitry

The reset sources for the SAMA5D2C-XULT board are:

- Power-on reset from the power management unit (PMIC)
- Push button reset BP3
- External reset from Arduino connectors
- JTAG or EDBG reset from an in-circuit emulator

**Figure 6-9. Reset/Wakeup and Shutdown Control**

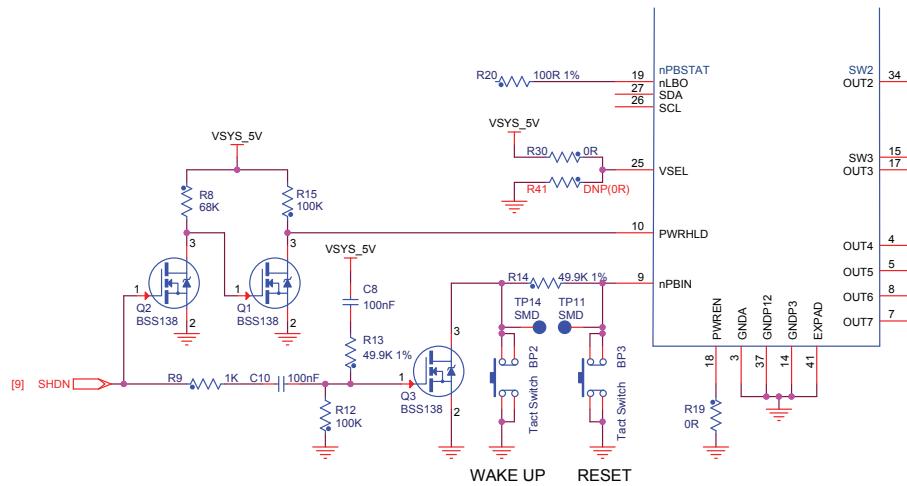


### 6.3.4 Clock Circuitry

The SAMA5D2C-XULT board includes four clock sources:

- Two clocks are alternatives for the SAMA5D2 processor (12 MHz, 32 kHz)
- One crystal oscillator used for the Ethernet RMII chip (25 MHz)
- One crystal oscillator used for the EDBG (12 MHz)

**Figure 6-10. Clock Circuitry**

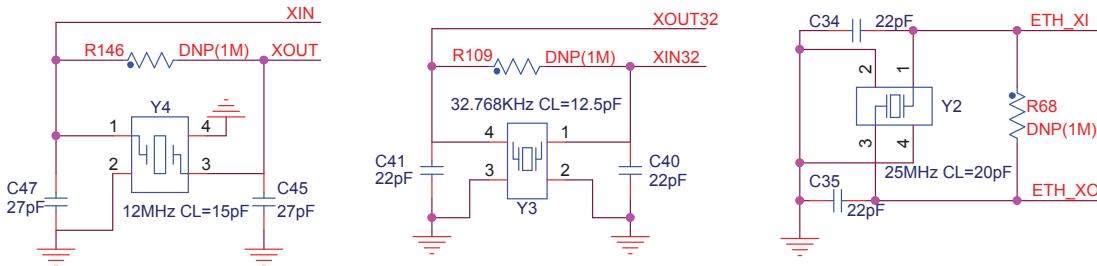

### 6.3.5 Memory

#### 6.3.5.1 Memory Organization

The SAMA5D2 features a DDR/SDR memory interface and an External Bus Interface (EBI) to allow interfacing to a wide range of external memories and to almost any kind of parallel peripheral.

This section describes the memory devices that equip the SAMA5D2C-XULT board.


#### 6.3.5.2 DDR3/SDRAM

Two DDR3L/SDRAM (MT41H128M16JT-125-K - 2 Gbit = 16 Mbit x 16 x 8 banks) are used as main system memory and total 4 Gbit of SDRAM on the board. The memory bus is 32 bits wide and operates with a frequency of up to 166 MHz.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-11. DDR3L**

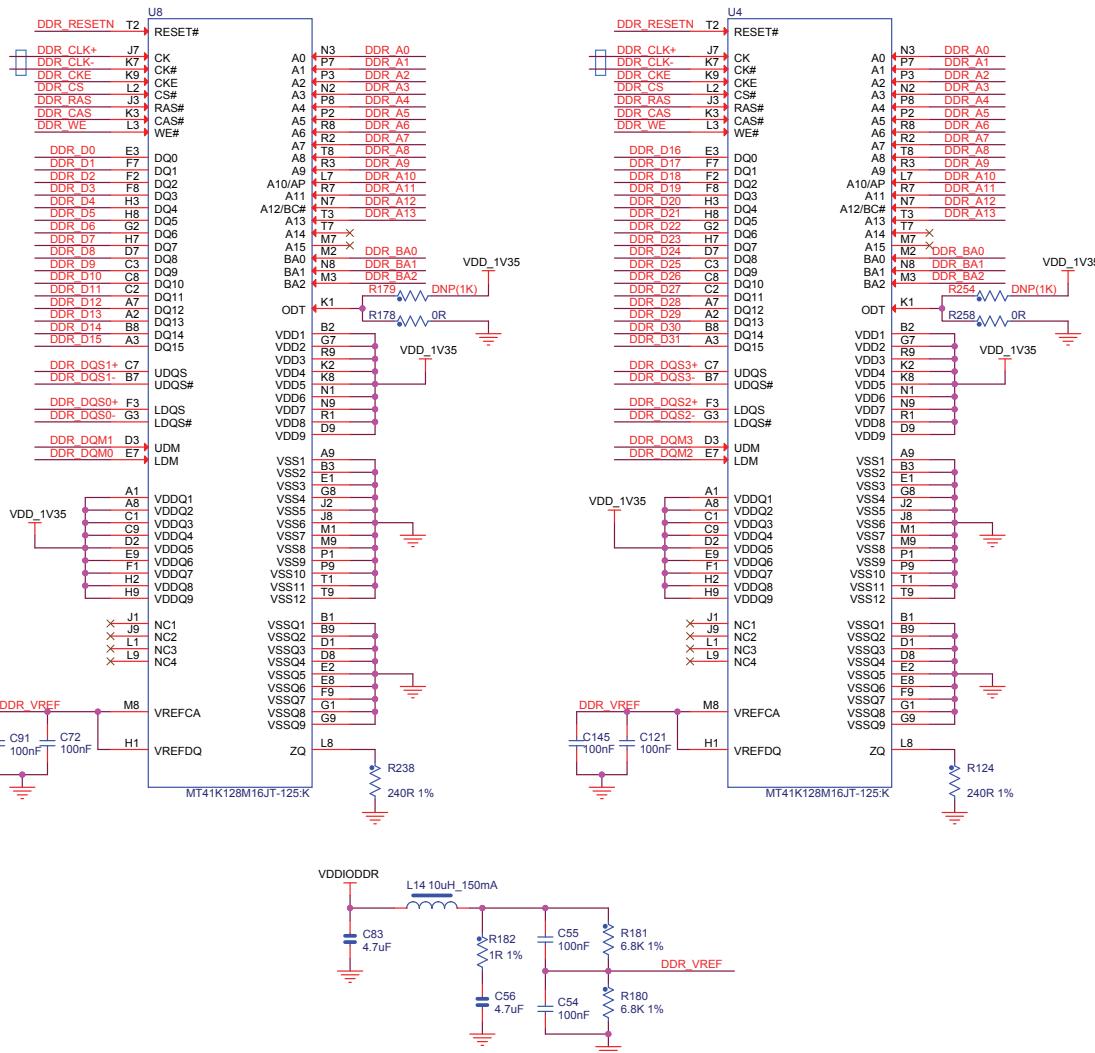


### 6.3.5.3 DDR\_CAL Analog Input

One specific analog input, DDR\_CAL, is used to calibrate all DDR I/Os.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-12. DDR Signals and CAL Analog Input**

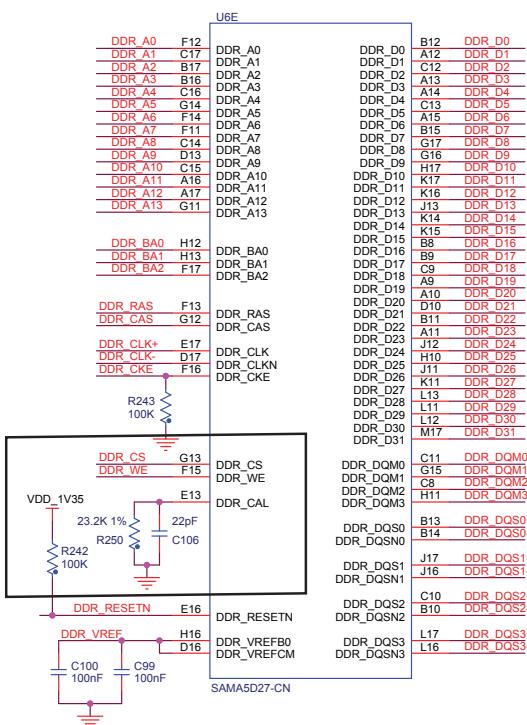

### 6.3.5.4 eMMC

The Secure Digital Multimedia Card (SDMMC) Controller supports the Embedded MultiMedia Card (e.MMC) Specification V4.41, the SD Memory Card Specification V3.0, and the SDIO V3.0 specification. It is compliant with the SD Host Controller Standard V3.0 specification.

One MTFC4GLDEA 4 GB eMMC is connected to the processor through the SDMMC0 port.


**Table 6-5. SDMMC Reference Documents**

Name	Link
SD Host Controller Simplified Specification V3.00	<a href="http://www.sdcards.org">www.sdcards.org</a>
SDIO Simplified Specification V3.00	<a href="http://www.sdcards.org">www.sdcards.org</a>
Physical Layer Simplified Specification V3.01	<a href="http://www.sdcards.org">www.sdcards.org</a>
Embedded MultiMedia Card (e.MMC) Electrical Standard 4.51	<a href="http://www.jedec.org">www.jedec.org</a>

# 32-BIT ARM-BASED MICROPROCESSORS

# Board Components

**Figure 6-13.** eMMC

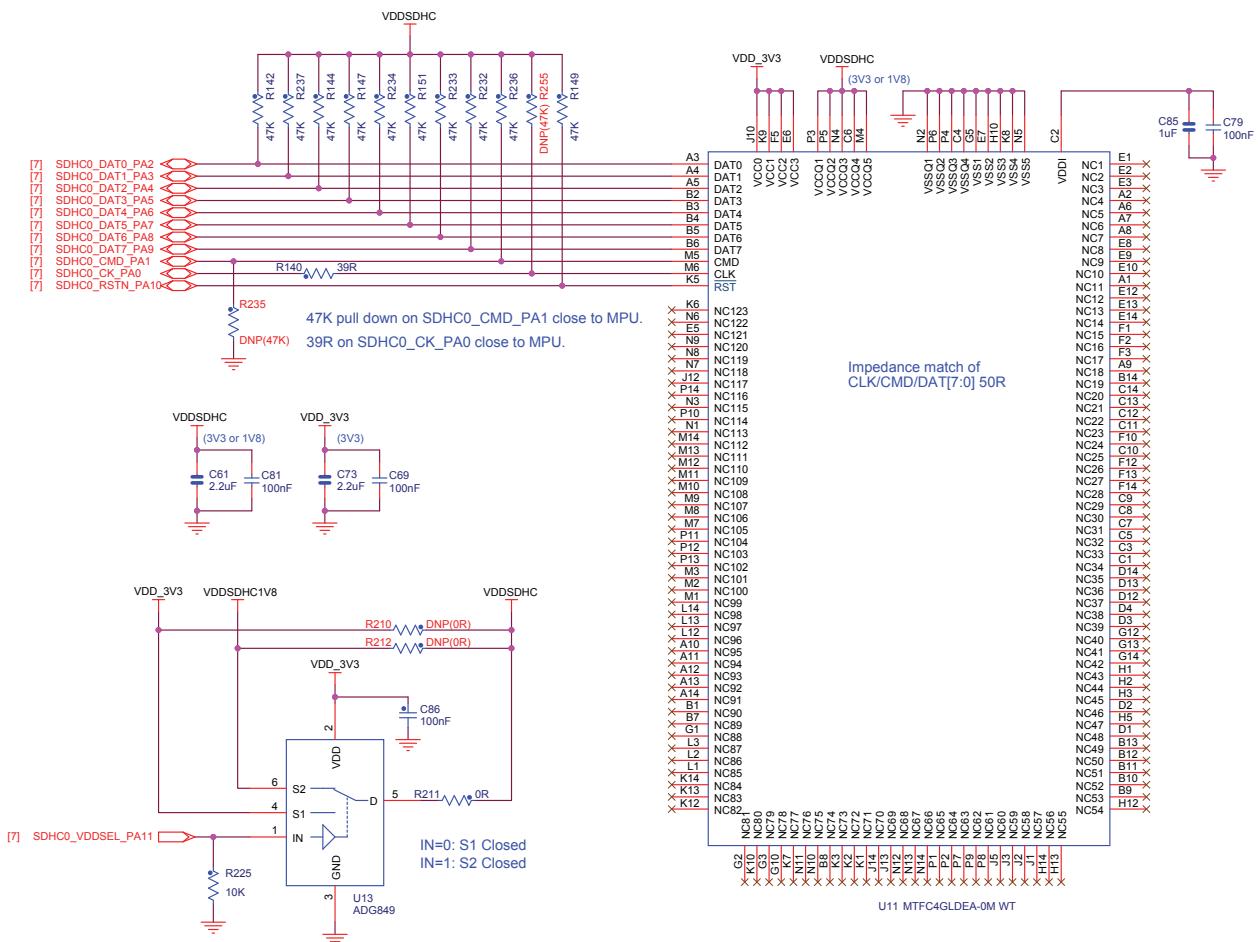

### **6.3.5.5 CS Disable**


The SAMA5D2 device boots according to the following sequence:

1. SD CARD connected on SDHC1
  2. eMMC connected on SDHC0
  3. Serial Flash connected on SPI0\_IOSET1 (Chip Select 0: NPCS0)
  4. Optional QSPI Flash connected on QSPI0\_IOSET3 (Chip Select 0: CS0)

In this sequence, the first device found with bootable contents is selected as the boot source. The others are disregarded. (see **Note** below)

An on-board jumper (JP9) controls the selection (CS#) of the on-board bootable memory components (eMMC and Serial Flash) using a non-inverting 3-state buffer.

**Figure 6-14. CS Disable**

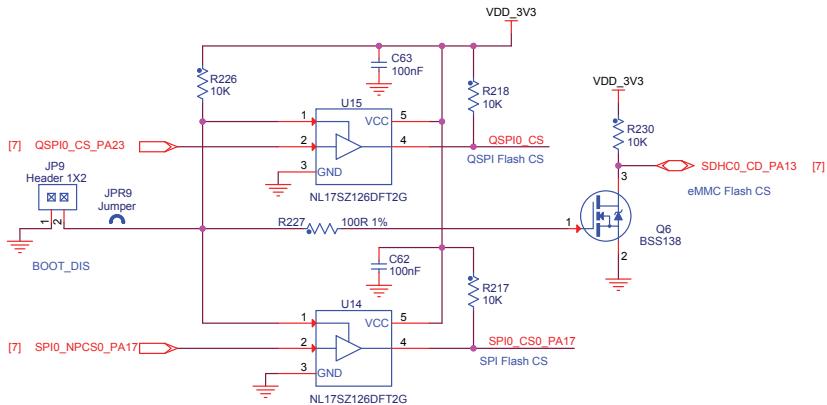

The rule of operation is:

- JP9 = OFF (default) → enable normal boot from serial Flash memories mounted on board
- JP9 = ON → booting from optional serial Flash memories is disabled

Refer to the SAMA5D2 Series datasheet for more information on standard boot strategies and sequencing.

**Note:** The errata in the SAMA5D2 datasheet state that booting from SD/MMC devices is nondeterministic. In order to have a known behavior regardless of SD/MMC data contents, we recommend SDMMC0/SDMMC1 boot bits be disabled in the Boot Configuration Word fuse.

### 6.3.6 Additional Memories


#### 6.3.6.1 Serial Flash

The SAMA5D2 provides two high-speed Serial Peripheral Interface (SPI) controllers. One port is used to interface with the on-board serial serial Flash.

The four main signals used in the SPI are Clock, Data In, Data Out, and Chip Select. The SPI is a serial interface similar to the I<sup>2</sup>C bus interface but with three main differences:

- It operates at a higher speed.
- Transmit and receive data lines are separate.
- Device access is chip select-based instead of address-based.

**Figure 6-15. Serial Flash**

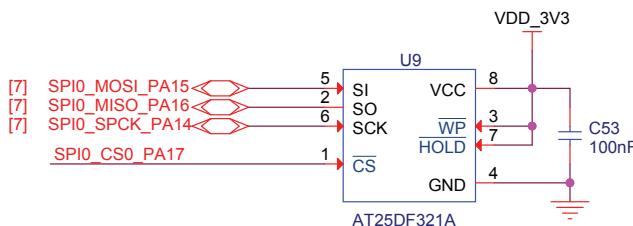

#### 6.3.6.2 QSPI Serial Flash

The SAMA5D2 provides two Quad Serial Peripheral Interfaces (QSPI). One port is used to interface with the optional on-board QSPI serial Flash.

The Quad SPI Interface (QSPI) is a synchronous serial data link that provides communication with external devices in Master mode.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

The QSPI can be used in SPI mode to interface to serial peripherals (such as ADCs, DACs, LCD controllers, CAN controllers and sensors), or in Serial Memory mode to interface to serial Flash memories.

The QSPI allows the system to execute code directly from a serial Flash memory (XIP) without code shadowing to RAM. The serial Flash memory mapping is seen in the system as other memories (ROM, SRAM, DRAM, embedded Flash memory, etc.).

With the support of the Quad SPI protocol, the QSPI allows the system to use high-performance serial Flash memories which are small and inexpensive, in place of larger and more expensive parallel Flash memories.

**Figure 6-16. QSPI Serial Flash**

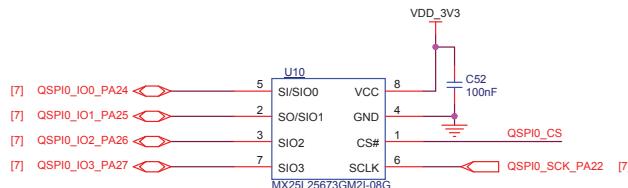

### 6.3.6.3 Serial EEPROM with Unique MAC Address

The SAMA5D2C-XULT board embeds one Microchip AT24MAC402/602 EEPROM using a TWI1 interface.

The AT24MAC402/602 provides 2048 bits of Serial Electrically-Erasable Programmable Read-Only Memory (EEPROM) organized as 256 words of eight bits each and is accessed via an I<sup>2</sup>C-compatible (2-wire) serial interface. In addition, the AT24MAC402/602 incorporates an easy and inexpensive method to obtain a globally unique MAC or EUI address (EUI-48 or EUI-64).


The EUI-48/64 addresses can be assigned as the actual physical address of a system hardware device or node, or it can be assigned to a software instance. These addresses are factory-programmed by Atmel and guaranteed unique. They are permanently write-protected in an extended memory block located outside of the standard 2-Kbit memory array.

In addition, the AT24MAC402/602 provides the value-added feature of a factory-programmed, also guaranteed unique 128-bit serial number located in the extended memory block (same area as the EUI address values).



The EEPROM device is also used as a “software label” to store board information such as chip type, manufacture name and production date, using the last two 16-byte blocks in memory. **To preserve the ease of board identification by software, the information contained in these blocks should not be modified.**

**Figure 6-17. EEPROM**

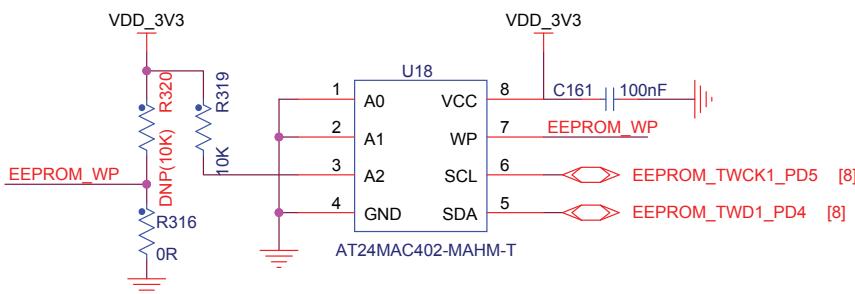

### 6.4 PIO Usage and Interface Connectors

#### 6.4.1 Secure Digital Multimedia Card Interface

##### 6.4.1.1 Secure Digital Multimedia Card Controller (SDMMC)


The SAMA5D2C-XULT board has two SDMMC interfaces that support the MultiMedia Card (e.MMC) Specification V4.41, the SD Memory Card Specification V3.0, and the SDIO V3.0 specification. It is compliant with the SD Host Controller Standard V3.0 specification.

- SDMMC0 interface is connected to the eMMC.
- SDMMC1 Interface based on a 7-pin interface (clock, command, 4-bit data, power lines).

##### 6.4.1.2 SDMMC1 Card Connector

A standard MMC/SD card connector, connected to SDMMC1, is mounted on the top side of the board. It includes a card detection switch.

**Figure 6-18. SDMMC1**

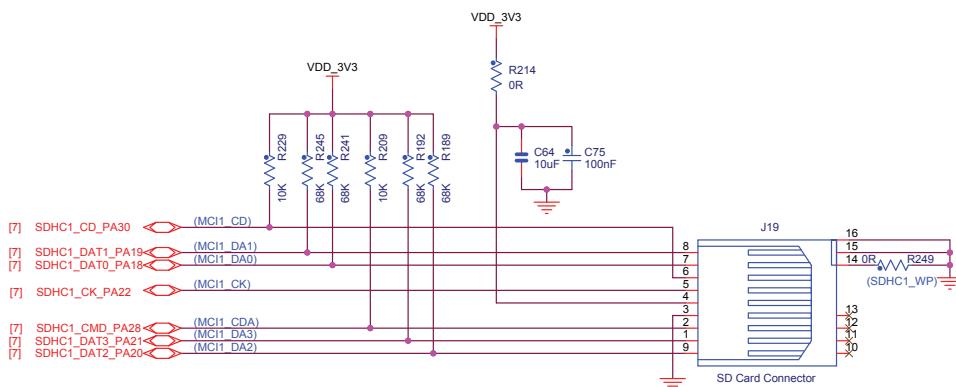


**Note:** Refer to details on SDcard boot in [CS Disable](#).

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

Standard SD Socket J19

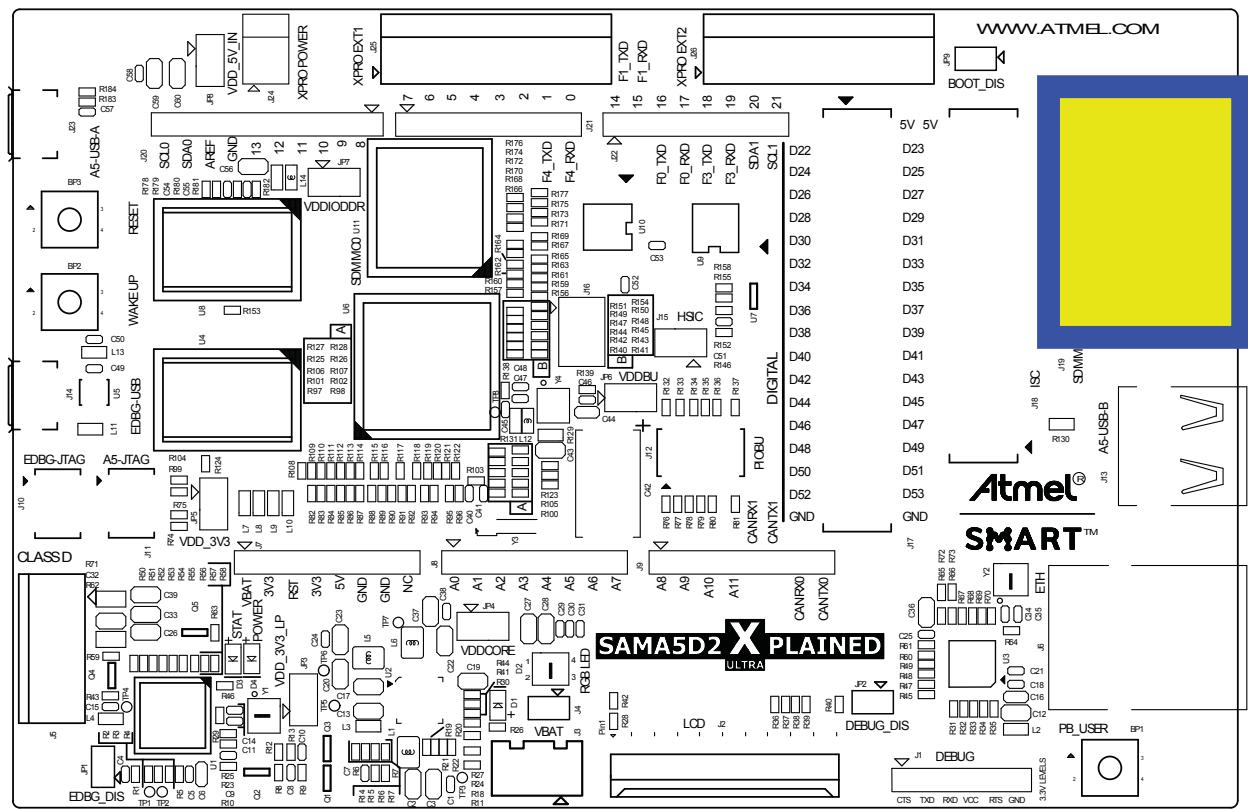

**Table 6-6. Standard SD Socket J19 Signal Descriptions**

Pin	Mnemonic	PIO	Signal Description
1	DAT3	PA21	Data Bit 3
2	CDA	PA28	Command Line
3	GND	—	Common ground
4	VCC	—	Supply Voltage 3.3V
5	CLK	PA22	Clock / Command Line
6	CD	PA30	Card Detect
7	DAT0	PA18	Data Bit 0
8	DAT1	PA19	Data Bit 1
9	DAT2	PA20	Data Bit 2
10	GND	—	Common ground

### 6.4.2 Communication Interfaces

The SAMA5D2C-XULT board is equipped with GMAC and USB Host/Device communication interfaces.

#### 6.4.2.1 Ethernet 10/100 (GMAC) Port

The SAMA5D2C-XULT board contains a MICREL PHY device (KSZ8081) operating at 10/100 Mb/s. The board supports RMII interface modes. The Ethernet interface consists of two pairs of low-voltage differential pair signals designated from GRX $\pm$  and GTX $\pm$  plus control signals for link activity indicators.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

These signals can be used to connect to a 10/100 Base-T RJ45 connector integrated on the SAMA5D2C-XULT board.


Additionally, for monitoring and control purposes, LED functionality is carried on the RJ45 connectors to indicate activity, link, and speed status information.

For more information about the Ethernet controller device, refer to the MICREL KSZ8081RN controller datasheet.

**Figure 6-19. Ethernet (GMAC)**

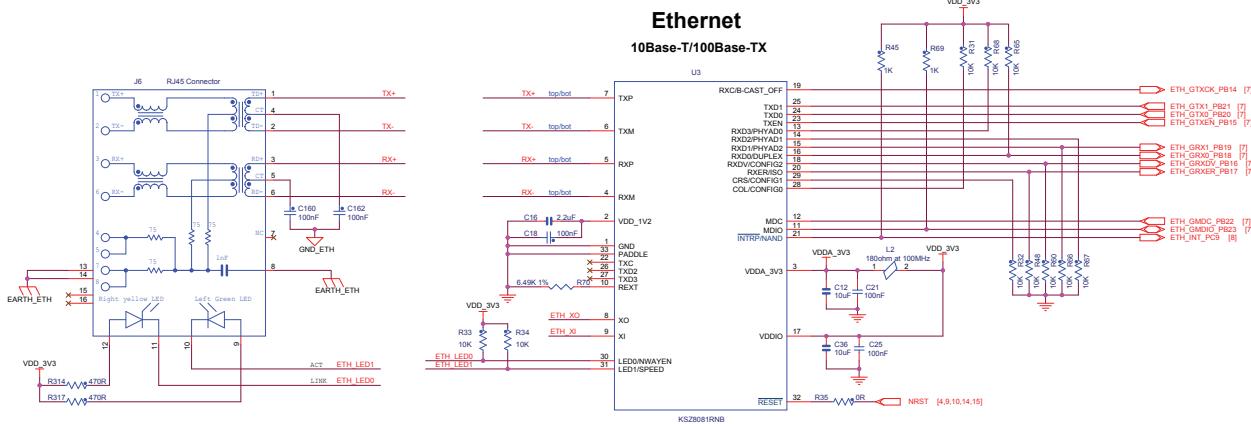

**Figure 6-20. ETH RJ45 Connector J6**

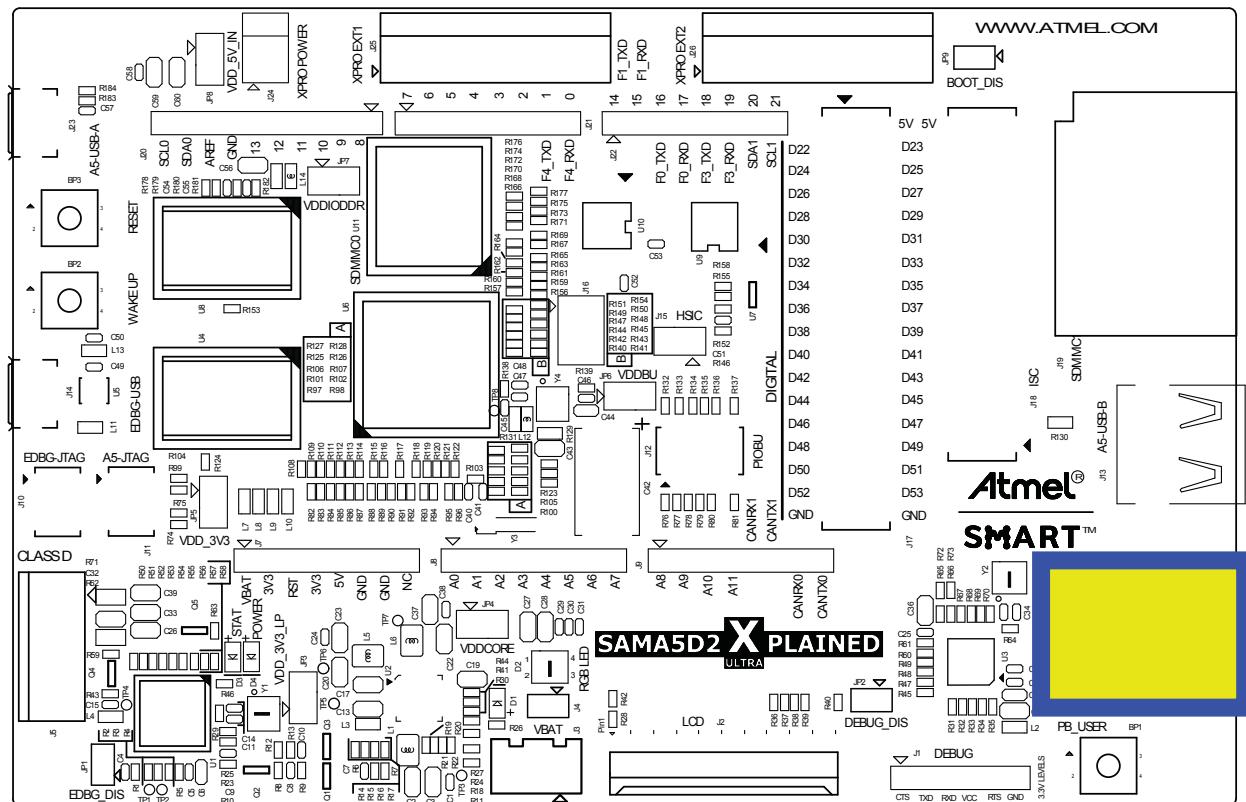

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Table 6-7. ETH RJ45 Connector Signal Descriptions**

Pin	Mnemonic	Signal Description
1	TX+	Transmit
2	TX-	Transmit
3	RX+	Receive
4	Decoupling capacitor	—
5	Decoupling capacitor	—
6	RX-	Receive
7	NC	—
8	EARTH / GND	Common ground
9	ACT LED	LED activity
10	ACT LED	LED activity
11	LINK LED	LED link connection
12	LINK LED	LED link connection
13	EARTH / GND	Common ground
14	EARTH / GND	Common ground
15	NC	—
16	NC	—

### 6.4.2.2 USB Host/Device A, B


The SAMA5D2C-XULT board features three USB communication ports:

- USB Host B High- and Full-speed Interface
  - One USB host type A connector
- USB A Device Interface
  - One USB device standard micro-AB connector. This port has a VBUS detection function made through the resistor ladder R183 and R184.
- UBC C high-speed host port
  - One USB high-speed host port with a High-Speed Inter-Chip (HSIC) interface. This port is connected to a single 2-pin jumper.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

**Figure 6-21. USB-B Host & USB-A Device Interface**

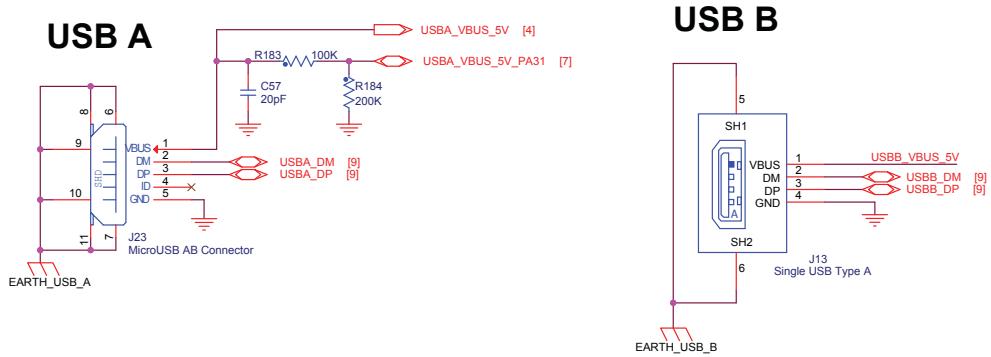

The USB B Host port is equipped with 500 mA high-side power switch for self-powered and bus-powered applications.

**Figure 6-22. USB Power Switch**

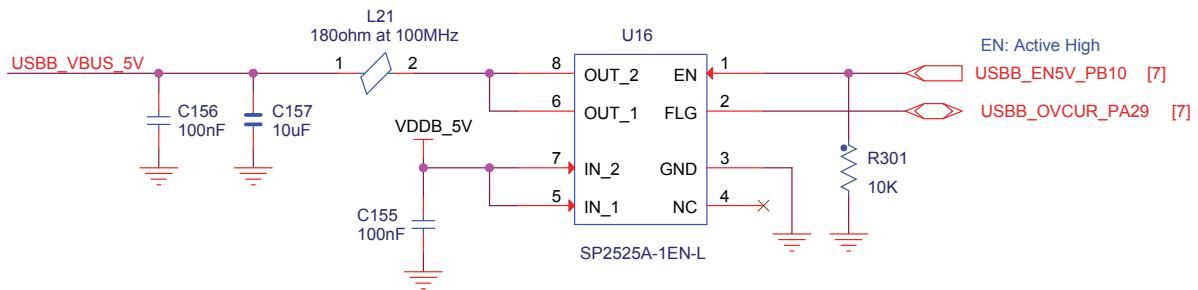


# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

### 6.4.3 USB-A Micro-AB Connector J23

Figure 6-23. USB-A Connector J23

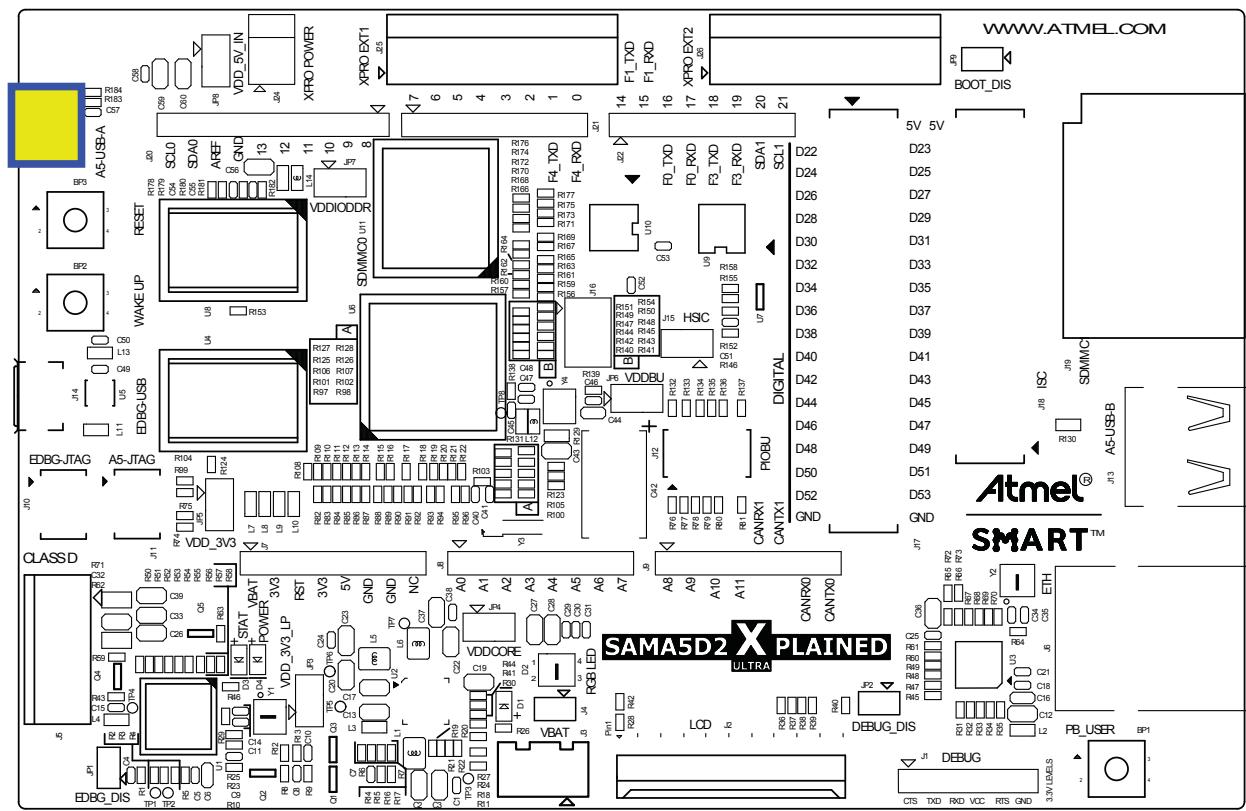


### 6.4.4 USB-B Type B Connector J13

The USB-B host port A (J13) features a VBUS insert detection function through the ladder-type resistors R26 and R27.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-24. USB B Connector J13**

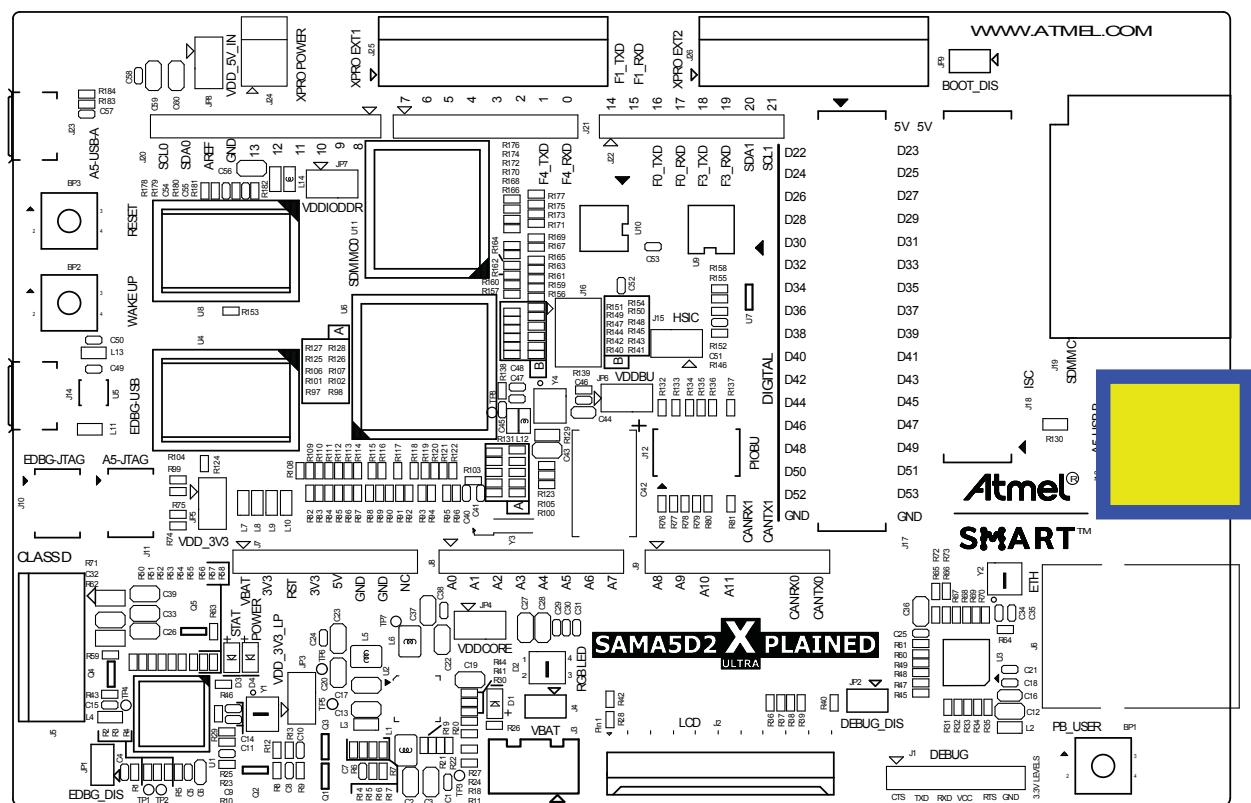

**Table 6-8. USB A&B Connector Signal Descriptions**

Pin	Mnemonic	Signal Description
1	VBUS	5V power
2	DM	Data minus
3	DP	Data plus
4	ID	On-the-go identification
5	GND	Common ground

#### **6.4.5 LCD TFT Interface**


#### **6.4.5.1 LCD**

The SAMA5D2C-XULT board provides 18 bits of data and control signals to the LCD interface. Other signals are used to control the LCD and are available on connector J2: TWI, SPI, two GPIOs for interrupt, 1-Wire and power supply lines.

#### 6.4.5.2 LCD Expansion Header

J2 is a 1.27mm pitch 50-pin header. It gives access to the LCD signals.


**Figure 6-25. LCD Expansion Header Interface Schematic**

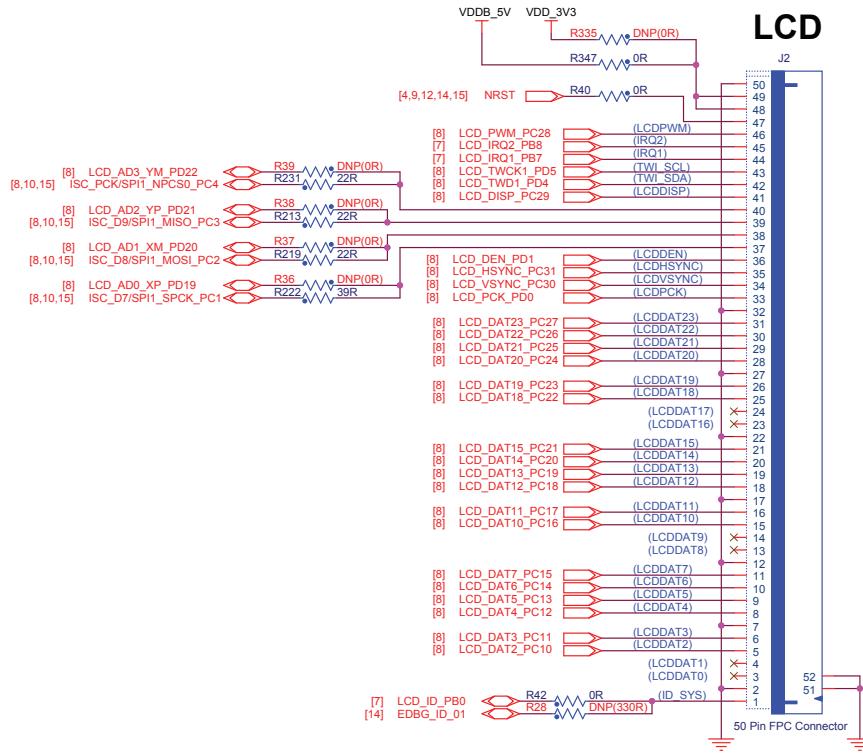

### 6.4.5.3 LCD Power

In order to operate correctly out of the processor with various LCD modules, two voltage lines are available: 3.3V and 5 VCC (default), both selected by 0R resistors R335 and R347.

**Figure 6-26. LCD Power**

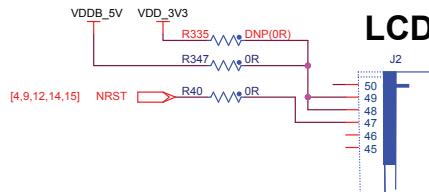


# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

### 6.4.5.4 LCD Connector J2

**Figure 6-27. LCD Connector J2**

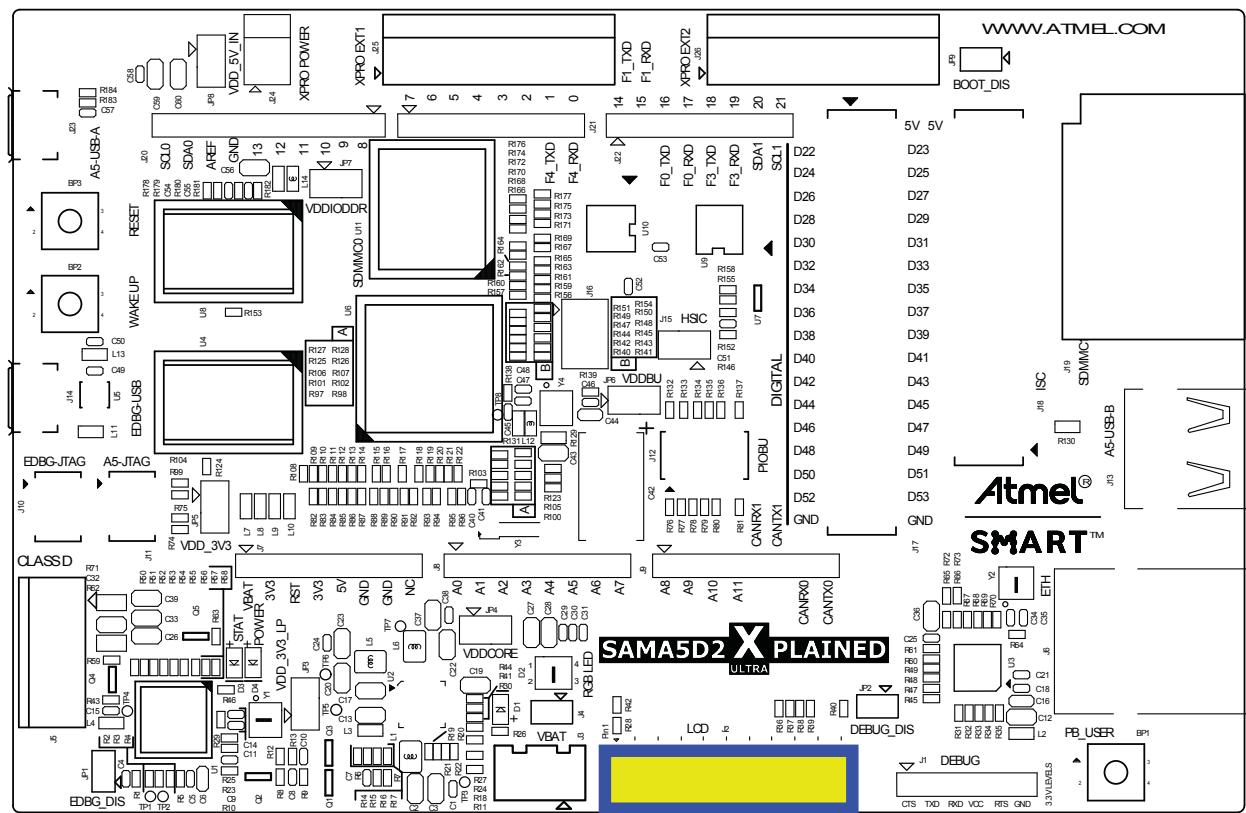

**Table 6-9. LCD Connector J2 Signal Descriptions**

Pin	Signal	PIO	Signal	RGB Interface Function	Alternate
1	ID_SYS	PB0/ ID00	ID	Extension module identification	EDBG_ID_01
2	—	GND	GND	GND	—
3	—	—	—	—	—
4	—	—	—	—	—
5	LCDDAT2	PC10	D2	Data line	—
6	LCDDAT3	PC11	D3	Data line	—
7	—	GND	GND	GND	—
8	LCDDAT4	PC12	D4	Data line	—
9	LCDDAT5	PC13	D5	Data line	—
10	LCDDAT6	PC14	D6	Data line	—
11	LCDDAT7	PC15	D7	Data line	—
12	—	GND	GND	GND	—
13	—	—	—	—	—
14	—	—	—	—	—

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

Pin	Signal	PIO	Signal	RGB Interface Function	Alternate	
15	LCDDAT10	PC16	D10	Data line	—	
16	LCDDAT11	PC17	D11	Data line	—	
17	—	GND	GND	GND	—	
18	LCDDAT12	PC18	D12	Data line	—	
19	LCDDAT13	PC19	D13	Data line	—	
20	LCDDAT14	PC20	D14	Data line	—	
21	LCDDAT15	PC21	D15	Data line	—	
22	—	GND	GND	GND	—	
23	—	—	—	—	—	
24	—	—	—	—	—	
25	LCDDAT18	PC22	D18	Data line	—	
26	LCDDAT19	PC23	D19	Data line	—	
27	—	GND	GND	GND	—	
28	LCDDAT20	PC24	D20	Data line	—	
29	LCDDAT21	PC25	D21	Data line	—	
30	LCDDAT22	PE26	D22	Data line	—	
31	LCDDAT23	PE27	D23	Data line	—	
32	—	GND	GND	GND	—	
33	LCDPCK	PD0	PCLK	Pixel clock	—	
34	LCDVSYNC	PC30	VSYNC/CS	Vertical synchronization	—	
35	LCDHSYNC	PC31	H SYNC/WE	Horizontal synchronization	—	
36	LCDDEN	PD1	DATA_ENABLE/R E	Data enable	—	
37	SPI1_SPCK	PC1	SPI_SCK	—	AD3/YM	PD22
38	SPI1_MOSI	PC2	SPI_MOSI	—	AD2/YP	PD21
39	SPI1_MISO	PC3	SPI_MISO	—	AD1/XM	PD20
40	SPI1_NPCS0	PC4	SPI_CS	—	AD0/XP	PD19
41	LCDDISP	PA29	ENABLE	Display enable signal	—	
42	TWD1	PD4	TWI_SDA	I2C data line (maXTouch®)	—	
43	TWCK1	PD5	TWI_SCL	I2C clock line (maXTouch)	—	
44	GPIO	PB7	IRQ1	maXTouch interrupt line	—	
45	GPIO	PB8	IRQ2	Interrupt line for other I2C devices	—	

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

Pin	Signal	PIO	Signal	RGB Interface Function	Alternate
46	LCDPWM	PC28	PWM	Backlight control	—
47	RESET	—	RESET	Reset for both display and maXTouch	—
48	Main_5V/3V3	VCC	VCC	3.3V or 5V supply (0R)	—
49	Main_5V/3V3	VCC	VCC	3.3V or 5V supply (0R)	—
50	GND	GND	GND	GND	—

### 6.4.6 ISC

The Image Sensor Controller (ISC) system manages incoming data from a parallel or serial csi-2 based CMOS/CCD sensor. It supports a single active interface. It supports the ITU-R BT 656/1120 422 protocol with a data width of 8 bits or 10 bits and raw Bayer format. The internal image processor includes adjustable white balance, color filter array interpolation, color correction, gamma correction, 12-bit to 10-bit compression, programmable color space conversion, horizontal and vertical chrominance subsampling module.

**Figure 6-28. ISC J18**

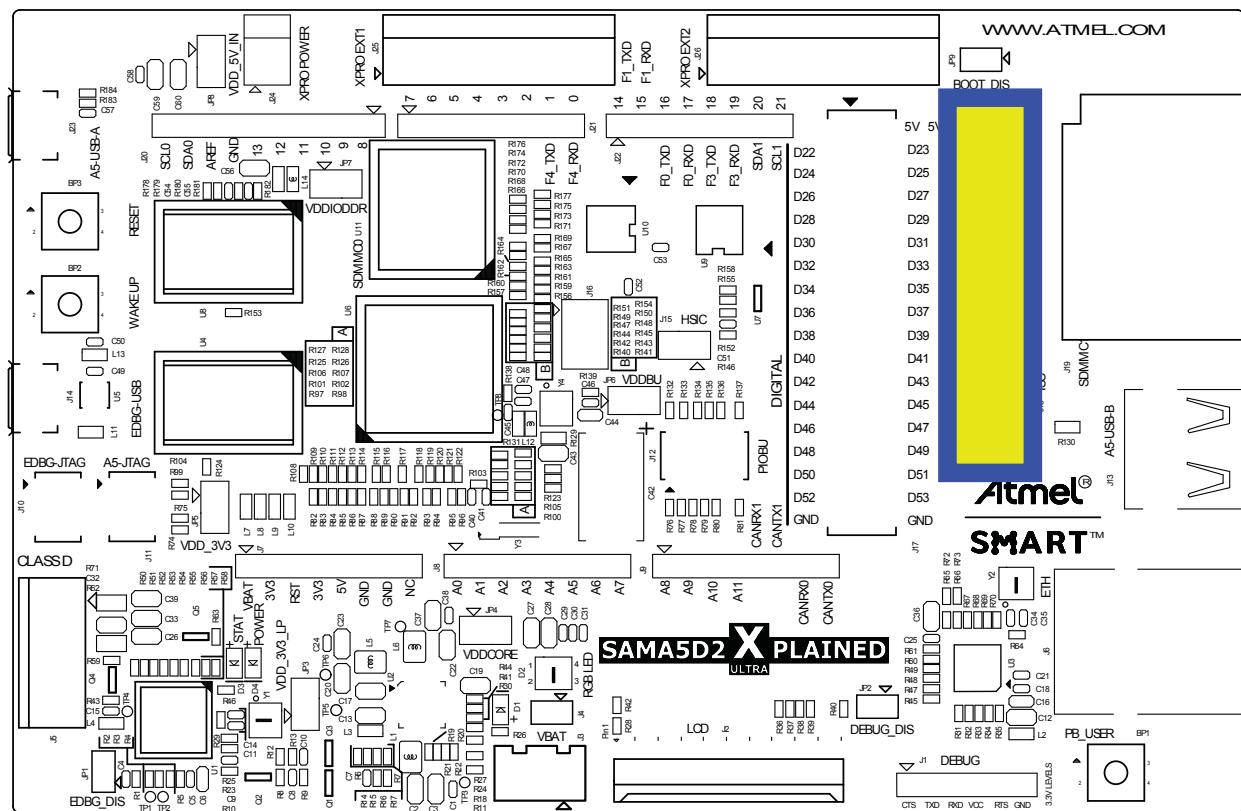

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

---

Pin	Mnemonic	PIO	Signal Description
3	3V3	–	ISC Power Supply
4	GND	–	Ground
5	ISC_RST	PB11	Reset ISC module
6	ISC_PWD	PB12	Power Down module
7	TWCK1	PD5	TWI Clock
8	TWD1	PD4	TWI Data
9	GND	–	Ground
10	ISC_MCK	PC7	ISC Master Clock
11	GND	–	Ground
12	ISC_VSYNC	PC5	ISC Vertical Synchronization
13	GND	–	Ground
14	ISC_HSYNC	PC6	ISC Horizontal Synchronization
15	GND	–	Ground
16	ISC_PCK	PC4	Clock
17	GND	–	Ground
18	ISC_D4	PB30	Image data D0
19	ISC_D5	PB31	Data D1
20	ISC_D6	PC0	Data D2
21	ISC_D7	PC1	Data D3
22	ISC_D8	PC2	Data D4
23	ISC_D9	PC3	Data D5
24	ISC_D10	PB24	Data D6
25	ISC_D11	PB25	Data D7
26	ISC_D0	PB26	RFU
27	ISC_D1	PB27	RFU
28	ISC_D2	PB28	RFU
29	ISC_D3	PB29	RFU
30	GND	–	Ground



The connector ISC J18 has been laid out to be compatible with previous evaluation kits and existing extensions in 8-bit modes. Hence, the 8-bit image data [7:0] are aligned with ISC\_D[11:4] in the table above. Refer to the SAMA5D2 Series datasheet for an in-depth description of the ISC bussing scheme. A summary is also provided below.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

The table below shows how ISC\_DATA[11:0] is routed to image data D[11:0] in relation to the bit mode.

**Table 6-11. ISC Interface - ISC\_DATA to Image Data**

Interface	12-bit	11-bit	10-bit	9-bit	8-bit
isc_data[11](MSB)	D[11]	D[10]	D[9]	D[8]	D[7]
isc_data[10]	D[10]	D[9]	D[8]	D[7]	D[6]
isc_data[9]	D[9]	D[8]	D[7]	D[6]	D[5]
isc_data[8]	D[8]	D[7]	D[6]	D[5]	D[4]
isc_data[7]	D[7]	D[6]	D[5]	D[4]	D[3]
isc_data[6]	D[6]	D[5]	D[4]	D[3]	D[2]
isc_data[5]	D[5]	D[4]	D[3]	D[2]	D[1]
isc_data[4]	D[4]	D[3]	D[2]	D[1]	D[0]
isc_data[3]	D[3]	D[2]	D[1]	D[0]	Not Used
isc_data[2]	D[2]	D[1]	D[0]	Not Used	Not Used
isc_data[1]	D[1]	D[0]	Not Used	Not Used	Not Used
isc_data[0]	D[0]	Not Used	Not Used	Not Used	Not Used

**Figure 6-29. ISC J18 Header**

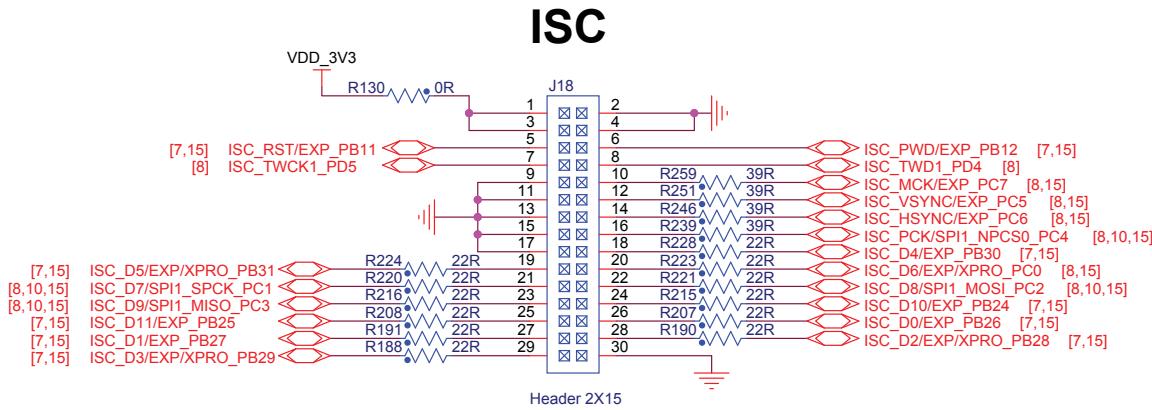

### 6.4.7 Audio Class D Amplifier

The Audio Class D Amplifier (CLASSD) is a digital input, Pulse Width Modulated (PWM) output stereo Class D amplifier. It features a high-quality interpolation filter embedding a digitally controlled gain, an equalizer and a de-emphasis filter.


On its input side, the CLASSD is compatible with most common audio data rates. On the output side, its PWM output can drive either:

- high-impedance single-ended or differential output loads (Audio DAC application) or,
- external MOSFETs through an integrated non-overlapping circuit (Class D power amplifier application).


# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-30. Audio PWM Class D MOSFET Mono Amplifier**

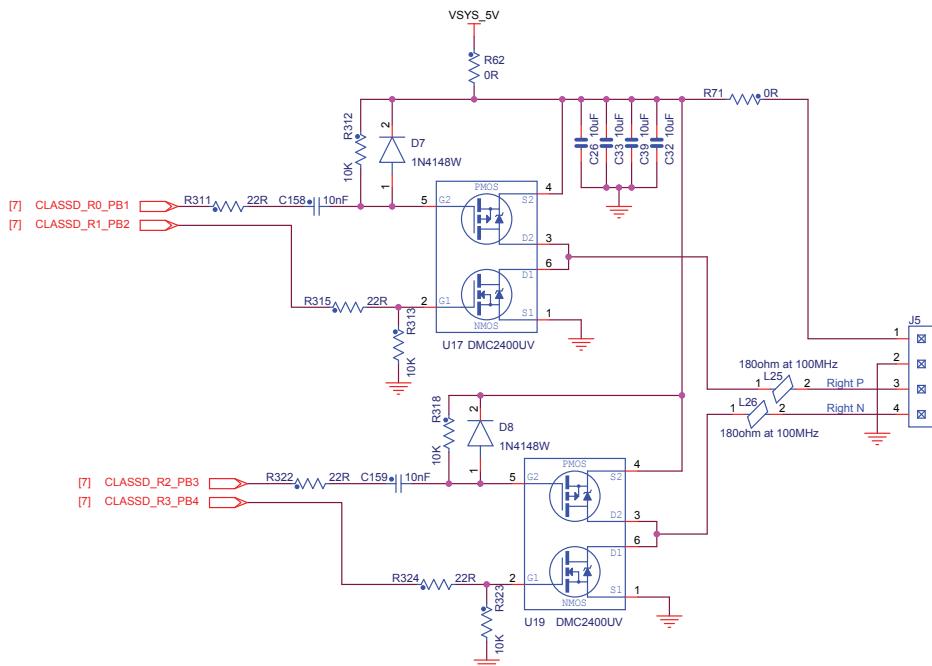

## CLASSD Output Connector J5

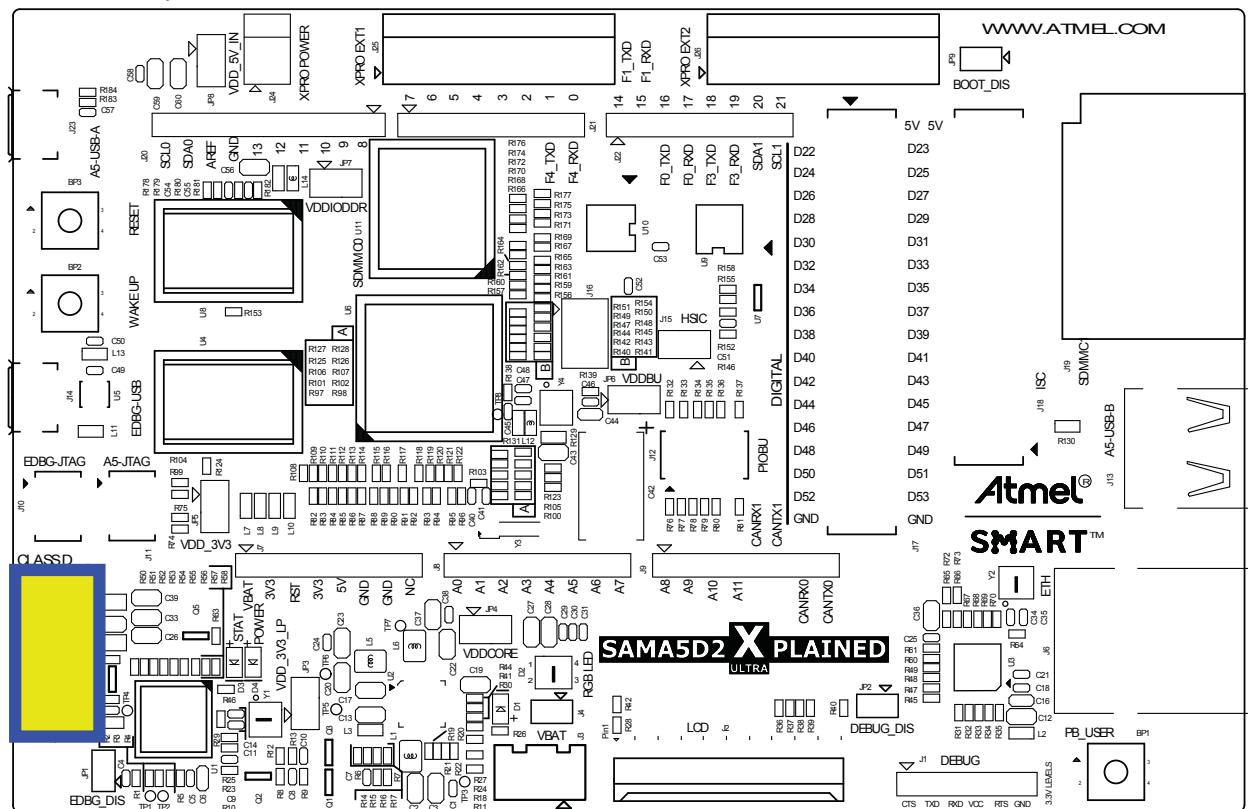

**Table 6-12. CLASSD Output Connector J5 Signal Descriptions**

Pin	Mnemonic	Signal Description
1	VSYS_5V	Power
2	GND	GND
3	OUTPUT RIGHT P	Positive Level
4	OUTPUT RIGHT N	Negative Level


### 6.4.8 Tamper Interface

The SAMA5D2C-XULT board features eight tamper pins for static or dynamic intrusion detections, UART reception, and two analog pins for comparison.

For information on intrusion detection for SAMA5D23 and SAMA5D28, refer to the document “SAMA5D2 Security Module”, document no. 44036. This document is available under Non-Disclosure Agreement (NDA).


Contact a Microchip sales representative for further details.

**Figure 6-31. Tamper Pin Connector J12**

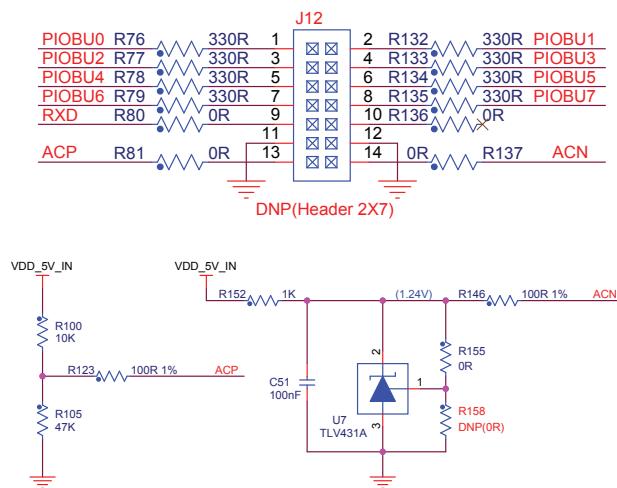

### 6.4.9 Tamper Connector

**Figure 6-32.** Tamper Connector J12

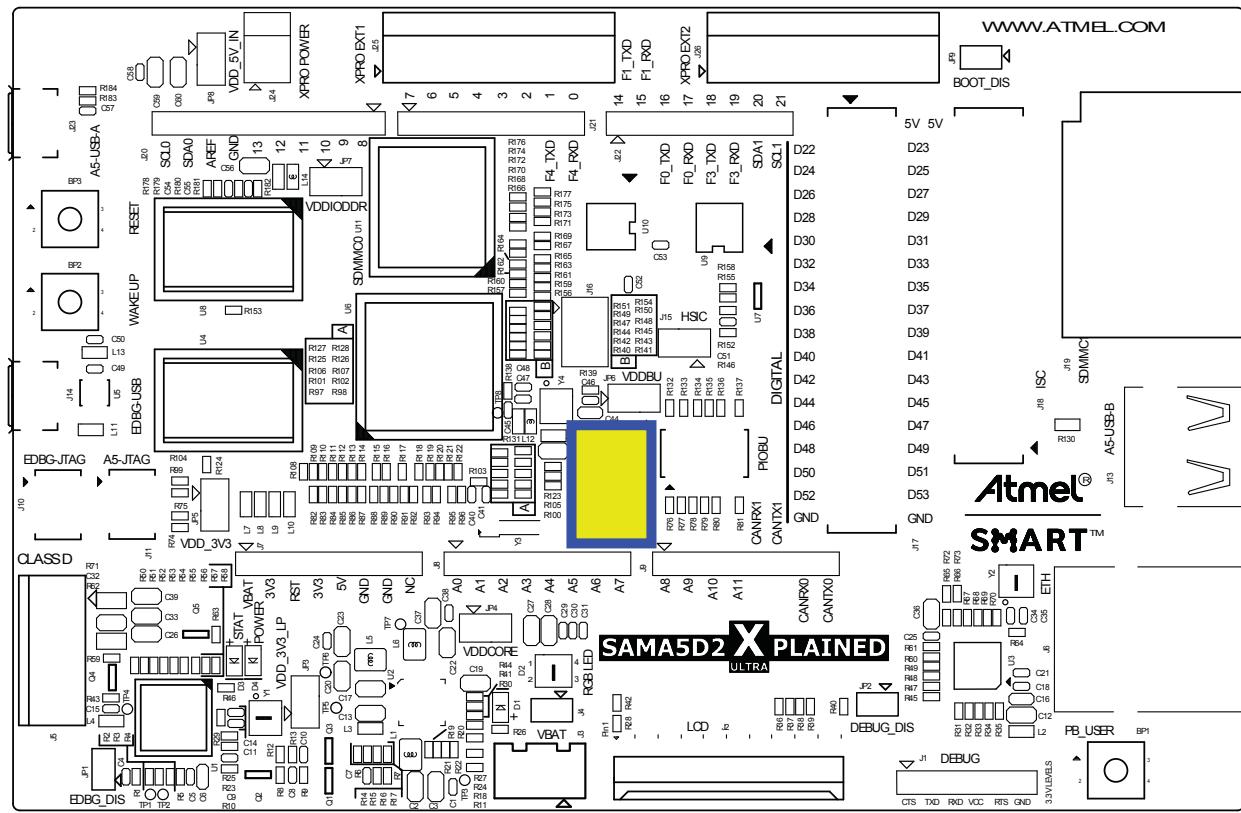


**Table 6-13.** Tamper Connector J12 Signal Descriptions

Signal	Pin No.		Signal
PIOBU0	1	2	PIOBU1
PIOBU2	3	4	PIOBU3
PIOBU4	5	6	PIOBU5
PIOBU6	7	8	PIOBU7
RXD	9	10	NC
GND	11	12	GND
ACP	13	14	ACN

### 6.4.10 RGB LED

There is one RGB LED on the SAMA5D2C-XULT board; it can be controlled by the user. The three LED cathodes are controlled via GPIO PWM pins.

**Figure 6-33. RGB LED Indicators**

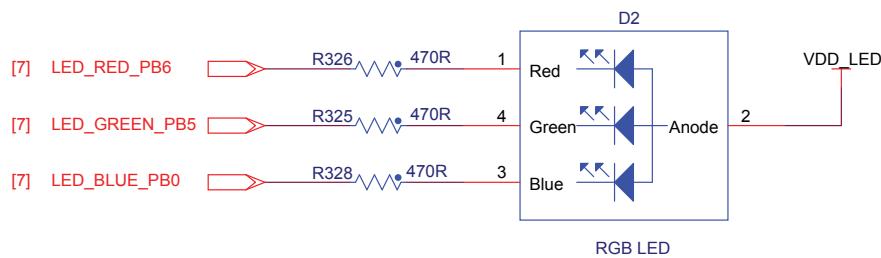


### 6.4.11 Push Button Switches

The SAMA5D2C-XULT board features three push buttons:

- One board Reset button (BP3) connected to the PMIC ACT8945A. When pressed and released, it causes a power-on reset of the board.
- One Wakeup push button connected to the PMIC ACT8945A, used to exit the processor from low-power mode (BP2).
- One User momentary push button (BP1).

**Figure 6-34. User Push Buttons (BP1)**

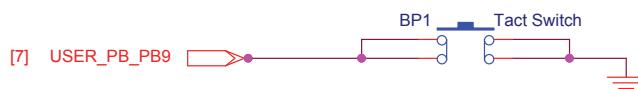


### 6.4.12 Debug Interfaces

The SAMA5D2C-XULT board includes a JTAG, a Debug serial COM port and an EDBG interface port, to provide debug level access to the SAMA5D2.

#### 6.4.12.1 Debug JTAG

A 10-pin JTAG header is provided on the SAMA5D2C-XULT board to facilitate the software development and debugging by using various JTAG emulators. The interface signals have a voltage level of 3.3V.


**Figure 6-35. JTAG Interface**

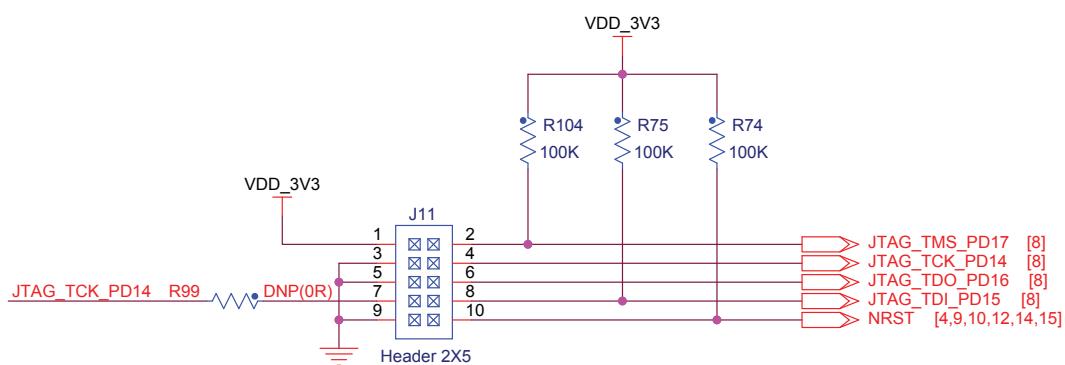

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-36. JTAG J11**

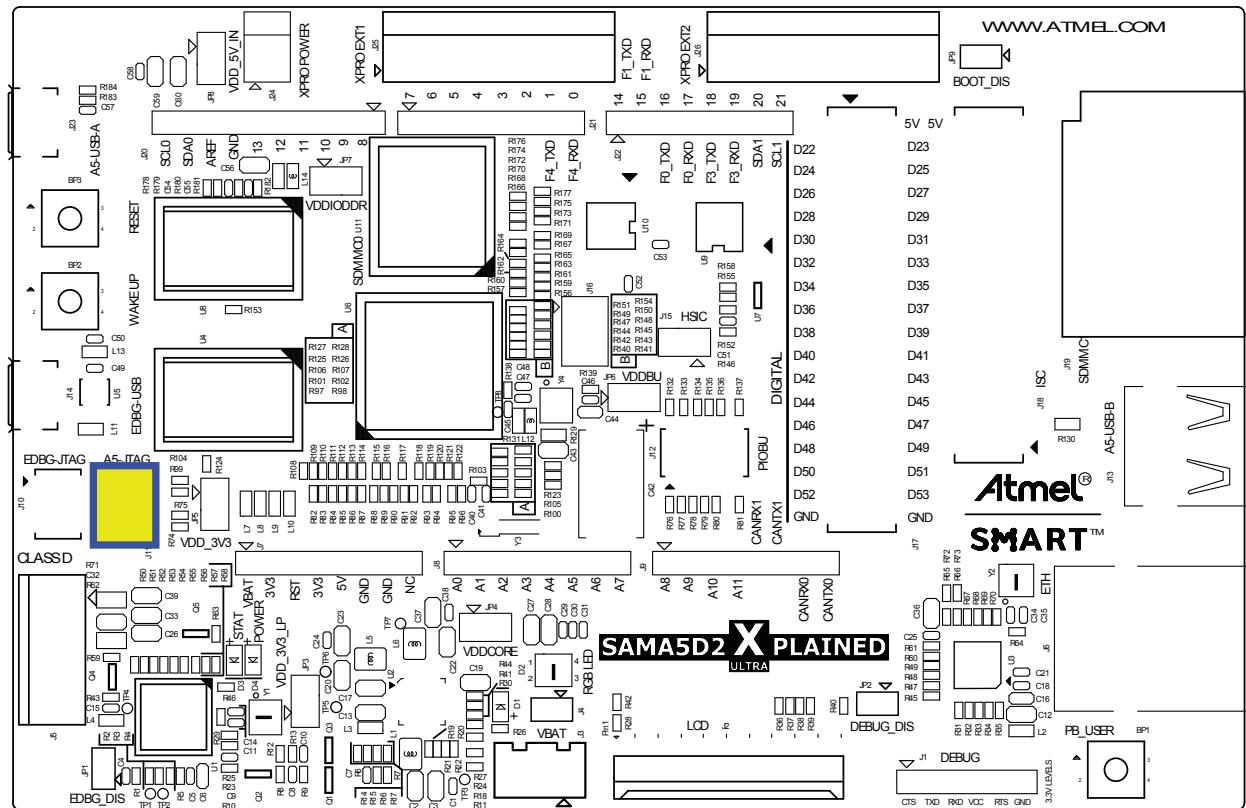

**Table 6-14. JTAG/ICE Connector J11 Signal Descriptions**

Pin	Mnemonic	Signal Description
1	VTref. 3.3V power	This is the target reference voltage (main 3.3V).
2	TMS TEST MODE SELECT	JTAG mode set input into target CPU
3	GND	Common ground
4	TCK TEST CLOCK – Output timing signal, for synchronizing test logic and control register access	JTAG clock signal into target CPU
5	GND	Common ground
6	TDO JTAG TEST DATA OUTPUT – Serial data input from the target	JTAG data output from target CPU
7	RTCK – Input Return test clock signal from the target	Some targets having too slow system clock must synchronize the JTAG inputs to internal clocks. In present case such synchronization is unneeded and TCK merely looped back into RTCK.
8	TDI TEST DATA INPUT – Serial data output line, sampled on the rising edge of the TCK signal	JTAG data input into target CPU

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

Pin	Mnemonic	Signal Description
9	GND	Common ground
10	nSRST RESET	Active-low reset signal. Target CPU reset signal.

### 6.4.12.2 Serial Console Port

The SAMA5D2C-XULT board has a dedicated serial port for debugging, which is accessible through the 6-pin male header J1. Various interfaces can be used as USB/Serial DBGU port bridge, such as FTDI TTL-232R USB to TTL serial cable or basic breakout board for the RS232/USB converter.

**Figure 6-37. Debug Com Port for Console**

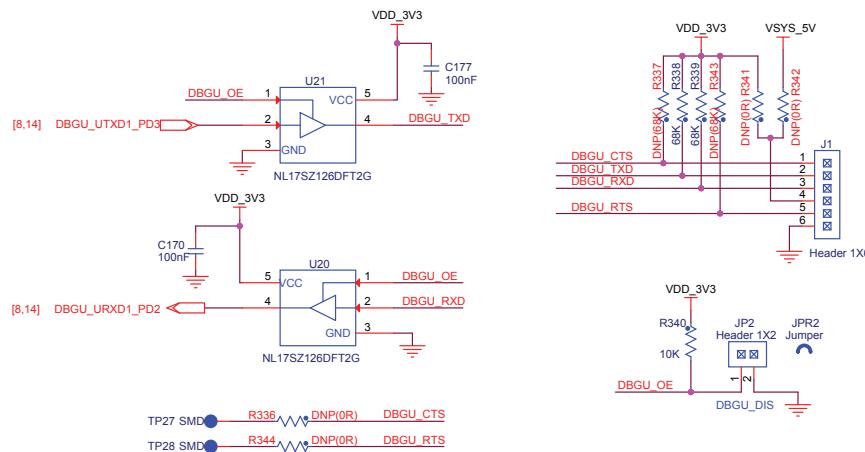

A jumper (JP2) is available to disable the Debug communication interface.

R341 and R342 are optional (not implemented) resistors that can be used for power selection. Power can be delivered either by the SAMA5D2C-XULT board or by the debug interface tool. To avoid malfunction between the debug interface (e.g., FTDI) and the on-board power system, ensure that the selected voltage level corresponds to application requirements. The console baud rate is set to 115200 by default.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

Figure 6-38. DEBUG Connector J1

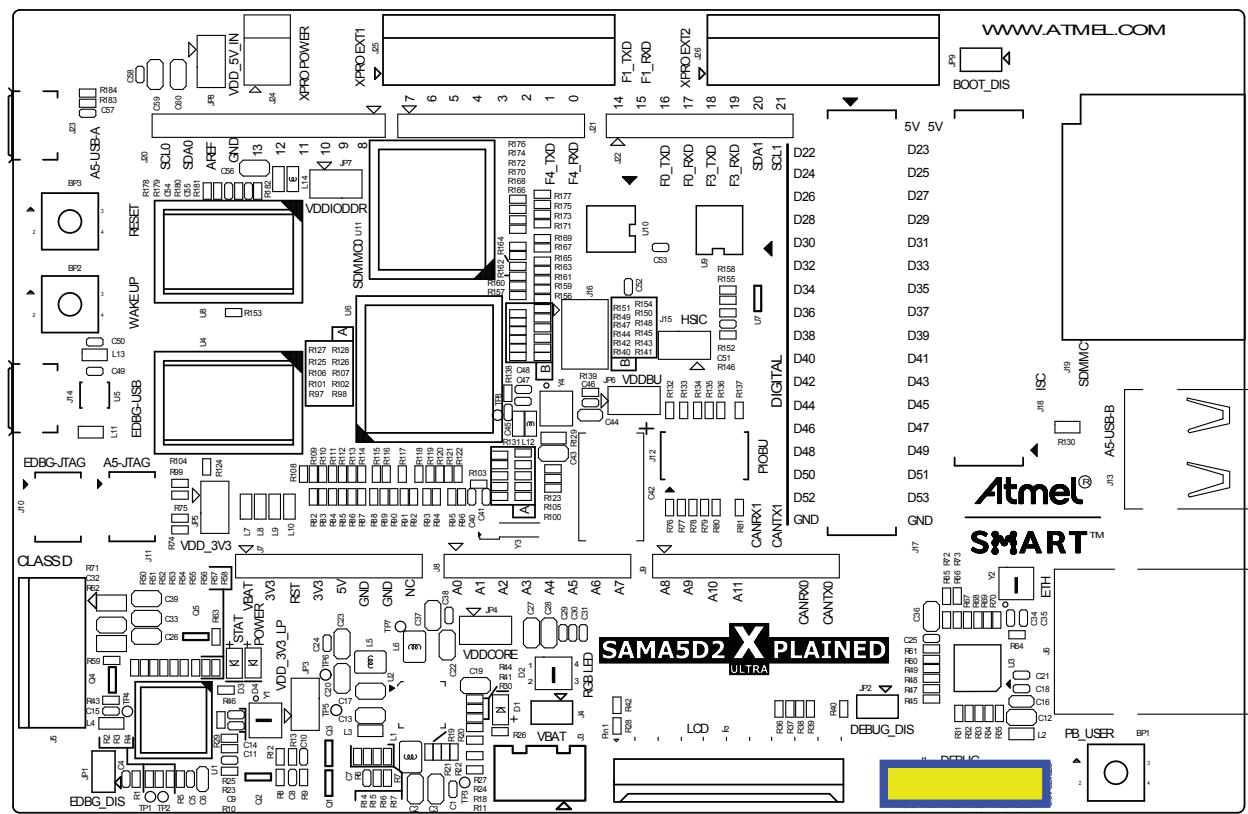


Table 6-15. DEBUG Connector J1 Signal Descriptions

Pin	Mnemonic	PIO	Signal Description
1	CTS	RFU	Handshake input
2	TXD1 (Transmitted Data)	PD3	RS232 serial data output signal
3	RXD1 (Received Data)	PD2	RS232 serial data input signal
4	Power	—	5V/3.3V (selected by resistors)
5	RTS	RFU	Handshake output
6	GND	—	Common ground



When using a console connected to the DEBUG interface J1, the jumper JP2 DEBUG\_DIS should be OFF.

### 6.4.13 Embedded Debugger (EDBG) Interface

The Embedded Debugger (EDBG)<sup>1</sup> is an intuitive plug-and-play solution which adds full programming and debugging support to embedded hardware kits containing Microchip microcontrollers and microprocessors. It enables seamless integration between the target hardware and the Atmel Studio front end.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

In addition to the Virtual COM port which provides a UART bridge to the target device, the EDBG provides a Data Gateway Interface, through which the target device and host PC can communicate, facilitating high-level application debugging, monitoring, graphing and logging of system information in real-time.

The EDBG is based on the AT32UC3A4256J high-performance low-power 32-bit AVR microcontroller running at up to 60 MHz. The device includes an on-chip USB 2.0 high-speed hardware module with dedicated DMA channels, making it ideal for data communications.

By default, the EDBG is in Reset state and not usable. To use the EDBG interface, remove the jumper JP1. To avoid any conflicts with the debug signals, do not use the JTAG and EDBG at the same time.

**Figure 6-39. EDBG Interface**

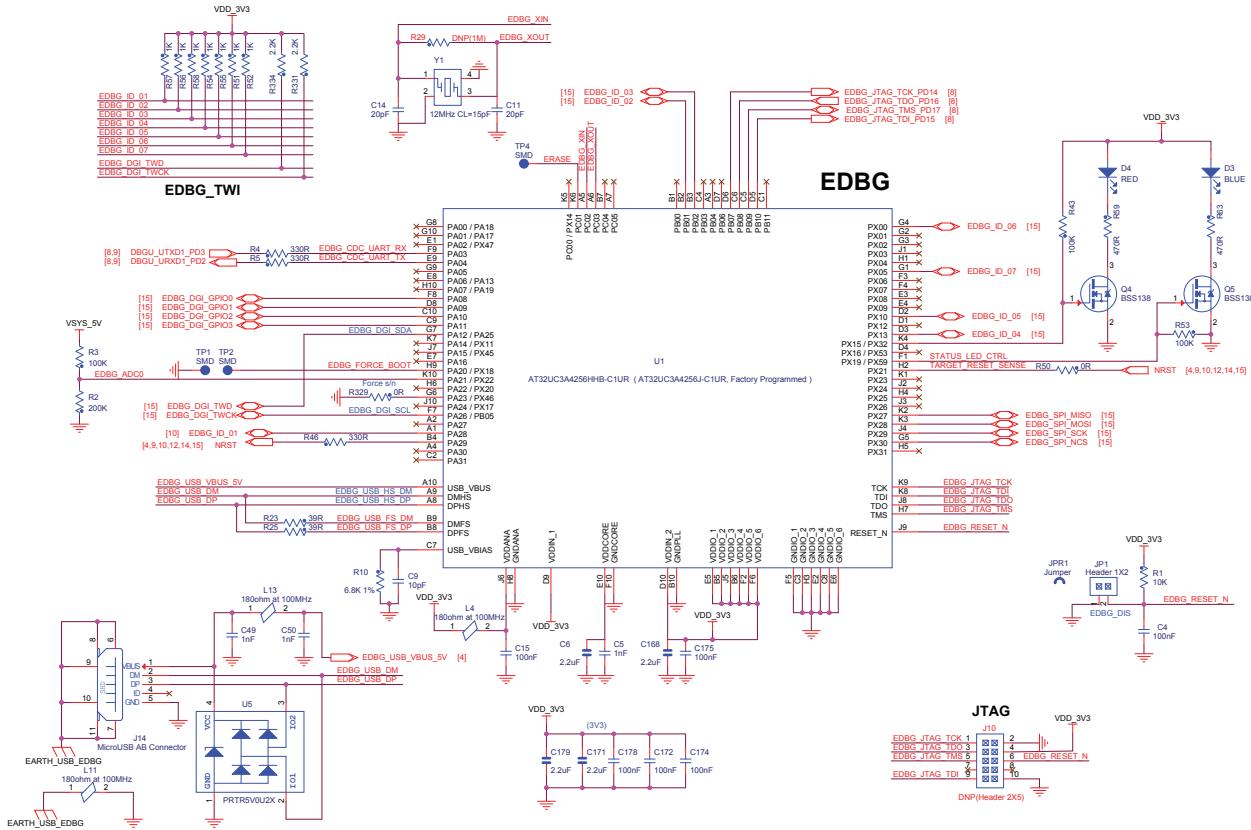

#### **6.4.14 CDC Debug Interface**

This feature is enabled only if pin J9 (RESET\_N) of the microcontroller is not tied to ground. The pin is normally pulled high and controlled by jumper JP1.

- Jumper JP1 not installed: The CDC device is enabled.
  - Jumper JP1 installed: The CDC device is disabled.



The default baud rate CDC is 57600 (57600/N/8/1).

---

<sup>1</sup> Device and Ordering Information—The EDBG is a factory-programmed AT32UC3A4256J-C1UR standard microcontroller with ordering code AT32UC3A4256HHB-C1UR. For more information, contact your local Microchip sales representative.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**WARNING** When using a console with the EDBG-CDC, the jumper JP2 DEBUG\_DIS should be ON.

### 6.4.15 EDBG USB Type Micro-AB

Figure 6-40. EDBG USB Type Micro-AB Connector J14

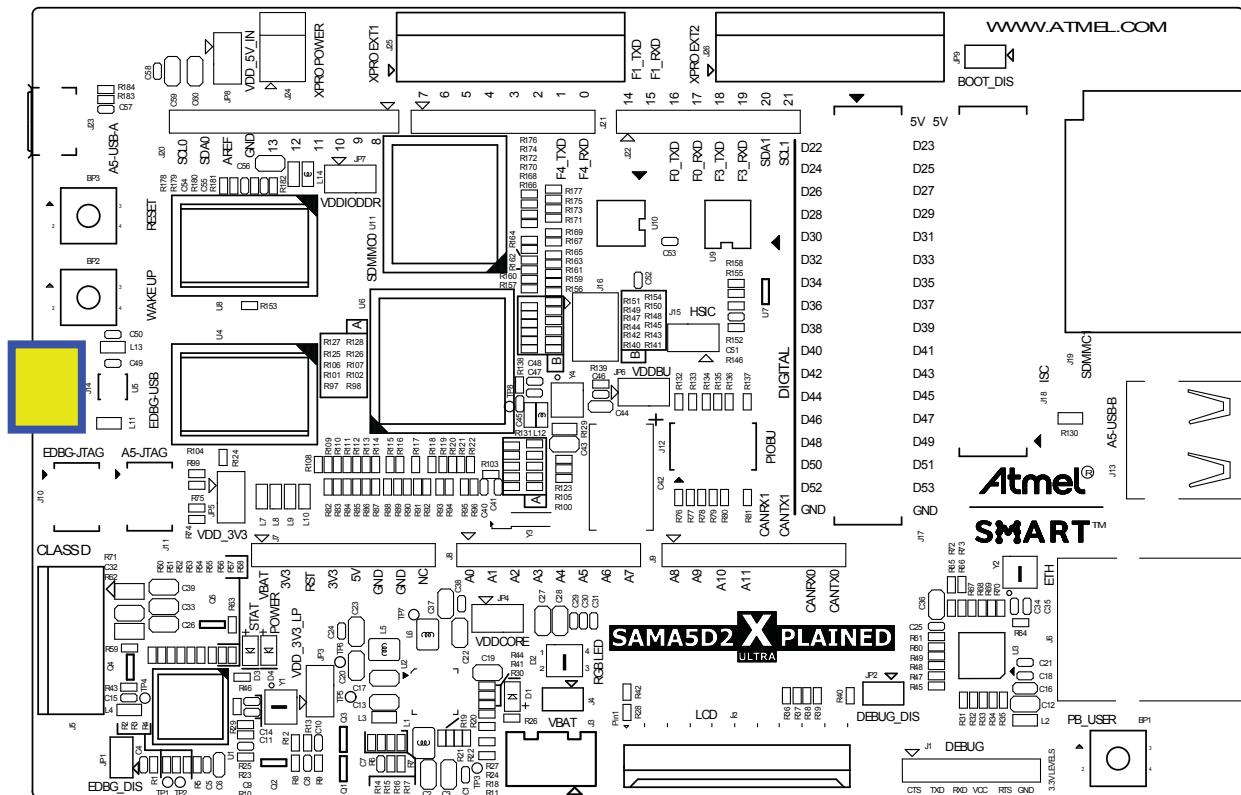


Table 6-16. USB Connector J14 Signal Descriptions

Pin	Mnemonic	Signal Description
1	VBUS	5V power
2	DM	Data minus
3	DP	Data plus
4	ID	On-the-go identification (not connected)
5	GND	Common ground

## 6.5 PIO Usage on Expansion Connectors

### 6.5.1 Arduino Connectors


Five 8-pin, one 6-pin, one 10-pin and one 36-pin headers (J7, J8, J9, J16, J17, J20, J21, J22) are provided on the SAMA5D2C-XULT board to enable the PIO connection of various expansion cards. These headers' physical and electrical implementation match the Arduino R3 extension ("shields") system.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

Due to I/O multiplexing, different signals can be provided on each pin.

**Figure 6-41. Expansion Boards Connectors**

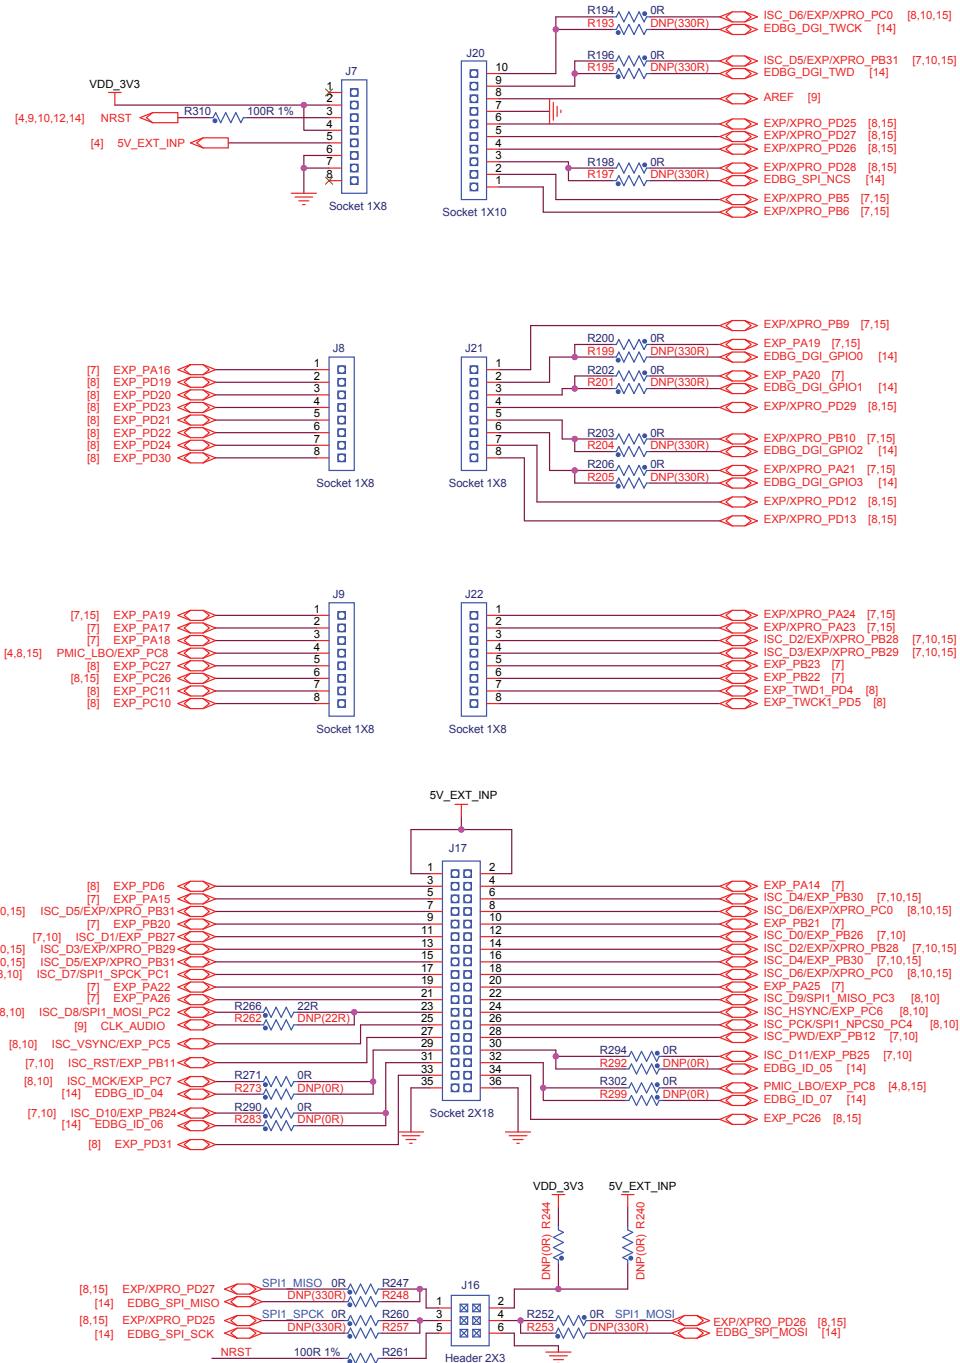

### 6.5.1.1 Functions Available Through the Arduino Headers


The multiplexing of the SAMA5D27 I/Os (standard parallel I/O and up to three peripheral functions per pin) makes it possible to route alternate signals via Arduino extension headers. To enable these signals, SAMA5D27 PIO multiplexing must be properly configured. For more details, refer to [Board Schematics](#) and the section [PIO Controller \(PIO\)](#) in the SAMA5D2 Series datasheet.

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

The tables below, together with the connector schematics, provide the alternate signals available for use with Arduino connectors.

**Figure 6-42. J7 Connector**

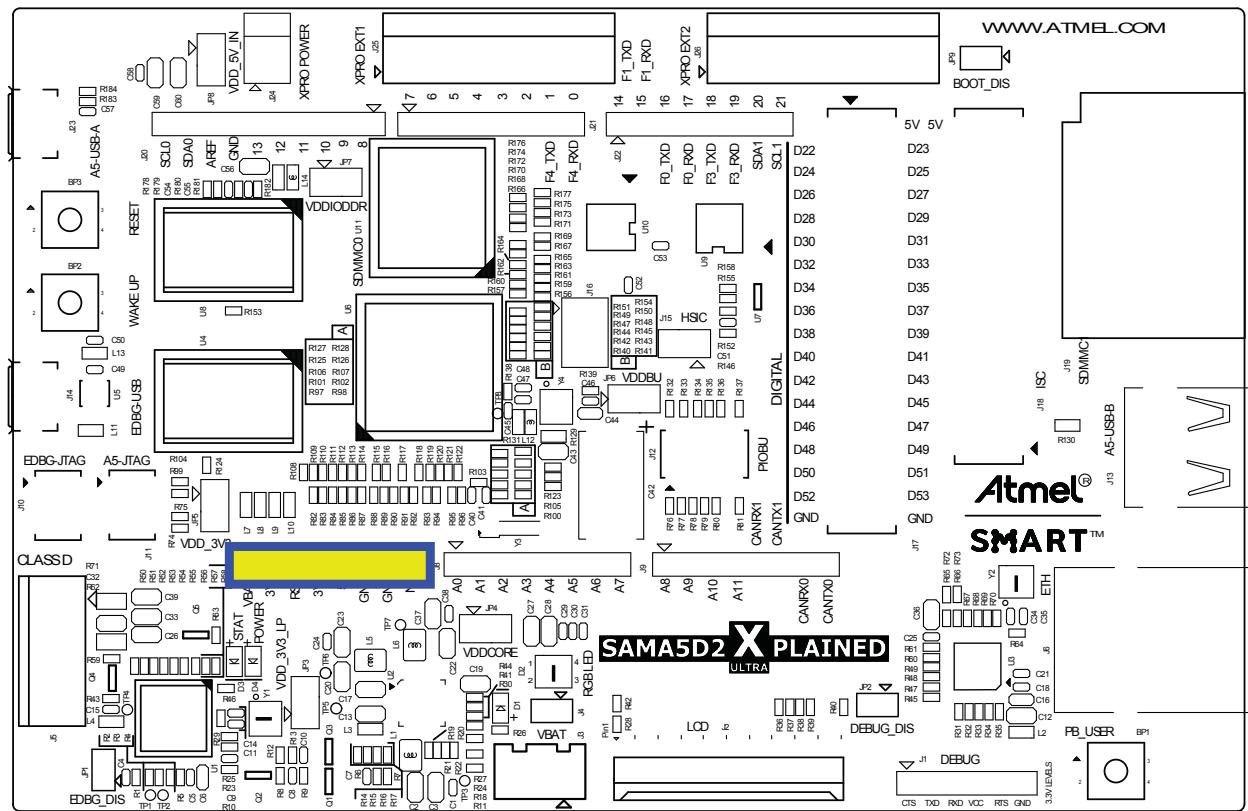


**Table 6-17. J7 Connector Signals**

Pin No.	Signal	Function
1	VBAT	NC
2	3V3	(IOREF)
3	RST	—
4	3V3	—
5	5V	—
6	GND	—
7	GND	—
8	VIN	NC

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components


Figure 6-43. J8 Connector

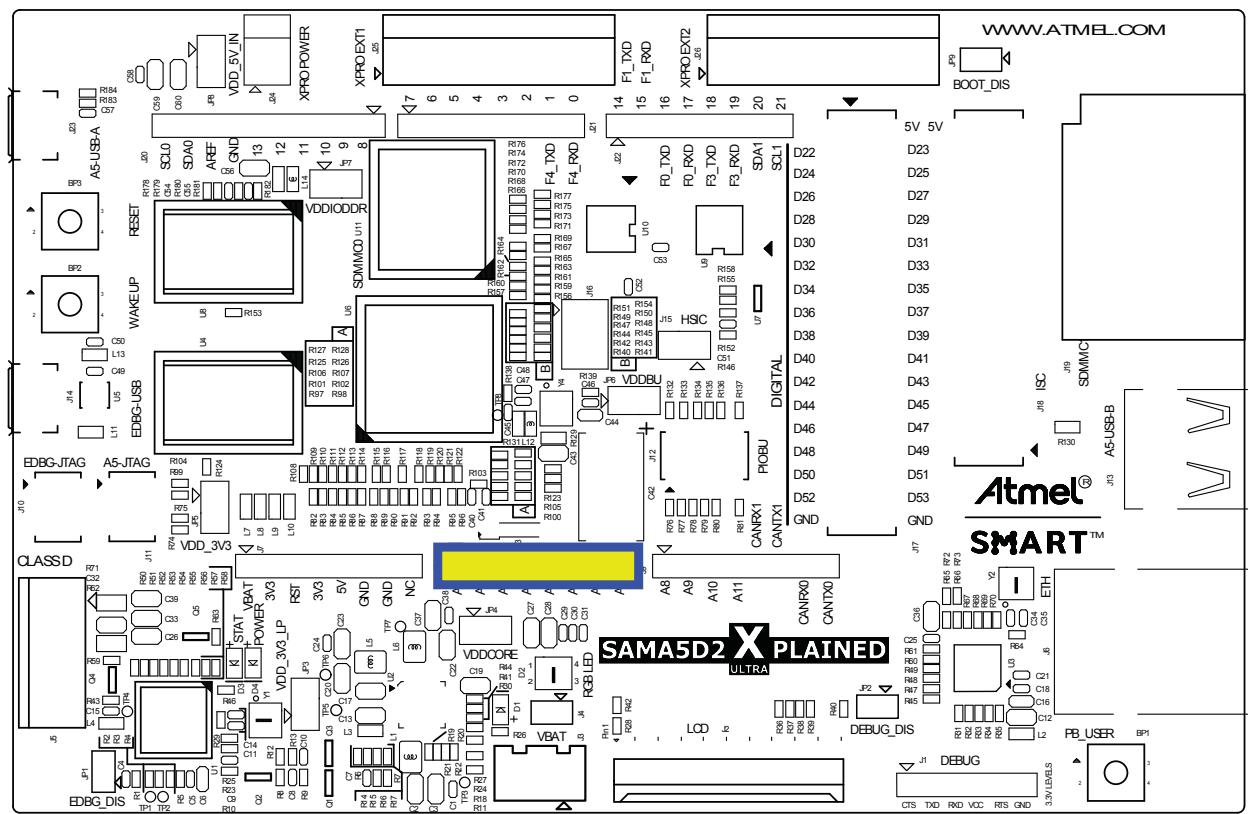

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-44. J9 Connector**

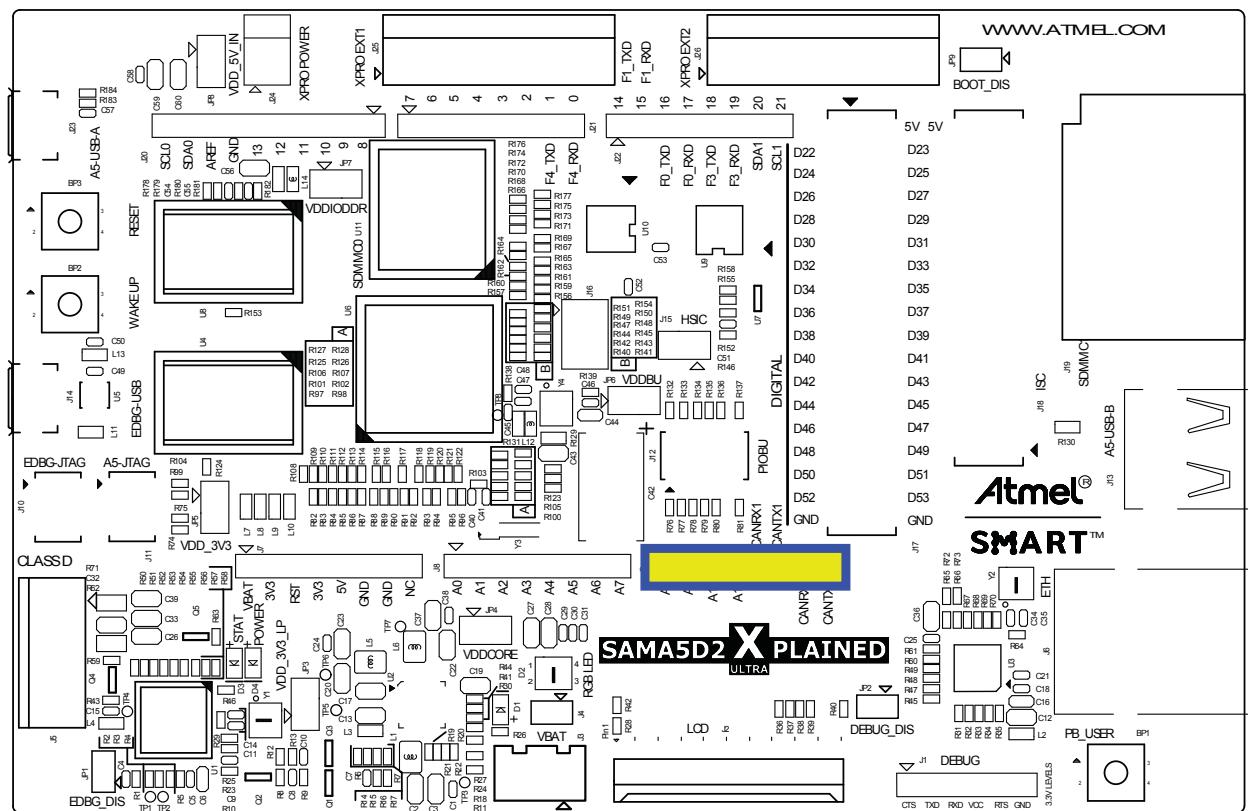

**Table 6-19. J9 Connector Signals**

Pin		SAMA5D27 PIO Muxing Alternates					
No.	Type						
1	PA19	SPI0_NPCS2	RF1	QSPI0_IO3	TIOA0	SDHC1_DAT1	D14
2	PA17	SPI0_NPCS0	RD1	QSPI0_IO1	I2SDI1	FLEXCOM3_O1	D12
3	PA18	SPI0_NPCS1	RK1	QSPI0_IO2	I2SDO1	SDHC1_DAT0	D13
4	PC8	LCDDEN	NANDRDY	FIQ	PCK0	UTXD1	ISC_FIELD
5	PC27	LCDDAT23	GTX3	PCK1	CANRX1	TWD0	A16
6	PC26	LCDDAT22	–	GTX2	CANTX1	–	A15
7	PC11	LCDDAT3	GTXEN	ISC_D2	TCLK4	CANRX0	A0/NBS0
8	PC10	LCDDAT2	GTXCK	ISC_D1	TIOB4	CANTX0	–

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

Figure 6-45. J20 Connector

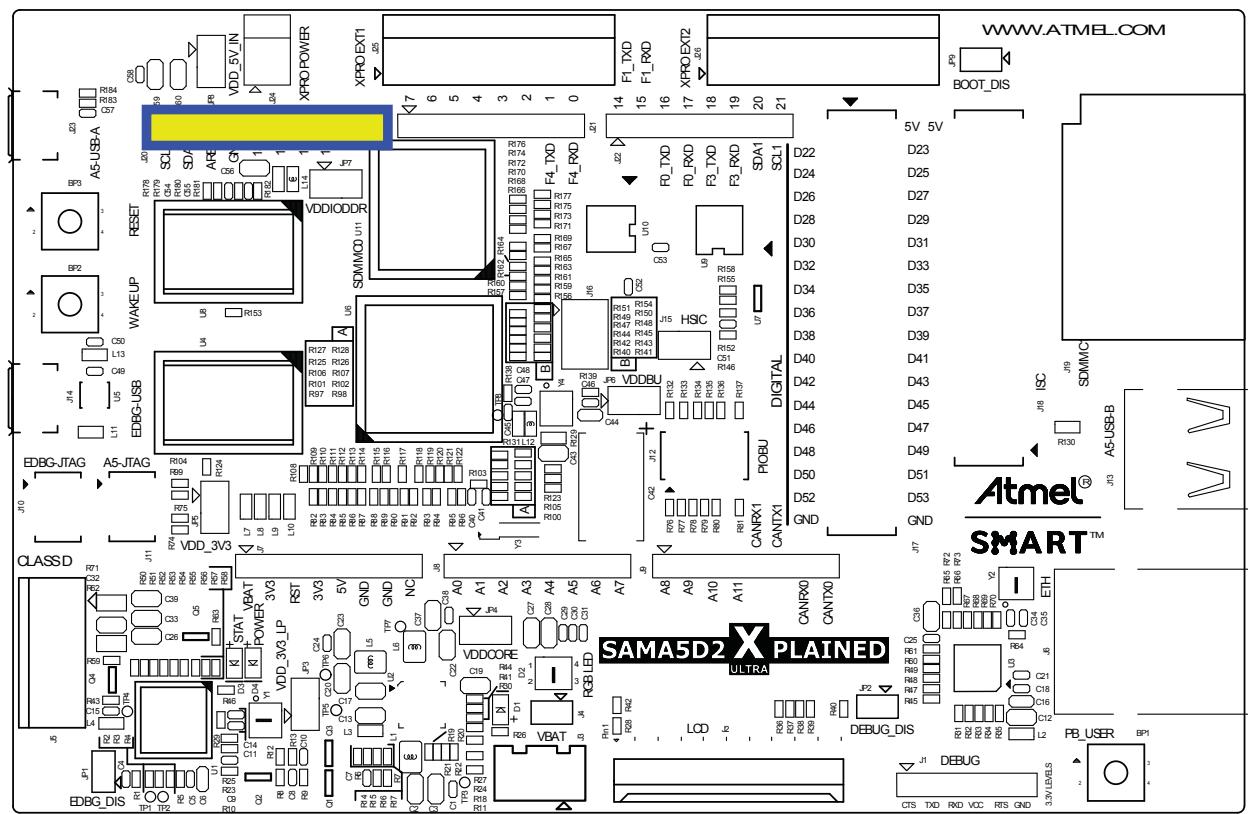



Table 6-20. J20 Connector Signals

Pin		SAMA5D27 PIO Muxing Alternates					
No.	Type						
10	PC0	LCDDAT21	A23	FLEXCOM0_O1	TWCK0	—	ISC_D6
9	PB31	LCDDAT20	A20	FLEXCOM0_IO4	TWD0	—	ISC_D5
8	AREF	—	—	—	—	—	—
7	GND	—	—	—	—	—	—
6	PD25	SPI1_SPCK		FLEXCOM4_O1	—	—	AD6
5	PD27	SPI1_MISO	TCK	FLEXCOM2_IO2	—	—	AD8
4	PD26	SPI1_MOSI	—	FLEXCOM2_IO1	—	—	AD7
3	PD28	SPI1_NPCS0	TDI	FLEXCOM2_IO3	—	—	AD9
2	PB5	TCLK2	D10	PWMH2	QSPI1_SCK	PTCPOR5	GTSUCOMP
1	PB6	TIOA2	D11	PWML2	QSPI1_CS	PTCPOR6	GTXER

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-46. J21 Connector**

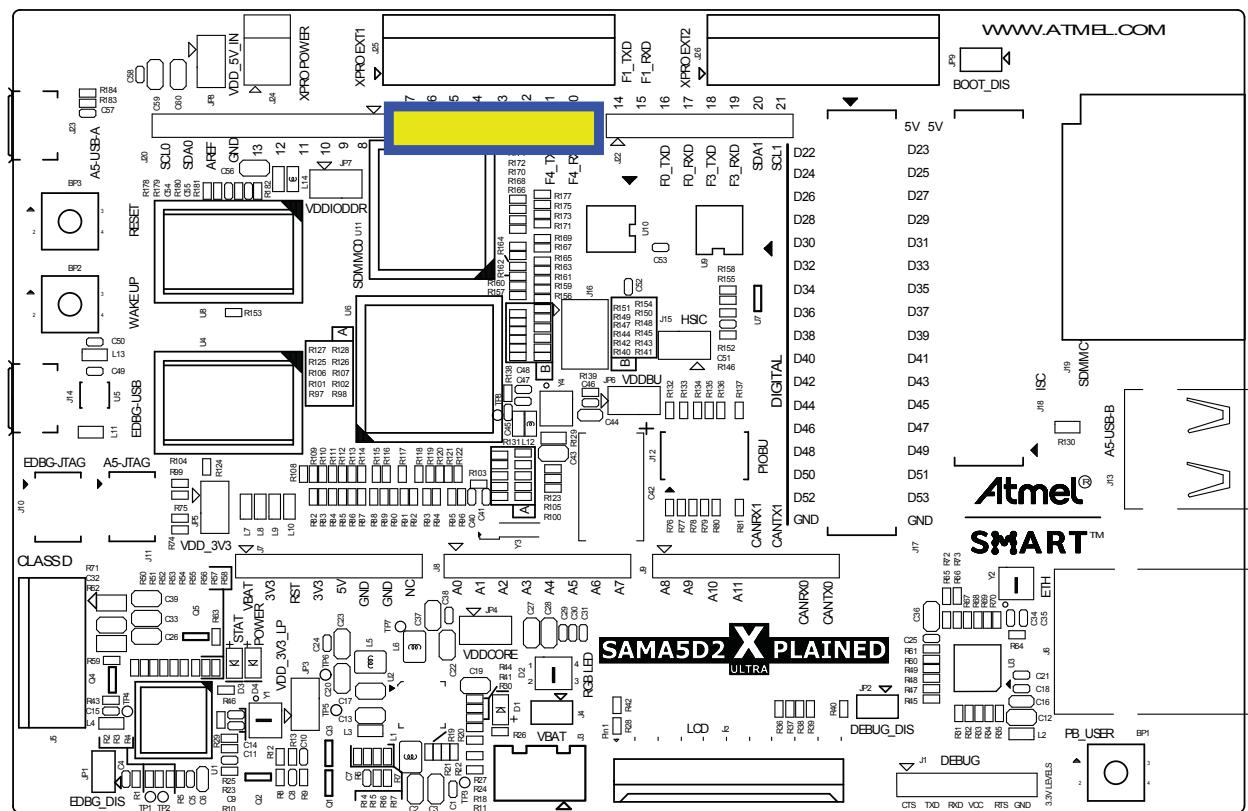


**Table 6-21. J21 Connector Signals**

Pin		SAMA5D27 PIO Muxing Alternates					
No.	Type						
1	PB9	TIOA3	D14	PWMFI1	QSPI1_IO2	-	GCOL
2	PA19	SPI0_NPCS2	RF1	QSPI0_IO3	TIOA0	SDHC1_DAT1	D14
3	PA20	SPI0_NPCS3	-	-	TIOB0	SDHC1_DAT2	D15
4	PD29	SPI1_NPCS1	TDO	FLEXCOM2_IO4	TIOA3	TWD0	AD10
5	PB10	TIOB3	D15	PWMEXTRG1	QSPI1_IO3	-	GRX2
6	PA21	IRQ	PCK2		TCLK0	SDHC1_DAT3	NANDRDY
7	PD12	TIOB1	FLEXCOM4_IO1	UTMI_LS1	GRXER	ISC_D5	ISC_D0
8	PD13	TCLK1	FLEXCOM4_IO2	UTMI_CRDCPSEL0	GRX0	ISC_D6	ISC_D1

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-47. J22 Connector**

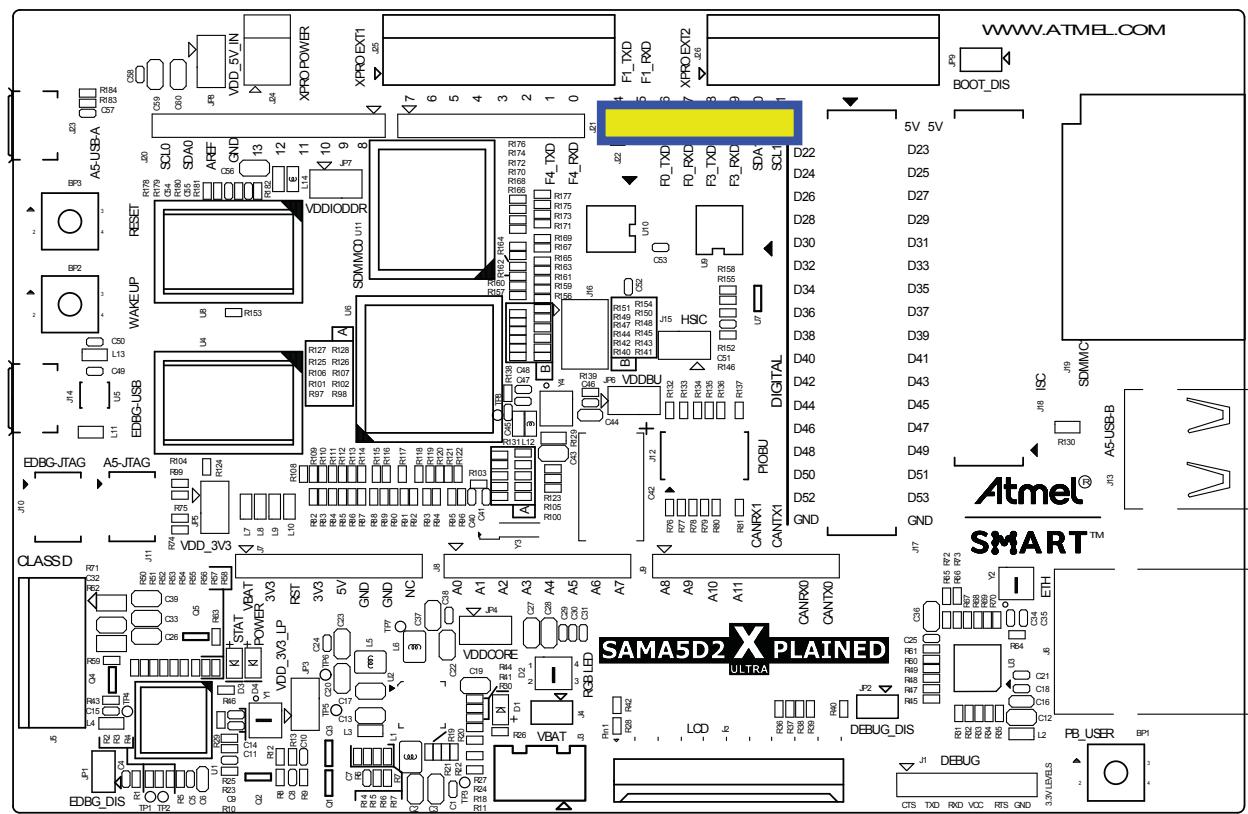


**Table 6-22. J22 Connector Signals**

Pin		SAMA5D27 PIO Muxing Alternates						
No.	Type							
1	PA24	FLEXCOM1_IO0	D2	TDO	SPI1_MISO	-	QSPI0_IO0	
2	PA23	FLEXCOM1_IO1	D1	TDI	SPI1_MOSI	-	QSPI0_CS	
3	PB28	LCDDAT17	A17	FLEXCOM0_IO0	TIOA5	-	ISC_D2	
4	PB29	LCDDAT18	A18	FLEXCOM0_IO1	TIOB5	-	ISC_D3	
5	PB23	LCDDAT12	A12	RD0	TIOB2	FLEXCOM3_IO1	GMDIO	
6	PB22	LCDDAT11	A11	TD0	TIOA2	FLEXCOM3_IO2	GMDC	
7	PD4	TWD1	URXD2	-	GCOL	ISC_D10	NCS0	
8	PD5	TWCK1	UTXD2	-	GRX2	ISC_D9	NCS1	

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-48. J17 Connector**

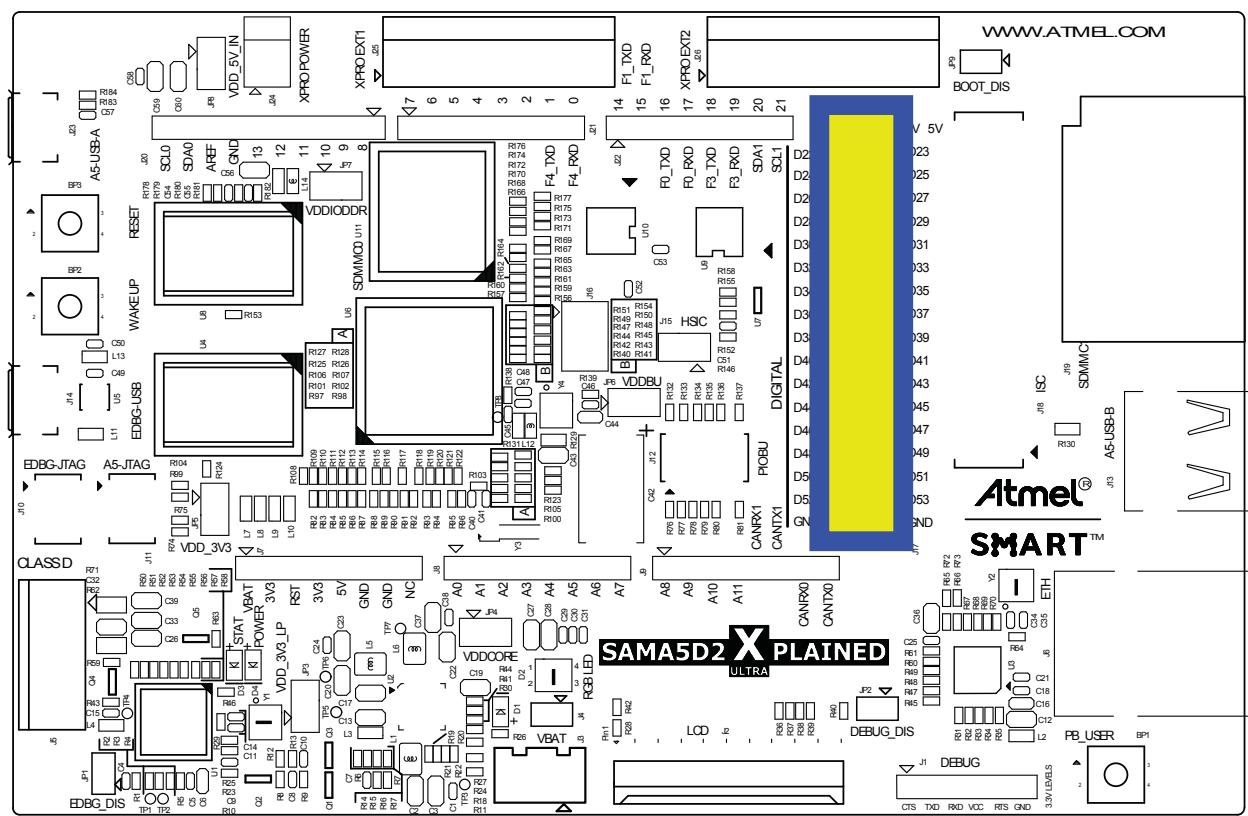

**Table 6-23. J17 Connector Signals**

Pin		SAMA5D27 PIO Muxing Alternates					
No.	Type						
1	5V	—	—	—	—	—	—
2	5V	—	—	—	—	—	—
3	PD6	TCK	PCK1	—	GRX3	ISC_D8	NCS2
4	PA14	SPI0_SPCK	TK1	QSPI0_SCK	I2SMCK1	FLEXCOM3_IO3	D9
5	PA15	SPI0_MOSI	TF1	QSPI0_CS	I2SCK1	FLEXCOM3_IO1	D10
6	PB30	LCDDAT19	A19	FLEXCOM0_IO3	TCLK5	—	ISC_D4
7	PB31	LCDDAT20	A20	FLEXCOM0_IO4	TWD0	—	ISC_D5
8	PC0	LCDDAT21	A23	FLEXCOM0_O1	TWCK0	—	ISC_D6
9	PB20	LCDDAT9	A9	TK0	TIOB3	PCK1	GTX0
10	PB21	LCDDAT10	A10	TF0	TCLK3	FLEXCOM3_IO3	GTX1
11	PB27	LCDDAT16	A16	UTXD0	PDMCLK0	—	ISC_D1
12	PB26	LCDDAT15	A15	URXD0	PDMDAT0	—	ISC_D0
13	PB29	LCDDAT18	A18	FLEXCOM0_IO1	TIOB5	—	ISC_D3
14	PB28	LCDDAT17	A17	FLEXCOM0_IO0	TIOA5	—	ISC_D2
15	PB31	LCDDAT20	A20	FLEXCOM0_IO4	TWD0	—	ISC_D5
16	PB30	LCDDAT19	A19	FLEXCOM0_IO3	TCLK5	—	ISC_D4

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

Pin		SAMA5D27 PIO Muxing Alternates						
No.	Type							
17	PC1	LCDDAT22	A24	CANTX0	SPI1_SPCK	I2SCK0	ISC_D7	
18	PC0	LCDDAT21	A23	FLEXCOM0_O1	TWCK0	–	ISC_D6	
19	PA22	FLEXCOM1_IO3	D0	TCK	SPI1_SPCK	SDHC1_CK	QSPI0_SCK	
20	PA25	FLEXCOM1_IO4	D3	TMS	SPI1_NPCS0	–	QSPI0_IO1	
21	PA26	FLEXCOM1_O1	D4	NTRST	SPI1_NPCS1	–	QSPI0_IO2	
22	PC3	LCDPWM	NWAIT	TIOA1	SPI1_MISO	I2SWS0	ISC_D9	
23	PC2	LCDDAT23	A25	CANRX0	SPI1_MOSI	I2SMCK0	ISC_D8	
24	PC6	LCDHSYNC	NCS1	TWD1	SPI1_NPCS2	–	ISC_HSYNC	
25	PC5	LCDVSYNC	NCS0	TCLK1	SPI1_NPCS1	I2SDO0	ISC_VSYNC	
26	PC4	LCDDISP	NWR1/NBS1	TIOB1	SPI1_NPCS0	I2SDI0	ISC_PCK	
27	PB11	LCDDAT0	A0/NBS0	URXD3	PDMDAT0	–	GRX3	
28	PB12	LCDDAT1	A1	UTXD3	PDMCLK0	–	GTX2	
29	PC7	LCDPCK	NCS2	TWCK1	SPI1_NPCS3	URXD1	ISC_MCK	
30	PB25	LCDDAT14	A14	RF0	–	FLEXCOM3_IO1	ISC_D11	
31	PB24	LCDDAT13	A13	RK0	TCLK2	FLEXCOM3_IO4	ISC_D10	
32	PC8	LCDDEN	NANDRDY	FIQ	PCK0	UTXD1	ISC_FIELD	
33	PD31	ADTRG	NTRST	IRQ	TCLK3	PCK0	–	
34	PC26	LCDDAT22	–	GTX2	CANTX1	–	A15	
35	GND	–	–	–	–	–	–	
36	GND	–	–	–	–	–	–	

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

**Figure 6-49. J16 Connector**

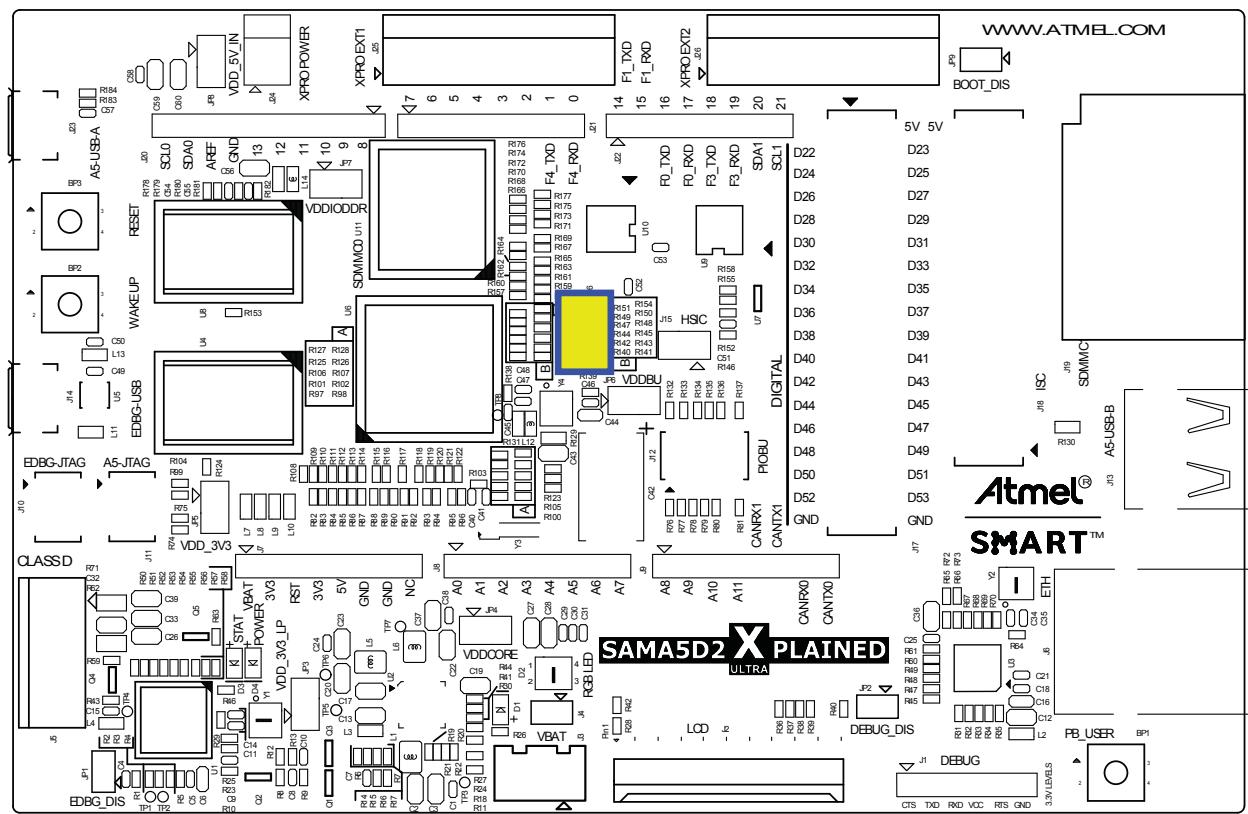

**Table 6-24. J16 Connector Signals**

Pin		SAMA5D27 PIO Muxing Alternates						
No.	Type							
1	PD27	SPI1_MISO	TCK	FLEXCOM2_IO2	—	—	—	AD8
2	POWER (1)	—	—	—	—	—	—	—
3	PD25	SPI1_SPCK	—	FLEXCOM4_O1	—	—	—	AD6
4	PD26	SPI1_MOSI	—	FLEXCOM2_IO1	—	—	—	AD7
5	nRST	—	—	—	—	—	—	—
6	GND	—	—	—	—	—	—	—

**Note:** 5V/3.3V selected by resistors


### 6.5.2 XPRO

The SAMA5D2C-XULT board features three connectors to interface with standard Xplained PRO extensions.

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Components

**Figure 6-50. XPRO Connectors Schematics**

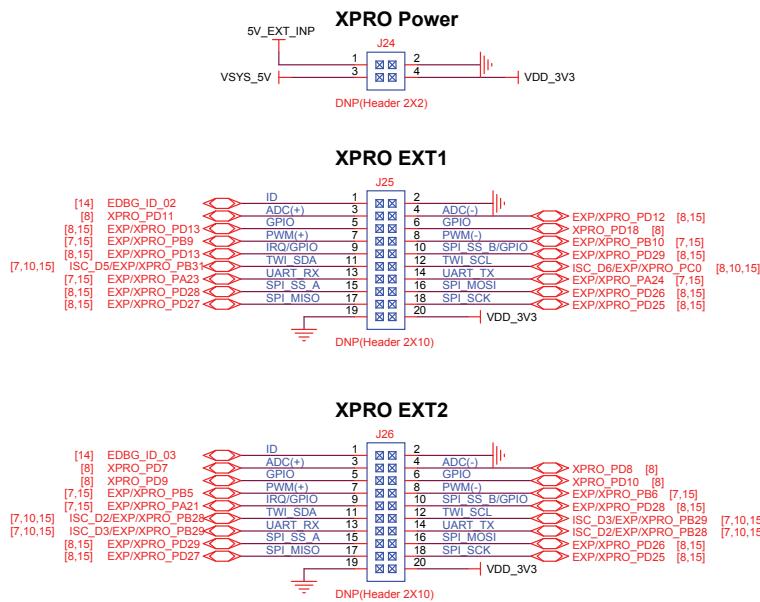

The standard extension headers include common signals.

**Figure 6-51. XPRO Connectors**

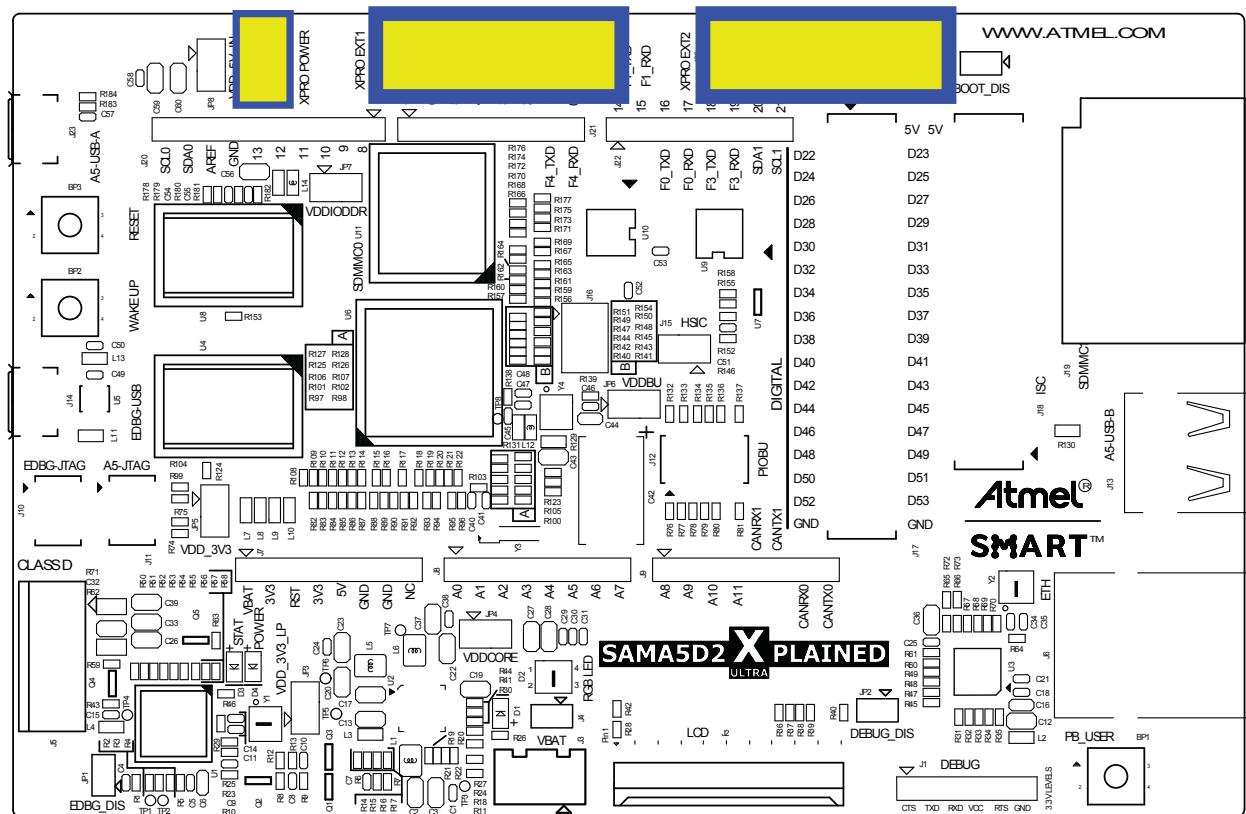

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

---

**Table 6-25. XPRO Power Connector J24 Signal Descriptions**

Signal	Pin No.		Signal
EXP_5V	1	2	GND
VDD_5V	3	4	VSYS_3V3

**Table 6-26. XPRO EXT1 Connector J25 Signal Descriptions**

Pin		XPRO Signal	SAMA5D27 PIO Muxing Alternates							
No.	Type									
1	-	EDBG_ID_02	-	-	-	-	-	-	-	-
2	GND	-	-	-	-	-	-	-	-	-
3	PD11	ADC(+)	TIOA1	PCK2	UTMI_LS0	GRXDV	ISI_D4	ISI_MCK	PTCCOL0	
4	PD12	ADC(-)	TIOB1	FLEXCOM4_IO1	UTMI_LS1	GRXER	ISI_D5	ISI_D4	PTCCOL1	
5	PD13	GPIO	TCLK1	FLEXCOM4_IO2	UTMI_CDRCP_SEL0	GRX0	ISI_D6	ISI_D5	PTCCOL2	
6	PD18	GPIO	NTRST	-	-	GMDIO	ISI_FIELD	ISI_D10	PTCCOL7	
7	PB9	PWM(+)	TIOA3	D14	PWMFI1	QSPI1_IO2	-	GCOL	-	
8	PB10	PWM(-)	TIOB3	D15	PWMEXTRG1	QSPI1_IO3	-	GRX2	-	
9	PD13	IRQ/GPIO	TCLK1	FLEXCOM4_IO2	UTMI_CDRCP_SEL0	GRX0	ISI_D6	ISI_D5	PTCCOL2	
10	PD29	SPI_SS_B/GPIO	SPI1_NPCS1	TDO	FLEXCOM2_IO4	TIOA3	TWD0	-	AD10	
11	PB31	TWI_SDA	LCDDAT20	A20	FLEXCOM0_IO4	TWD0	-	ISI_D5	-	
12	PC0	TWI_SCL	LCDDAT21	A23	FLEXCOM0_O1	TWCK0	-	ISI_D6	-	
13	PA23	UART_RX	FLEXCOM1_IO2	D1	TDI	SPI1_MOSI	-	QSPI0_CS	-	
14	PA24	UART_TX	FLEXCOM1_IO1	D2	TDO	SPI1_MISO	-	QSPI0_IO0	-	
15	PD28	SPI_SS_A	SPI1_NPCS0	TDI	FLEXCOM2_IO3	-	-	-	AD9	
16	PD26	SPI_MOSI	SPI1_MOSI	-	FLEXCOM2_IO1	-	-	-	AD7	
17	PD27	SPI_MISO	SPI1_MISO	TCK	FLEXCOM2_IO2	-	-	-	AD8	
18	PD25	SPI_SCK	SPI1_SPCK	-	FLEXCOM4_O1	-	-	-	AD6	
19	GND	-	-	-	-	-	-	-	-	
20	3V3	-	-	-	-	-	-	-	-	

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Components

---

**Table 6-27. XPRO EXT2 Connector J26 Signal Descriptions**

Pin		XPRO Signal	SAMA5D27 PIO Muxing Alternates							
No.	Type									
1	-	EDBG_ID_03	-	-	-	-	-	-	-	-
2	GND	-	-	-	-	-	-	-	-	-
3	PD7	ADC(+)	TDI	-	UTMI_RXVAL	GTX2	ISI_D0	NWR1/NBS1	PTCROW4	
4	PD8	ADC(-)	TDO	-	UTMI_RXERR	GTX3	ISI_D1	NANDRDY	PTCROW5	
5	PD9	GPIO	TMS	-	UTMI_RXACT	GTXCK	ISI_D2	-	PTCROW6	
6	PD10	GPIO	NTRST	-	UTMI_HDIS	GTXEN	ISI_D3	-	PTCROW7	
7	PB5	PWM(+)	TCLK2	D10	PWMH2	QSPI1_SCK	PTCPOR5	GTSUCOMP	-	
8	PB6	PWM(-)	TIOA2	D11	PWML2	QSPI1_CS	PTCPOR6	GTXER	-	
9	PA21	IRQ/GPIO	IRQ	PCK2	-	TCLK0	SDHC1DAT3	NANDRDY	-	
10	PD28	SPI_SS_B/GPIO	SPI1_NPCS0	TDI	FLEXCOM2_IO3	-	-	-	AD9	
11	PB28	TWI_SDA	LCDDAT17	A17	FLEXCOM0_IO1	TIOA5	-	ISI_D2	-	
12	PB29	TWI_SCL	LCDDAT18	A18	FLEXCOM0_IO2	TIOB5	-	ISI_D3	-	
13	PB29	UART_RX	LCDDAT18	A18	FLEXCOM0_IO2	TIOB5	-	ISI_D3	-	
14	PB28	UART_TX	LCDDAT17	A17	FLEXCOM0_IO1	TIOA5	-	ISI_D2	-	
15	PD29	SPI_SS_A	SPI1_NPCS1	TDO	FLEXCOM2_IO4	TIOA3	TWD0	-	AD10	
16	PD26	SPI_MOSI	SPI1_MOSI	-	FLEXCOM2_IO1	-	-	-	AD7	
17	PD27	SPI_MISO	SPI1_MISO	TCK	FLEXCOM2_IO2	-	-	-	AD8	
18	PD25	SPI_SCK	SPI1_SPCK	-	FLEXCOM4_O1	-	-	-	AD6	
19	GND	-	-	-	-	-	-	-	-	
20	3V3	-	-	-	-	-	-	-	-	

### 7. Board Schematics

This section contains the following schematics:

- Block Diagram
- PIO Muxing Table
- Power Supply
- SAMA5D27 – Power
- SAMA5D27 – DDR3
- SAMA5D27 – PIOA and PIOB
- SAMA5D27 – PIOC and PIOD
- SAMA5D27 – SYS, Tamper, and Debug
- USB, ISC, and LCD
- Serial Flash, LEDS, Push Button and ClassD
- Ethernet
- SD and eMMC
- EDBG
- Expansion and XPRO Connectors



**Important:** Design Reuse Recommendation

In case the memory or PIO busses go to multiple destinations, series resistors must be added. These resistors must be located at the beginning of each branch, as close as possible to the MPU.

In case these connections are point-to-point, the branch resistors found in the following schematics can be removed.

In all cases, it is recommended to always perform routing simulation to check signal integrity prior to PCB manufacturing.


---

#### 7.1 Schematics

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics

Figure 7-1. Block Diagram

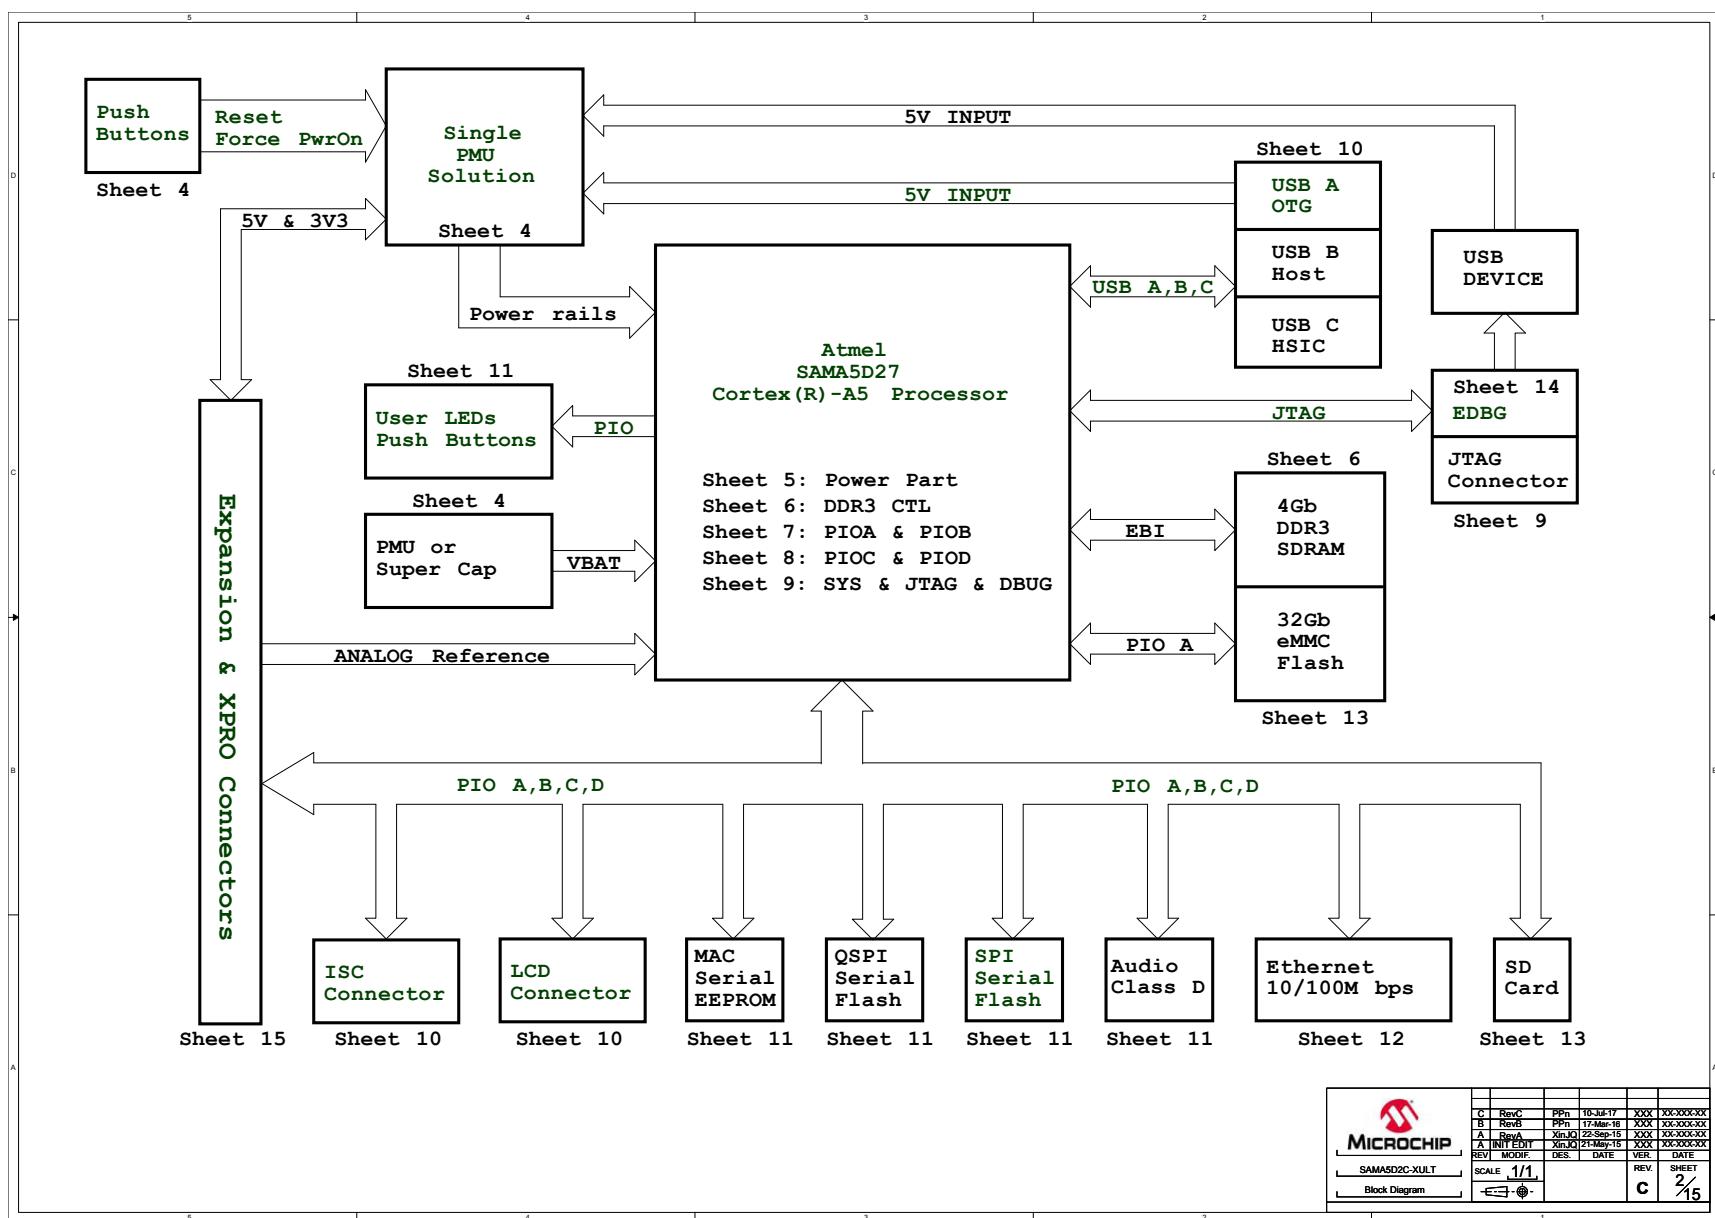

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics

**Figure 7-2. PIO Muxing Table**

5	4	3	2	1
<b>PIO Muxing &amp; Jumper setting</b>				
<b>LCD</b>				
ID_SYS	1			
GND	2			
NC	3			
NC	4			
LCDDAT2	5			
LCDDAT3	6			
GND	7			
LCDDAT4	8			
LCDDAT5	9			
LCDDAT6	10			
LCDDAT7	11			
GND	12			
NC	13			
NC	14			
LCDDAT10	15			
LCDDAT11	16			
GND	17			
LCDDAT12	18			
LCDDAT13	19			
LCDDAT14	20			
LCDDAT15	21			
GND	22			
NC	23			
NC	24			
LCDDAT18	25			
LCDDAT19	26			
GND	27			
LCDDAT20	28			
LCDDAT21	29			
LCDDAT22	30			
LCDDAT23	31			
GND	32			
LCDPCK	33			
LCDVSYNC	34			
LCDHSYNC	35			
LCDDEN	36			
SPI1_SPCK/AD0_XP	37			
SPI1_MOSI/AD1_XM	38			
SPI1_MISO/AD2_YP	39			
SPI1_NPCS0/AD3_YM	40			
LCDDISP	41			
TWD1	42			
TWCK1	43			
IRQ1	44			
IRQ2	45			
LCDPWM	46			
NRST	47			
VCC	48			
VCC	49			
GND	50			

PIOA	USAGE	PIOB	USAGE	PIOC	USAGE
PA0 SDHC0_CK	PA16 SPI0_MISO/EXP	PB0 LED_BLUE/LCD_ID	PB16 ETH_GRXDV	PC0 ISC_D6/EXP/XPRO	
PA1 SDHC0_CMD	PA17 SPI0_CS0/EXP	PB1 CLASSD_R0	PB17 ETH_GRXER	PC1 ISC_D7/SPI1_SPCK/EXP	
PA2 SDHC0_DAT0	PA18 SDHC1_DAT0/EXP	PB2 CLASSD_R1	PB18 ETH_GRX0	PC2 ISC_D8/SPI1_MOSI/EXP	
PA3 SDHC0_DAT1	PA19 SDHC1_DAT1/EXP	PB3 CLASSD_R2	PB19 ETH_RX1	PC3 ISC_D9/SPI1_MISO/EXP	
PA4 SDHC0_DAT2	PA20 SDHC1_DAT2/EXP	PB4 CLASSD_R3	PB20 ETH_GTX0/EXP	PC4 ISC_PCK/SPI1_NPCS0/EXP	
PA5 SDHC0_DAT3	PA21 SDHC1_DAT3/EXP/XPRO	PB5 LED_GREEN/EXP/XPRO	PB21 ETH_GTX1/EXP	PC5 ISC_VSYNC/EXP	
PA6 SDHC0_DAT4	PA22 SDHC1_CK/QSPI0_SCK/EXP	PB6 LED_RED/EXP/XPRO	PB22 ETH_GMDC/EXP	PC6 ISC_HSYNC/EXP	
PA7 SDHC0_DAT5	PA23 QSPI0_CS/EXP/XPRO	PB7 LCD IRQ1	PB23 ETH_GMDIO/EXP	PC7 ISC_MCK/EXP	
PA8 SDHC0_DAT6	PA24 QSPI0_IO0/EXP/XPRO	PB8 LCD IRQ2	PB24 ISC_D10/EXP	PC8 PMIC_LBO/EXP	
PA9 SDHC0_DAT7	PA25 QSPI0_IO1/EXP	PB9 USER_PB/EXP/XPRO	PB25 ISC_D11/EXP	PC9 ETH_INT	
PA10 SDHC0_RSTN	PA26 QSPI0_IO2/EXP	PB10 USBB_EN5V/EXP/XPRO	PB26 ISC_D0/EXP	PC10 LCD_DAT2/EXP	
PA11 SDHC0_VDDSEL	PA27 QSPI0_IO3	PB11 ISC_RST/EXP	PB27 ISC_D1/EXP	PC11 LCD_DAT3/EXP	
PA12 PMIC_CHGLEV	PA28 SDHC1_CMD	PB12 ISC_PWD/EXP	PB28 ISC_D2/EXP/XPRO	PC12 LCD_DAT4	
PA13 SDHC0_CD	PA29 USBB_OVCUR	PB13 PMIC_IRQ	PB29 ISC_D3/EXP/XPRO	PC13 LCD_DAT5	
PA14 SPI0_SPCK/EXP	PA30 SDHC1_CD	PB14 ETH_GTXCK	PB30 ISC_D4/EXP	PC14 LCD_DAT6	
PA15 SPI0_MOSI/EXP	PA31 USBA_VBUS Detection	PB15 ETH_GTXEN	PB31 ISC_D5/EXP/XPRO	PC15 LCD_DAT7	

PIOD	USAGE	PIOD	USAGE
PD0 LCD_PCK	PD16 JTAG_TDO		
PD1 LCD_DEN	PD17 JTAG_TMS		
PD2 DBGU_RXD1	PD18 XPRO		
PD3 DBGU_UTXD1	PD19 LCD_XP/EXP		
PD4 LCD_EEP/ISC/EXP_TWDX1	PD20 LCD_XM/EXP		
PD5 LCD_EEP/ISC/EXP_TWCK1	PD21 LCD_YP/PMIC_TWDO/EXP		
PD6 EXP	PD22 LCD_YM/PMIC_TWCK0/EXP		
PD7 XPRO	PD23 EXP		
PD8 XPRO	PD24 EXP		
PD9 XPRO	PD25 EXP/XPRO		
PD10 XPRO	PD26 EXP/XPRO		
PD11 XPRO	PD27 EXP/XPRO		
PD12 EXP/XPRO	PD28 EXP/XPRO		
PD13 EXP/XPRO	PD29 EXP/XPRO		
PD14 JTAG_TCK	PD30 EXP		
PD15 JTAG_TDI	PD31 EXP		

JUMPER DESCRIPTION		
PART	DEFAULT	FUNCTION
JP1	OPEN	Disable EDBG
JP2	OPEN	Disable Debug
JP3	CLOSE	I VDD_3V3_LP Measurement
JP4	CLOSE	I VDDCORE Measurement
JP5	CLOSE	I VDDDISC+VDDIOP0/1/2 Measurement
JP6	CLOSE	I VDDBU Measurement
JP7	CLOSE	I VDDIODDR_MPMeasurement
JP8	CLOSE	I VDD_5V_IN Measurement
JP9	OPEN	Disable CS of SPI&QSPI&eMMC Memory


  

 <b>MICROCHIP</b> SAMA5D2C-XULT PIO Muxing		REV. C	DES. DATE	VER. DATE	SHEET 3 / 15	
					5	Rev.C
		6	REV.D	PPN	22-Sep-16	XXX-XXXXXX
		7	REV.E	XinJQ	22-Sep-15	XXX-XXXXXX
		A	INIT EDIT	XinJQ	21-May-15	XXX-XXXXXX
		8	MODIF.			
		9	REV. MODIF.			
		10	SCALE	1/1		
		11	REV. MODIF.			
		12	SIZE			
		13	REV. MODIF.			
		14	REV. MODIF.			
		15	REV. MODIF.			

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics

**Figure 7-3. Power Supply**

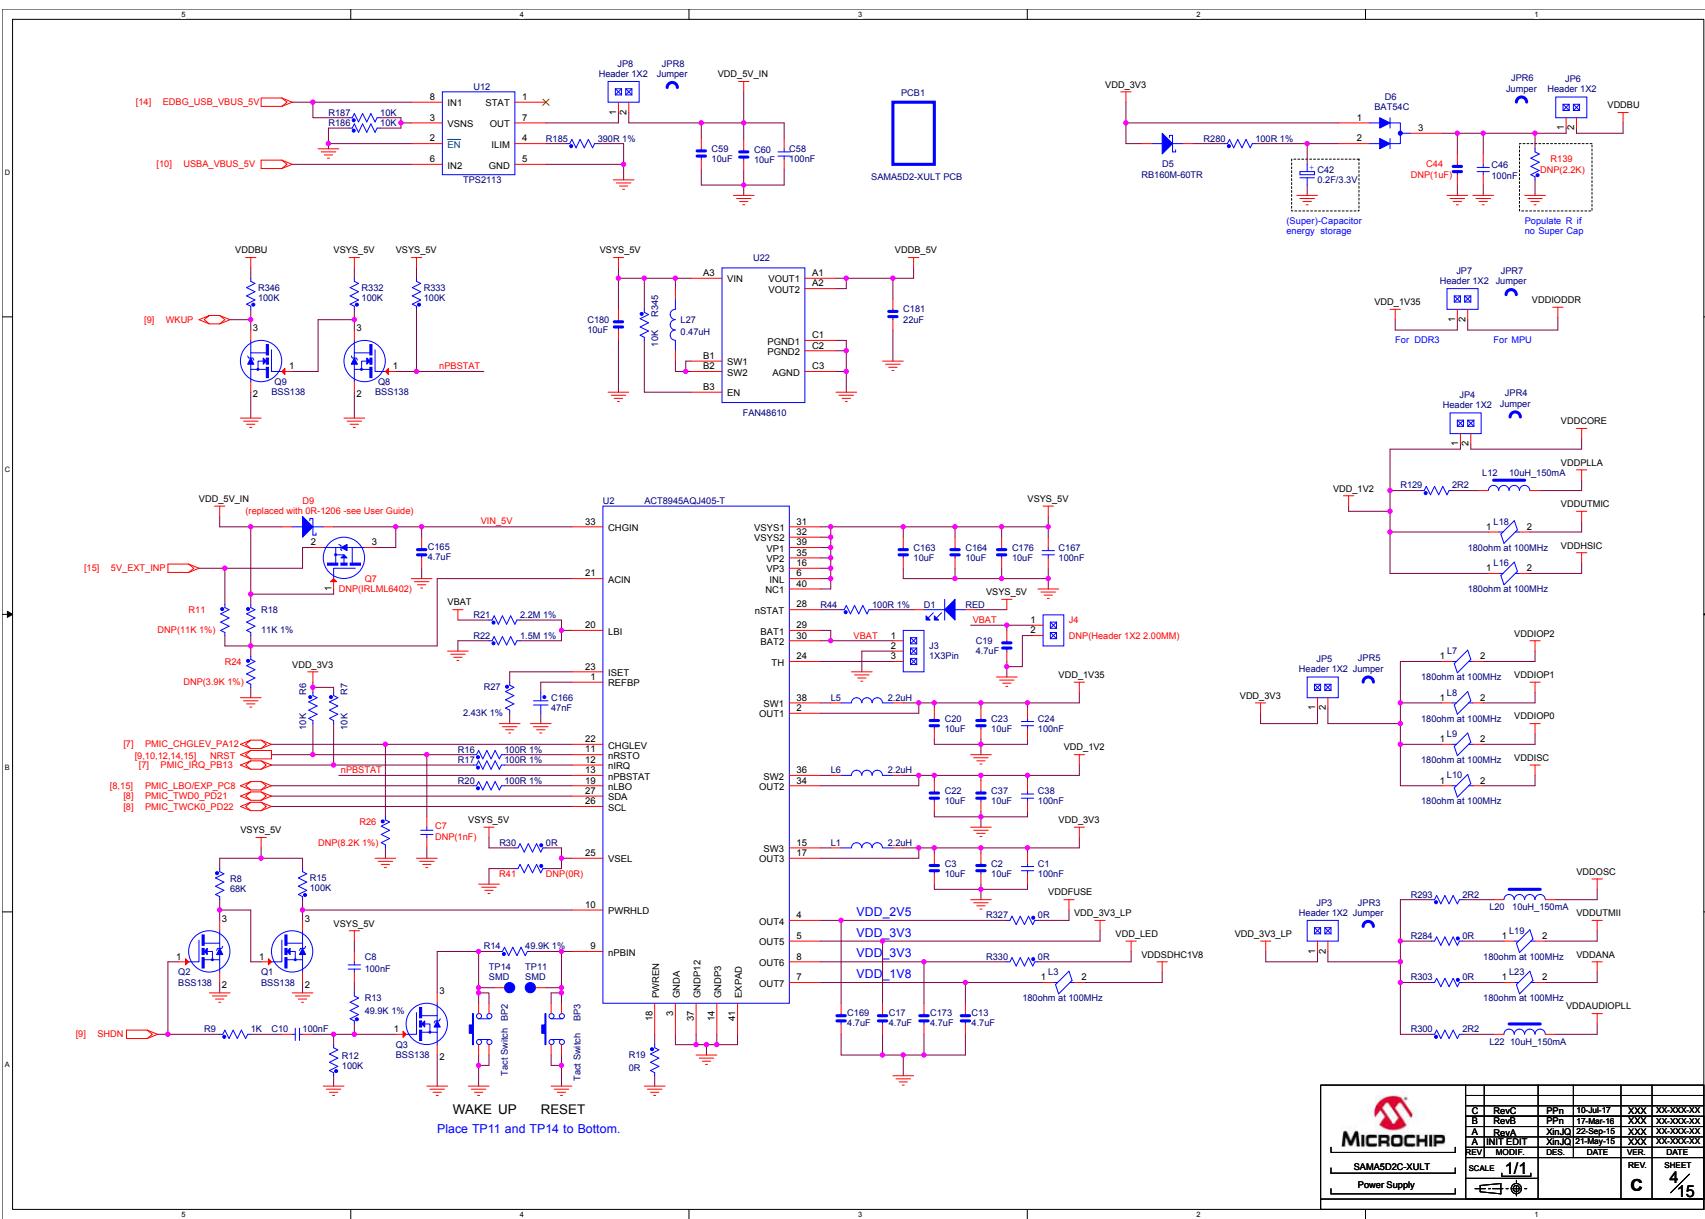

MICROCHIP		REF ID	PPN	REV	DATE
SAMA5D2-XULT	Power Supply	U12	Xin/JQ	22-Sep-15	XXX XXX XXX
SAMA5D2-XULT	Power Supply	U22	Xin/JQ	21-May-15	XXX XXX XXX
SAMA5D2-XULT	Power Supply	U2	Xin/JQ	21-May-15	XXX XXX XXX
SAMA5D2-XULT	Power Supply	ACT8945AQJ405-T	Xin/JQ	21-May-15	XXX XXX XXX



MICROCHIP

SCALE 1/1

DES. DATE


VER. DATE

C 4/15

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics


**Figure 7-4. SAMA5D27 – Power**

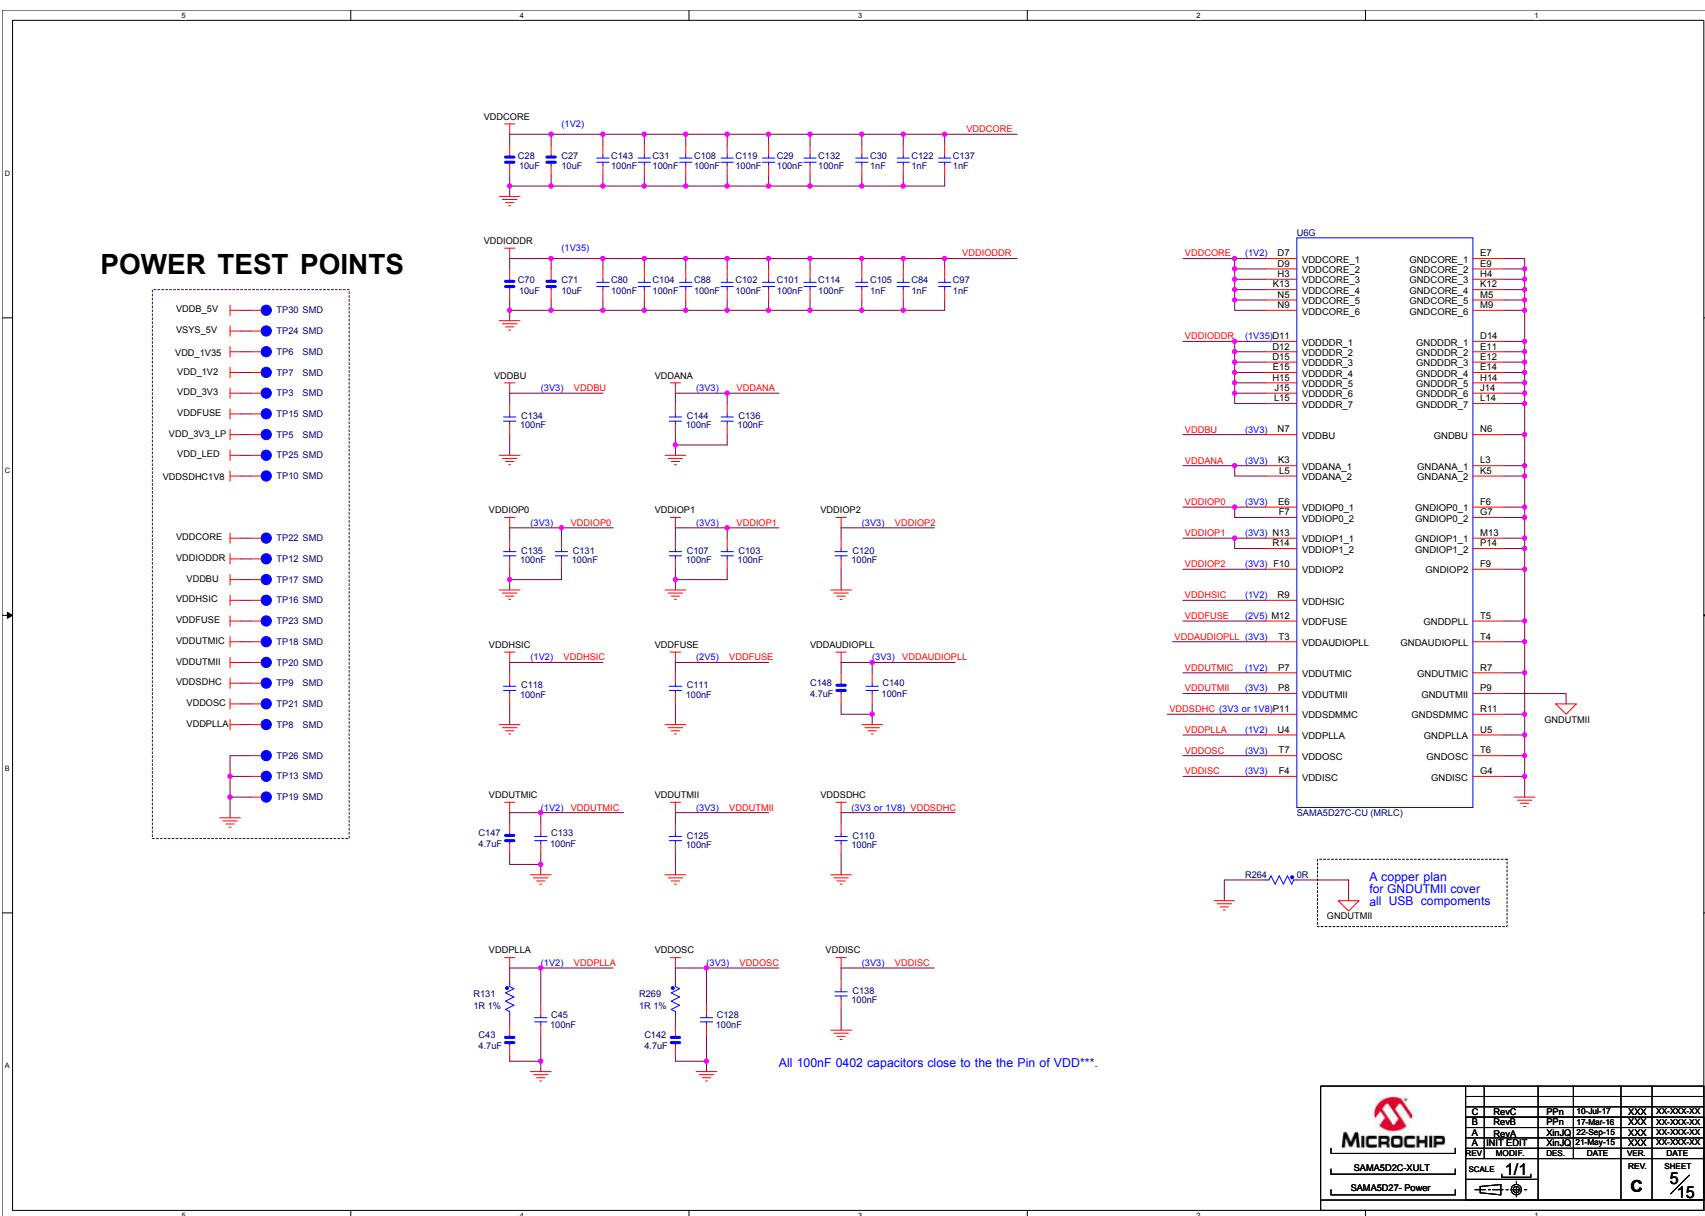

## 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics


**Figure 7-5. SAMA5D27 – DDR3**

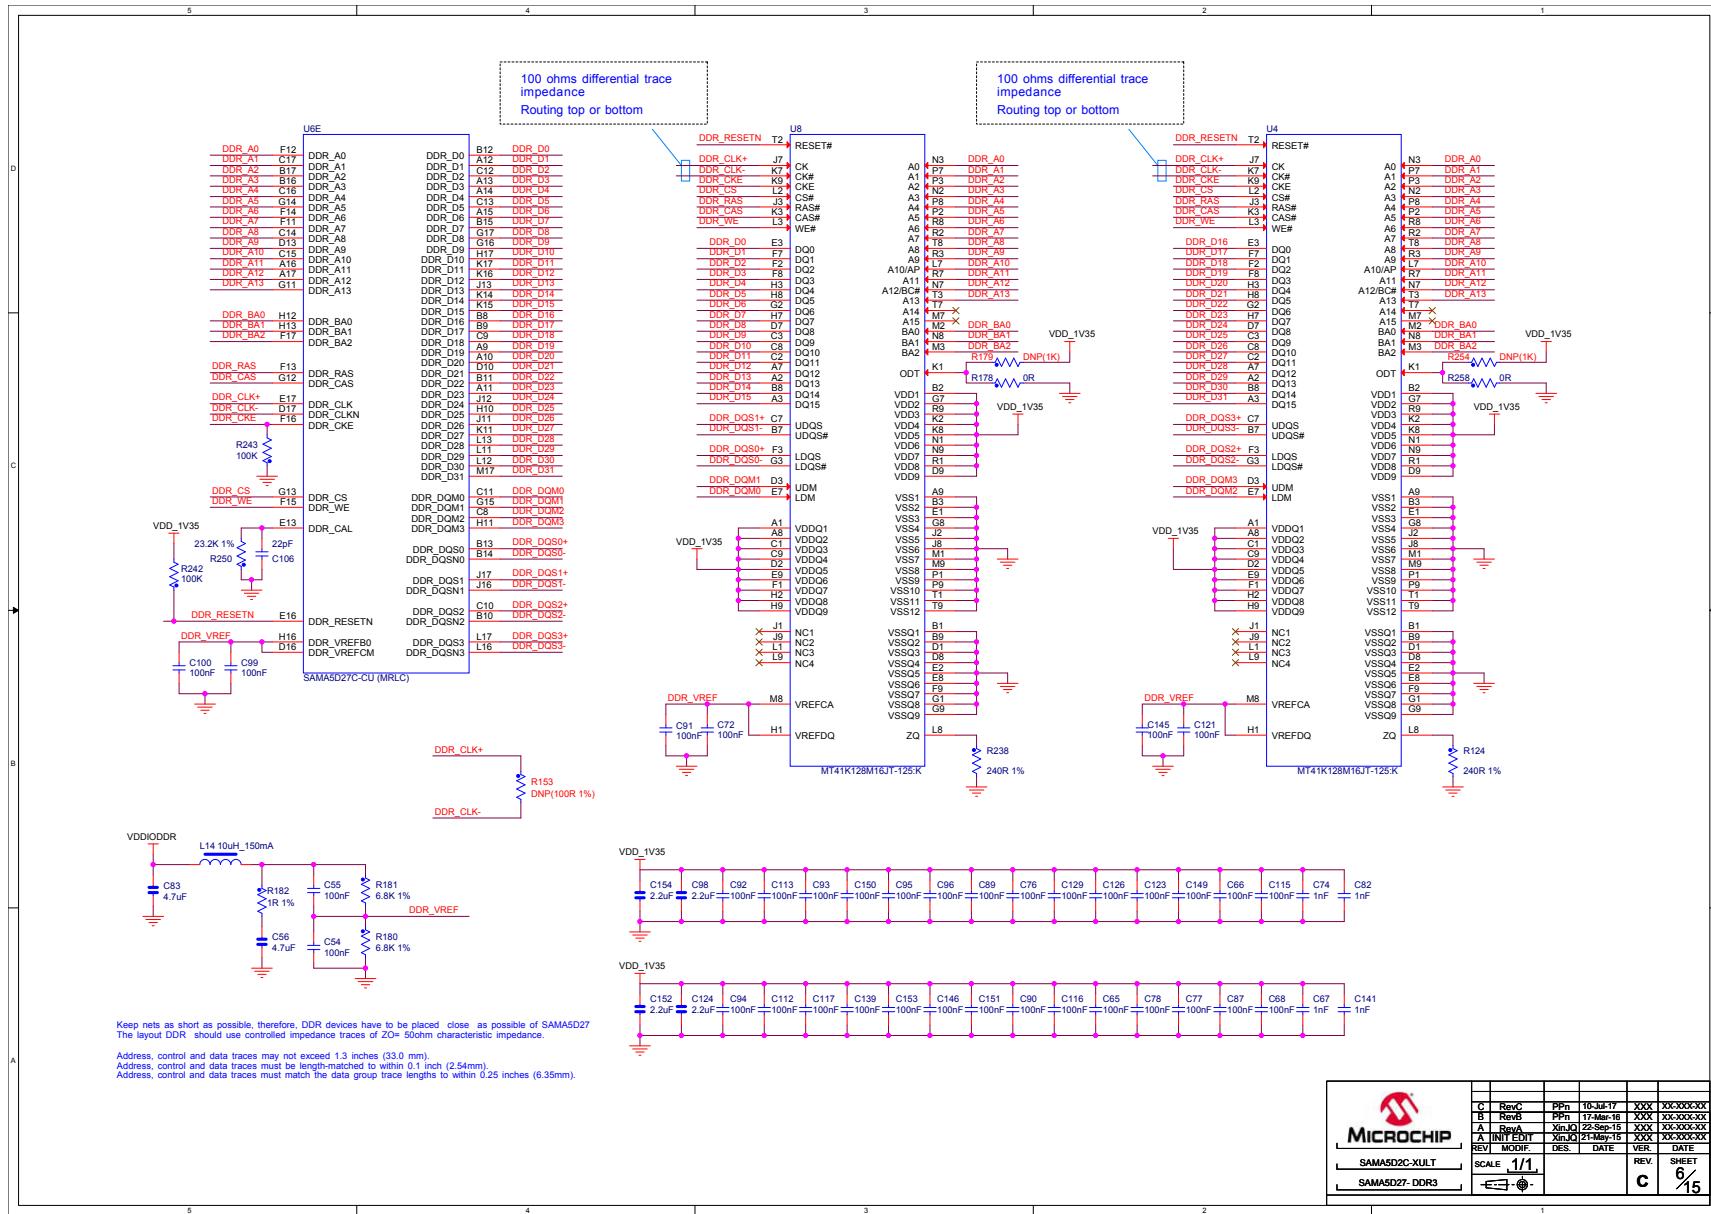

# 32-BIT ARM-BASED MICROPROCESSORS


## Board Schematics

**Figure 7-6. SAMA5D27 – PIOA and PIOB**

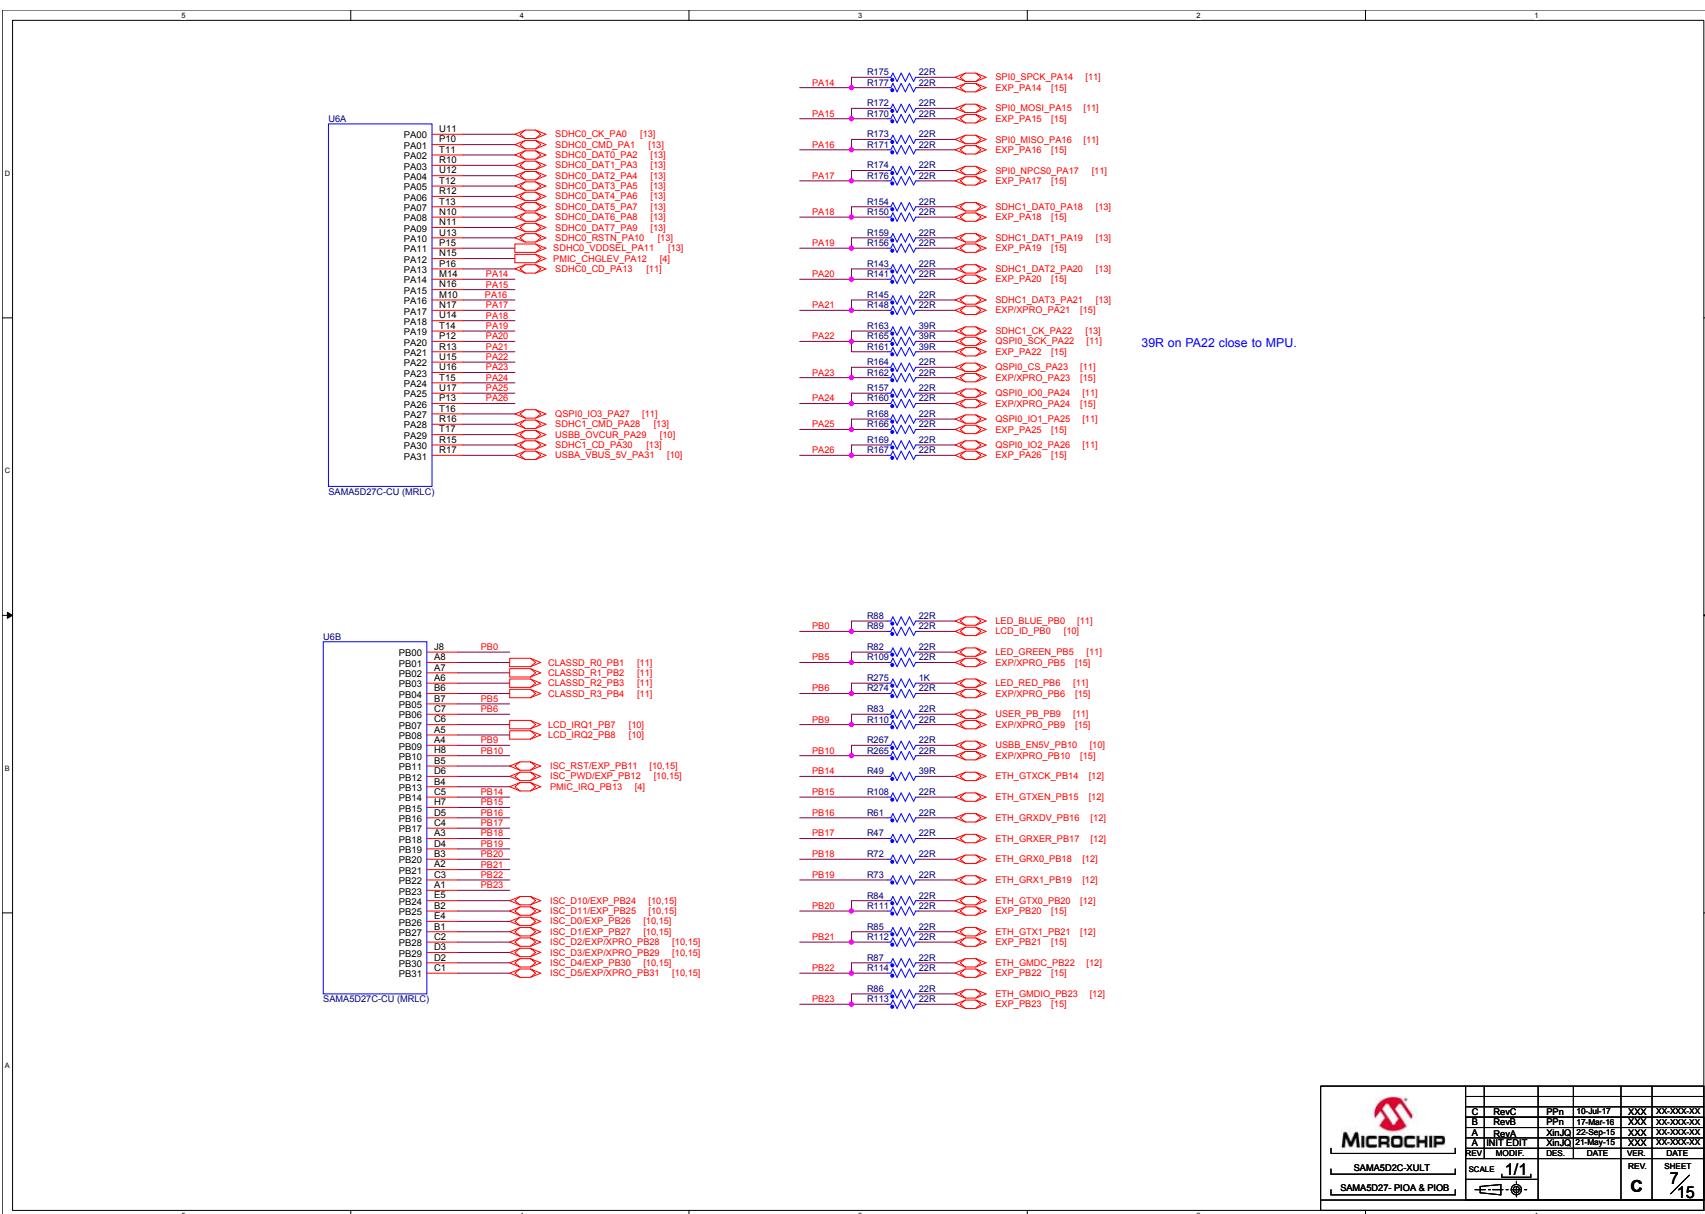

MICROCHIP		REF ID: DS50002691B-PAGE 67	REV. C	DATE 07/2015
SAMA5D2C-XULT	SAMA5D27 - PIOA & PIOB	DES. DATE	VER. DATE	
SCALE 1/1				
REV. MODIF.				
A INIT EDIT	XinJQ	21-May-15	XXX	XXX-XXX-XX
B REV.C	PPN	22-Sep-15	XXX	XXX-XXX-XX
C SYNA	XinJQ	21-May-15	XXX	XXX-XXX-XX


**Figure 7-7. SAMA5D27 – PIOC and PIOD**

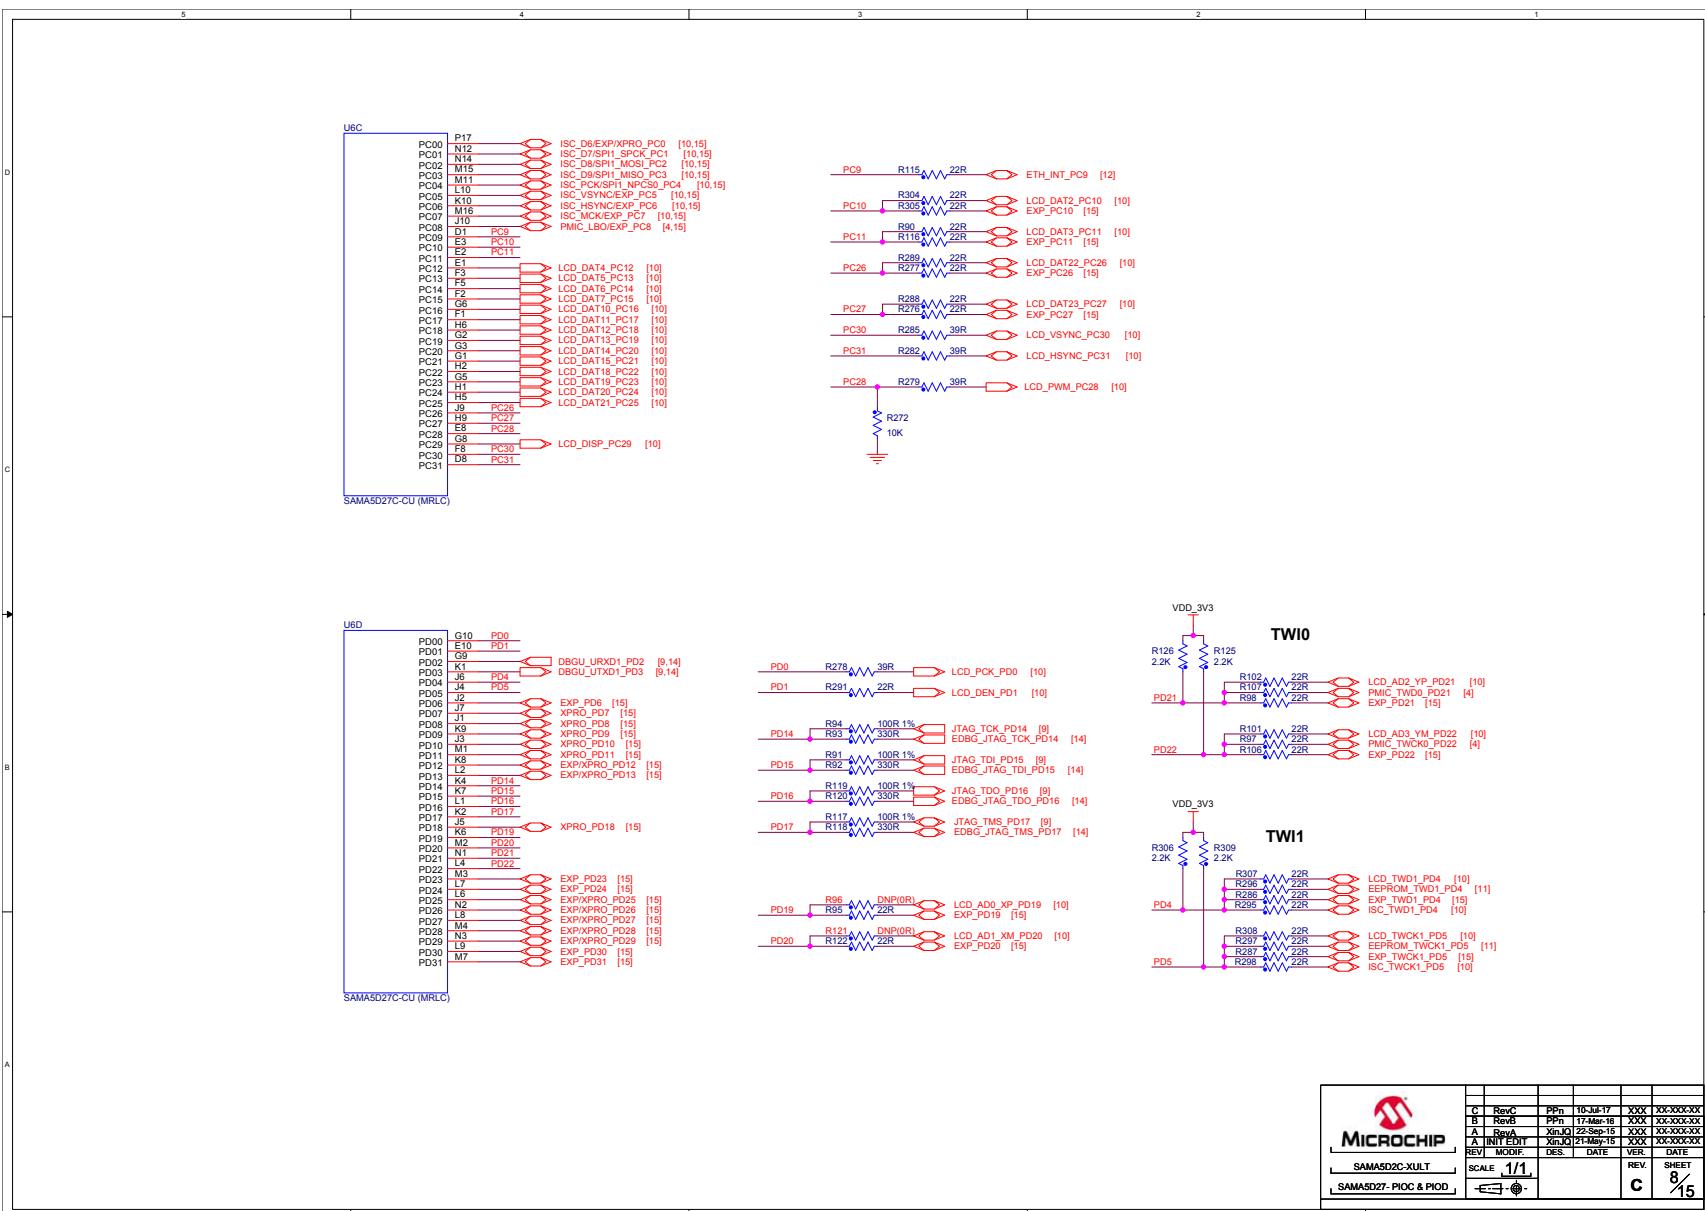

32-BIT ARM-BASED MICROPROCESSORS


## Board Schematics

**Figure 7-8. SAMA5D27 – SYS, Tamper, and Debug**

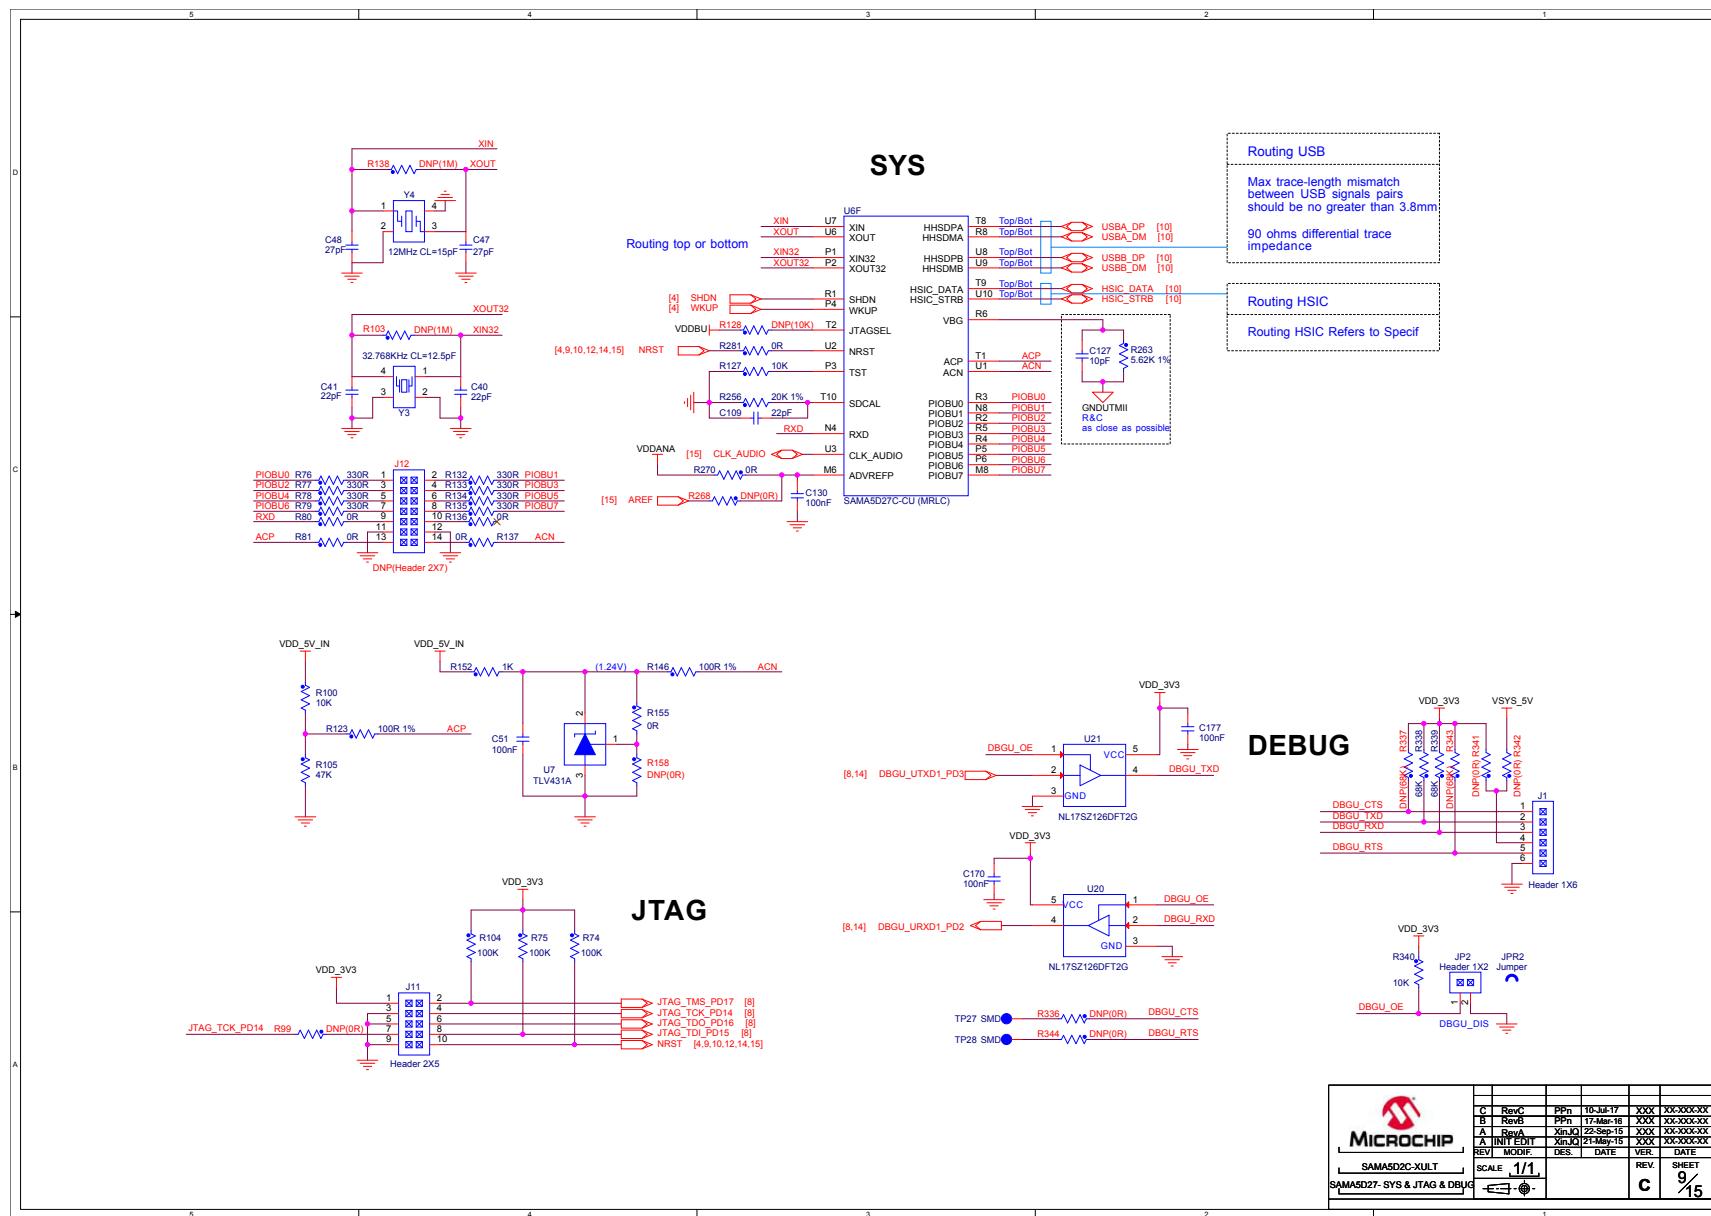


## Board Schematics

**Figure 7-9. USB, ISC, and LCD**

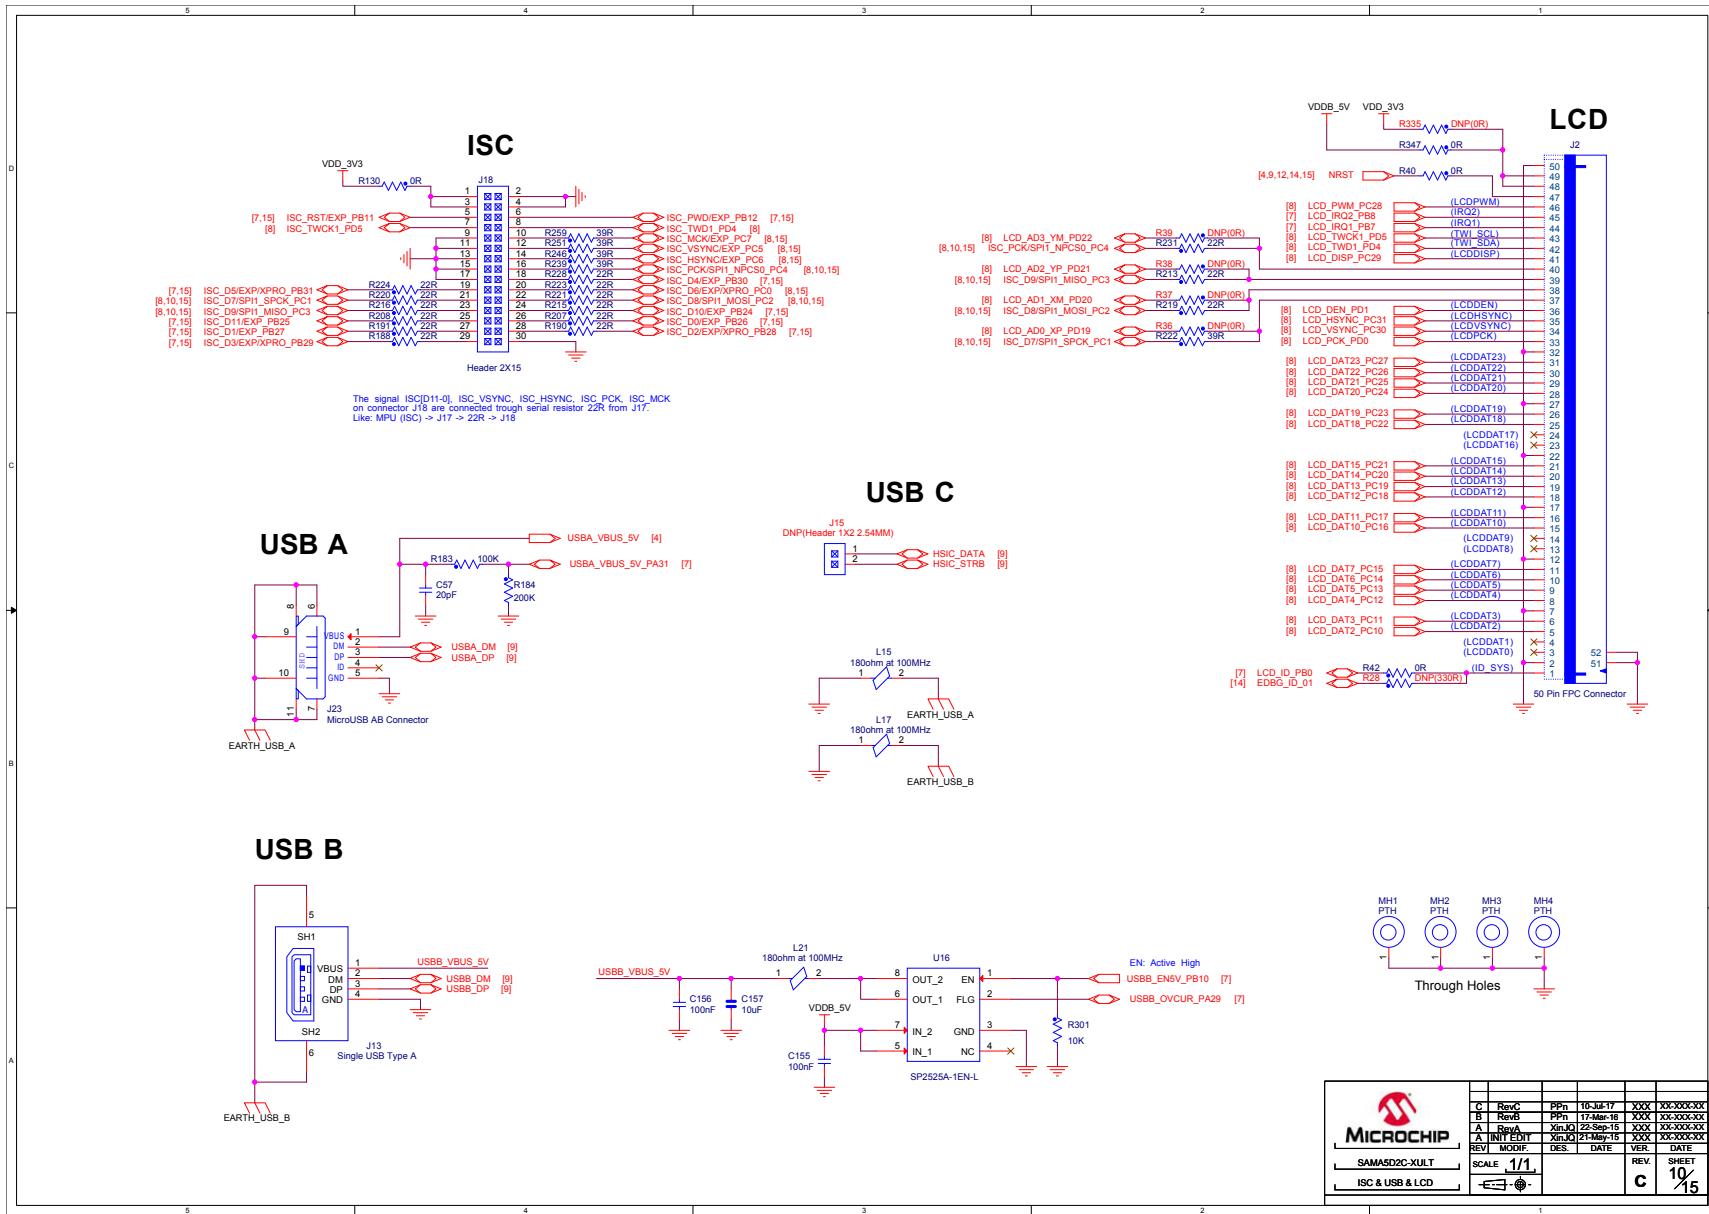


**Figure 7-10. Serial Flash, LEDs, Push Button and ClassD**

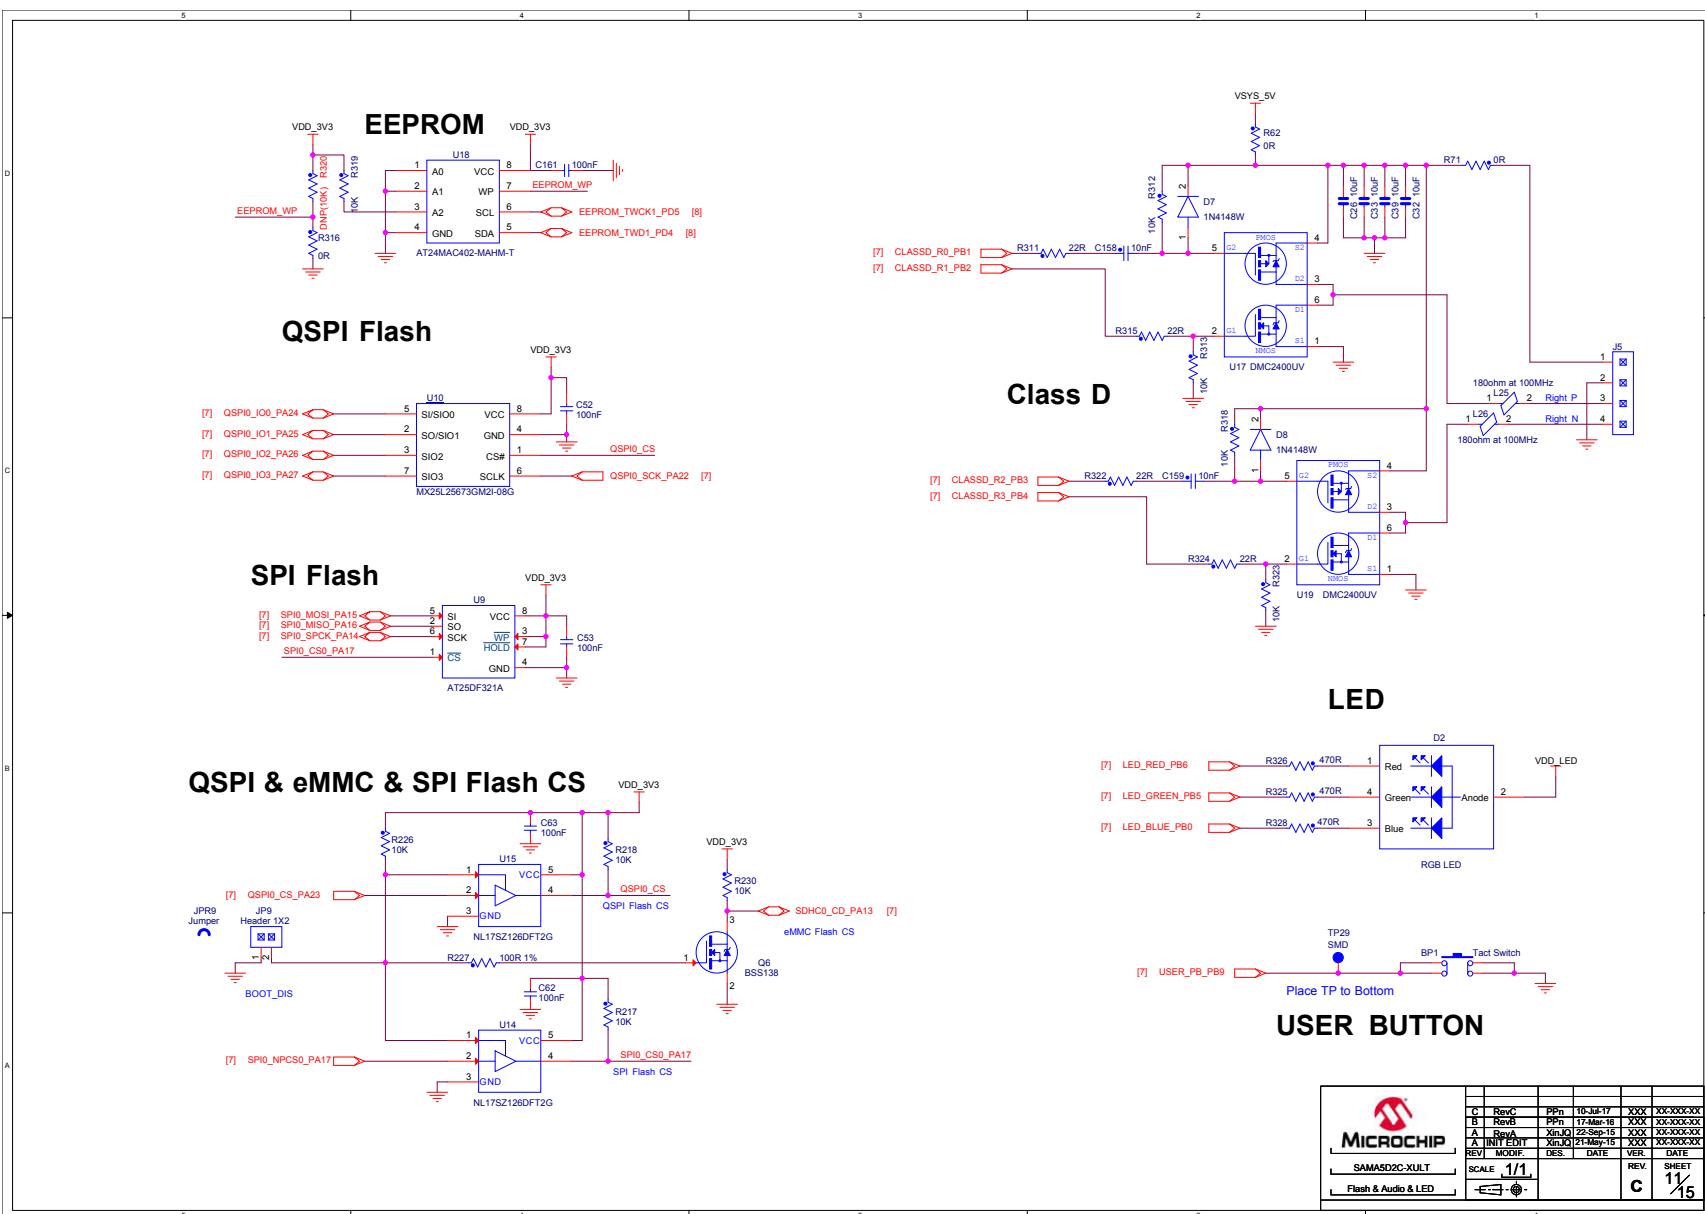

32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics


**Figure 7-11. Ethernet**

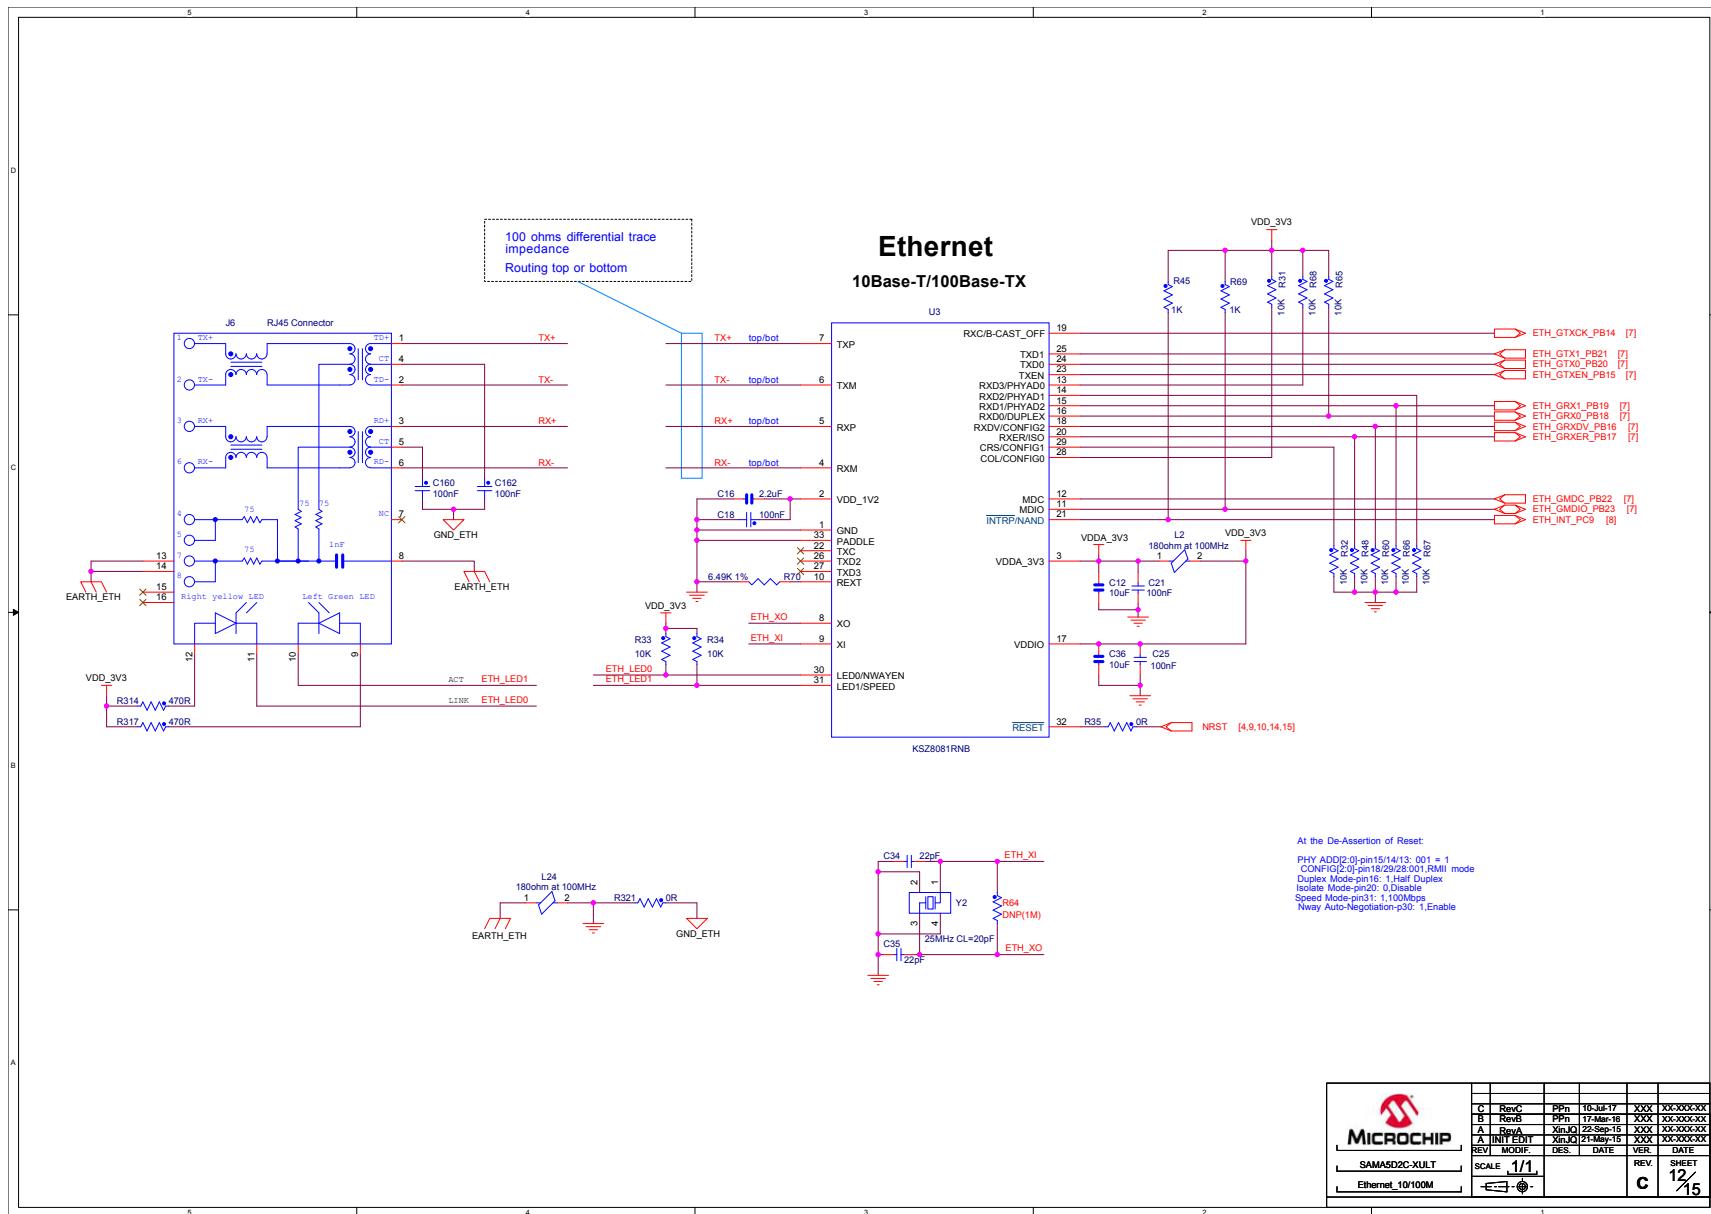

32-BIT ARM-BASED MICROPROCESSORS

Board Schematics


**Figure 7-12. SD and eMMC**

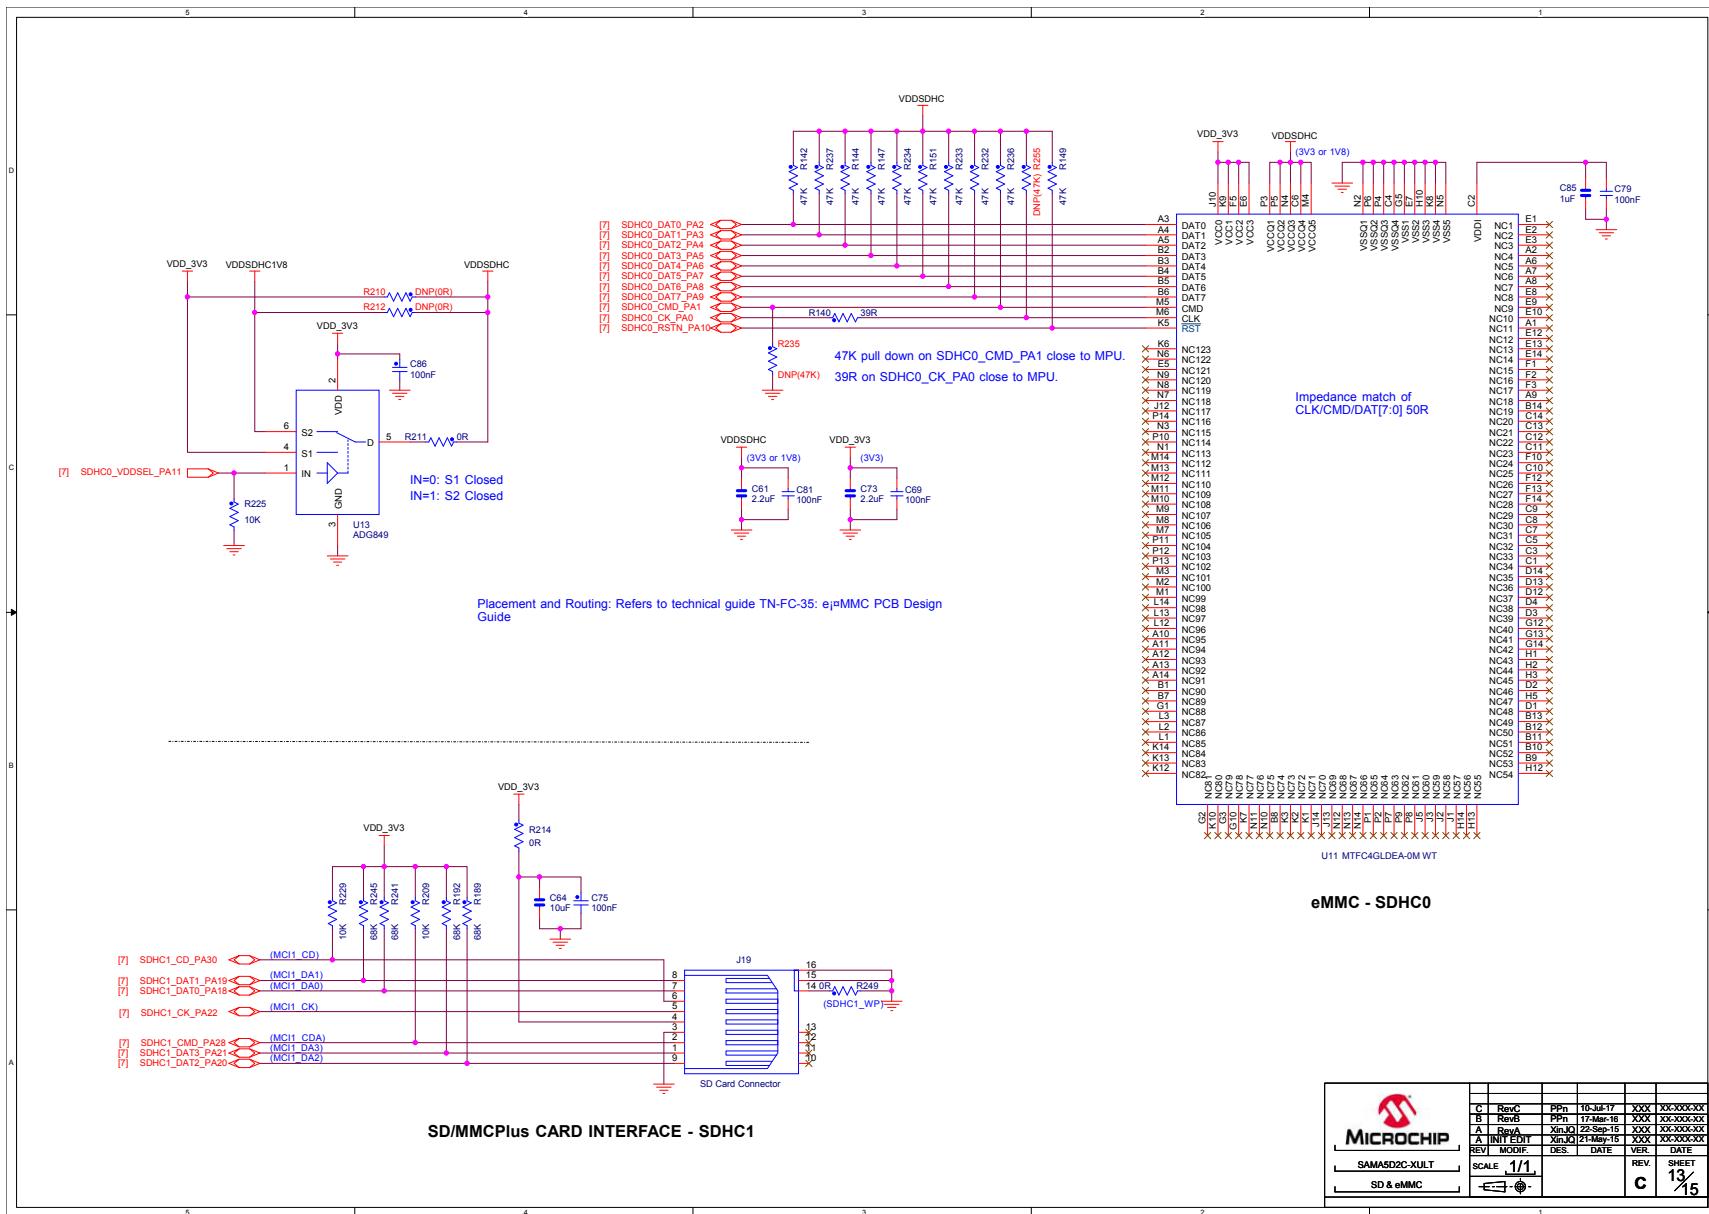

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics


**Figure 7-13. EDBG**

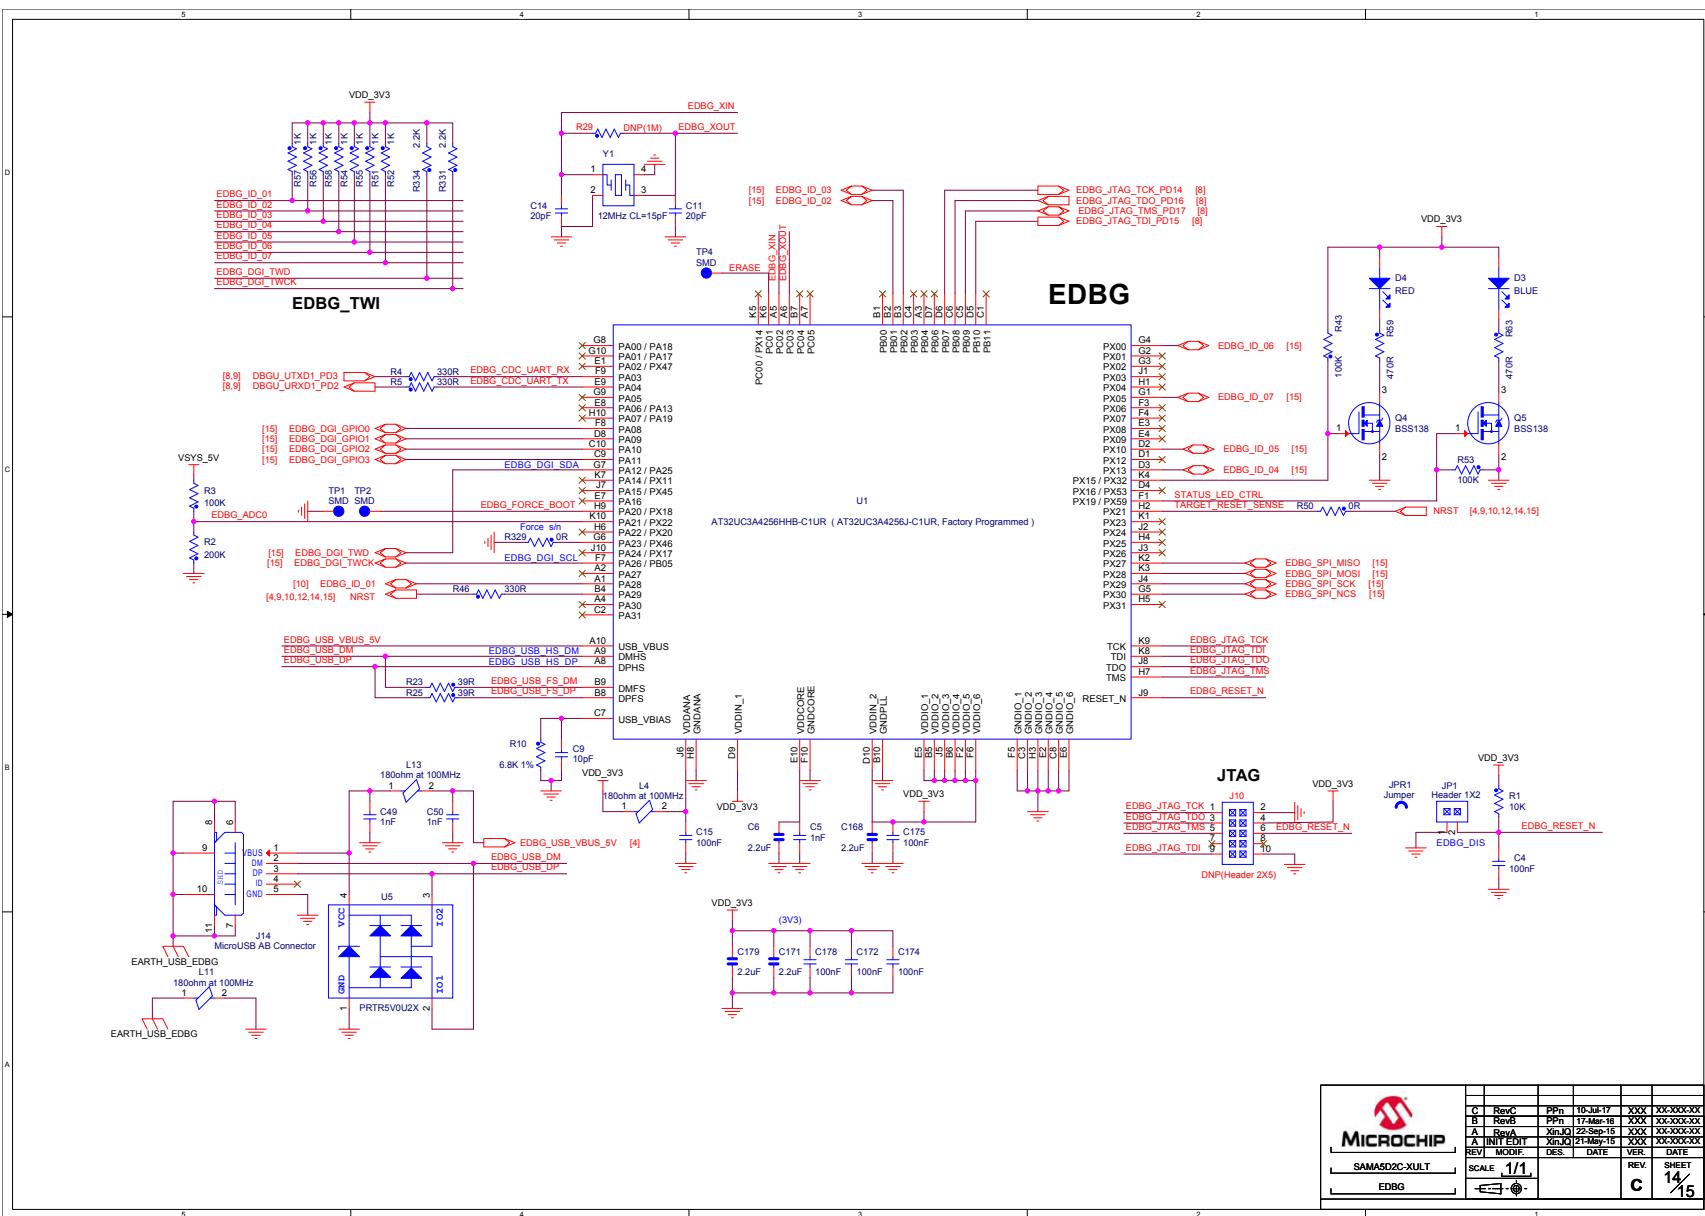

# 32-BIT ARM-BASED MICROPROCESSORS

## Board Schematics

**Figure 7-14. Expansion and XPRO Connectors**

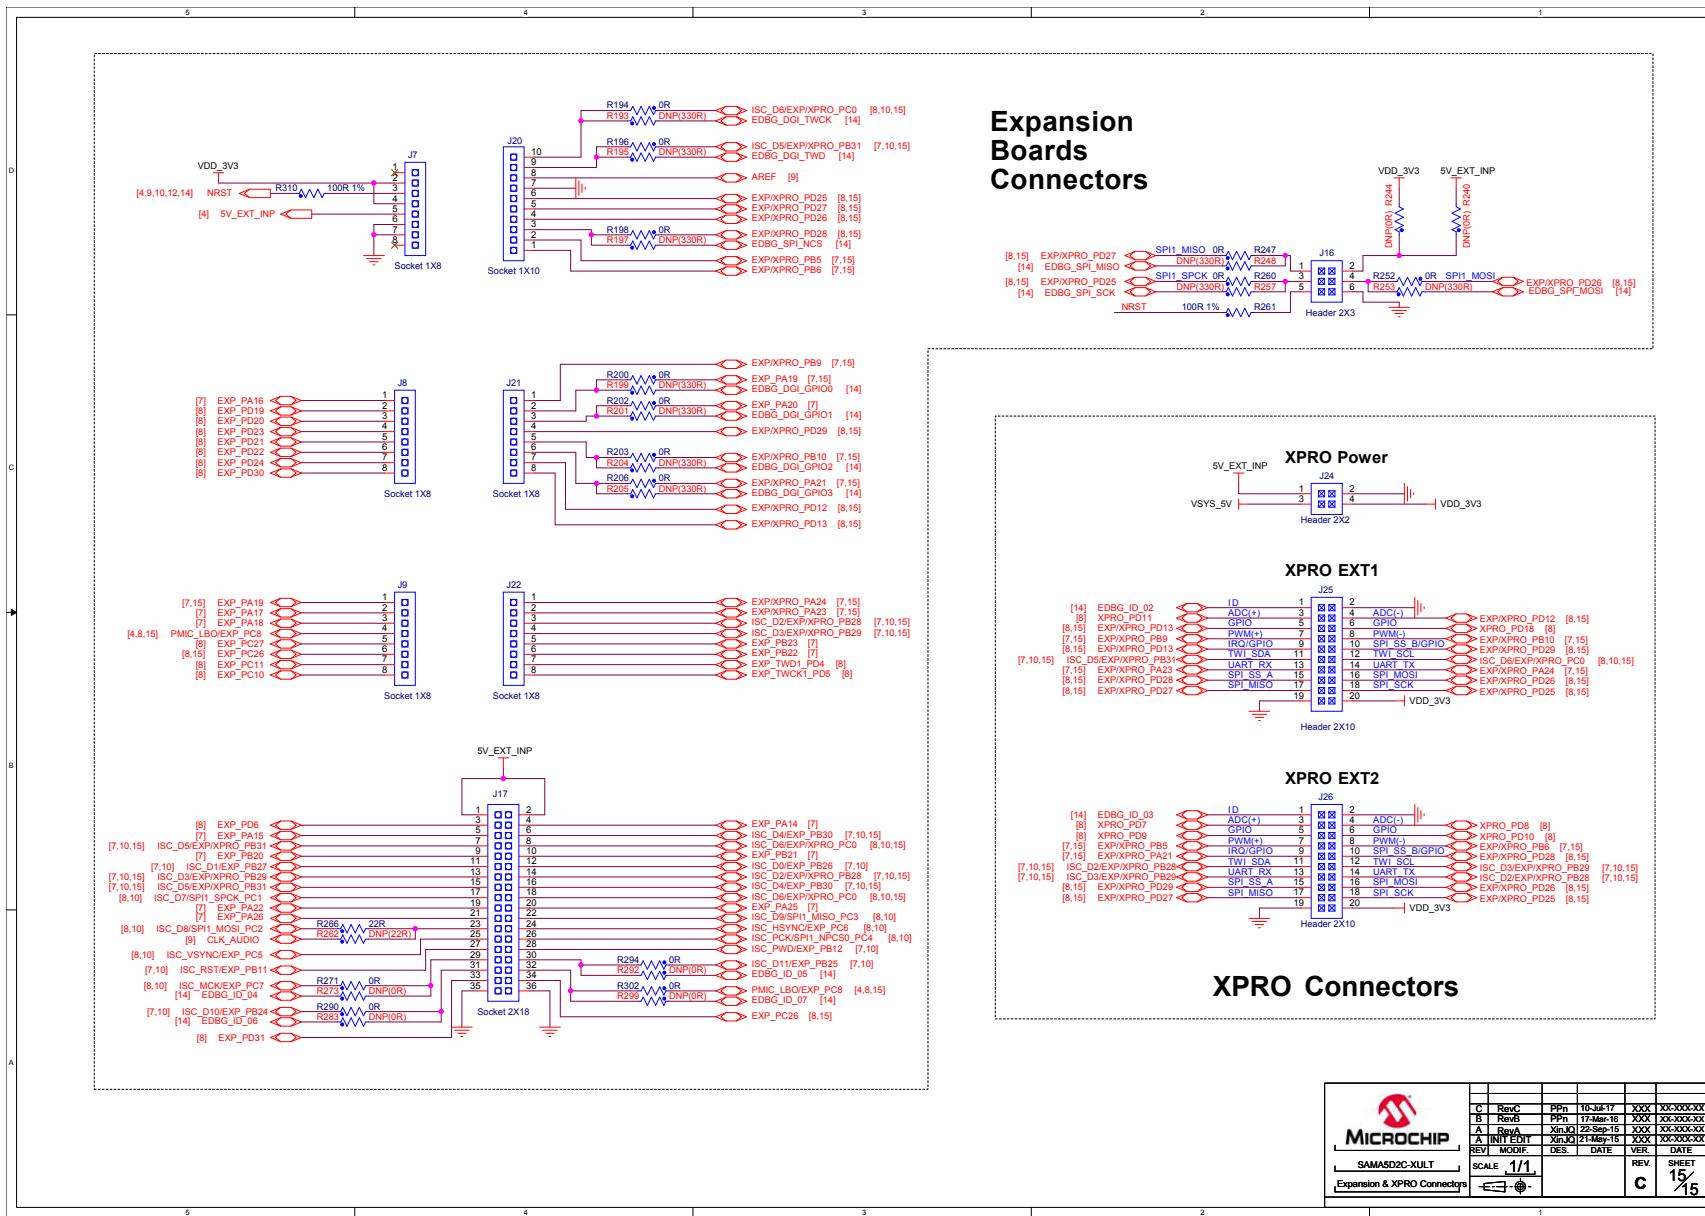

## 8. Errata

### 8.1 NRST

**Issue:** Pullup R6 is connected to VDD\_3V3

**Workaround:** Connect pullup R6 to VDDBU.

### 8.2 nLBO

**Issue:** No pullup on nLBO

**Workaround:** Add pullup 10K to nLBO output.

### 8.3 R63

**Issue:** Incorrect R63 resistance in schematic "EDBG"

**Workaround:** Correct the resistance to 47R.

### 9. Revision History

Table 9-1. SAMA5D2C-XULT, DS50002691B, Dec-2017 Revision History

Changes
Updated <a href="#">Figure 7-6</a> .
Removed Declaration of Conformity.

Table 9-2. SAMA5D2C-XULT, DS50002691A, Oct-2017 Revision History

Changes
First issue.

## The Microchip Web Site

---

Microchip provides online support via our web site at <http://www.microchip.com/>. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

## Customer Change Notification Service

---

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at <http://www.microchip.com/>. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

## Customer Support

---

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://www.microchip.com/support>

## Microchip Devices Code Protection Feature

---

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.

- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

## Legal Notice

---

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. **MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE.**

Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

## Trademarks

---

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KeeLoq, KeeLoq logo, Kleer, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscent Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

# 32-BIT ARM-BASED MICROPROCESSORS

---

© 2017, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-2449-9

## Quality Management System Certified by DNV

---

### ISO/TS 16949

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



**MICROCHIP**

## Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
<b>Corporate Office</b> 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: <a href="http://www.microchip.com/support">http://www.microchip.com/support</a> Web Address: <a href="http://www.microchip.com">www.microchip.com</a> <b>Atlanta</b> Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455 <b>Austin, TX</b> Tel: 512-257-3370 <b>Boston</b> Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088 <b>Chicago</b> Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075 <b>Dallas</b> Addison, TX Tel: 972-818-7423 Fax: 972-818-2924 <b>Detroit</b> Novi, MI Tel: 248-848-4000 <b>Houston, TX</b> Tel: 281-894-5983 <b>Indianapolis</b> Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453 Tel: 317-536-2380 <b>Los Angeles</b> Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608 Tel: 951-273-7800 <b>Raleigh, NC</b> Tel: 919-844-7510 <b>New York, NY</b> Tel: 631-435-6000 <b>San Jose, CA</b> Tel: 408-735-9110 Tel: 408-436-4270 <b>Canada - Toronto</b> Tel: 905-695-1980 Fax: 905-695-2078	<b>Australia - Sydney</b> Tel: 61-2-9868-6733 <b>China - Beijing</b> Tel: 86-10-8569-7000 <b>China - Chengdu</b> Tel: 86-28-8665-5511 <b>China - Chongqing</b> Tel: 86-23-8980-9588 <b>China - Dongguan</b> Tel: 86-769-8702-9880 <b>China - Guangzhou</b> Tel: 86-20-8755-8029 <b>China - Hangzhou</b> Tel: 86-571-8792-8115 <b>China - Hong Kong SAR</b> Tel: 852-2943-5100 <b>China - Nanjing</b> Tel: 86-25-8473-2460 <b>China - Qingdao</b> Tel: 86-532-8502-7355 <b>China - Shanghai</b> Tel: 86-21-3326-8000 <b>China - Shenyang</b> Tel: 86-24-2334-2829 <b>China - Shenzhen</b> Tel: 86-755-8864-2200 <b>China - Suzhou</b> Tel: 86-186-6233-1526 <b>China - Wuhan</b> Tel: 86-27-5980-5300 <b>China - Xian</b> Tel: 86-29-8833-7252 <b>China - Xiamen</b> Tel: 86-592-2388138 <b>China - Zhuhai</b> Tel: 86-756-3210040	<b>India - Bangalore</b> Tel: 91-80-3090-4444 <b>India - New Delhi</b> Tel: 91-11-4160-8631 <b>India - Pune</b> Tel: 91-20-4121-0141 <b>Japan - Osaka</b> Tel: 81-6-6152-7160 <b>Japan - Tokyo</b> Tel: 81-3-6880-3770 <b>Korea - Daegu</b> Tel: 82-53-744-4301 <b>Korea - Seoul</b> Tel: 82-2-554-7200 <b>Malaysia - Kuala Lumpur</b> Tel: 60-3-7651-7906 <b>Malaysia - Penang</b> Tel: 60-4-227-8870 <b>Philippines - Manila</b> Tel: 63-2-634-9065 <b>Singapore</b> Tel: 65-6334-8870 <b>Taiwan - Hsin Chu</b> Tel: 886-3-577-8366 <b>Taiwan - Kaohsiung</b> Tel: 886-7-213-7830 <b>Taiwan - Taipei</b> Tel: 886-2-2508-8600 <b>Thailand - Bangkok</b> Tel: 66-2-694-1351 <b>Vietnam - Ho Chi Minh</b> Tel: 84-28-5448-2100	<b>Austria - Wels</b> Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 <b>Denmark - Copenhagen</b> Tel: 45-4450-2828 Fax: 45-4485-2829 <b>Finland - Espoo</b> Tel: 358-9-4520-820 <b>France - Paris</b> Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 <b>Germany - Garching</b> Tel: 49-8931-9700 <b>Germany - Haan</b> Tel: 49-2129-3766400 <b>Germany - Heilbronn</b> Tel: 49-7131-67-3636 <b>Germany - Karlsruhe</b> Tel: 49-721-625370 <b>Germany - Munich</b> Tel: 49-89-627-144-0 Fax: 49-89-627-144-44 <b>Germany - Rosenheim</b> Tel: 49-8031-354-560 <b>Israel - Ra'anana</b> Tel: 972-9-744-7705 <b>Italy - Milan</b> Tel: 39-0331-742611 Fax: 39-0331-466781 <b>Italy - Padova</b> Tel: 39-049-7625286 <b>Netherlands - Drunen</b> Tel: 31-416-690399 Fax: 31-416-690340 <b>Norway - Trondheim</b> Tel: 47-7289-7561 <b>Poland - Warsaw</b> Tel: 48-22-3325737 <b>Romania - Bucharest</b> Tel: 40-21-407-87-50 <b>Spain - Madrid</b> Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 <b>Sweden - Gothenberg</b> Tel: 46-31-704-60-40 <b>Sweden - Stockholm</b> Tel: 46-8-5090-4654 <b>UK - Wokingham</b> Tel: 44-118-921-5800 Fax: 44-118-921-5820