

Discovery™

AGES
4+

OUTDOOR
RANGE UP
TO **3km**

3
CHANNELS
WITH LED
DISPLAY

Inspired by  **Discovery**
CHANNEL™



HANDY
**BELT
CLIP!**

CALL ALERT
& PRESS
TO TALK
BUTTONS



Trends UK hereby declares that these walkie-talkies are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Operating frequency:
Ch.1 446.00625MHZ Ch.2 446.03125MHZ Ch.3 446.006875MHZ
Power Consumption: 10mW



The purpose of the crossed-out wheeled bin symbol is to remind us that most electrical product and batteries contain trace elements which could be harmful to our environment and therefore our health. We must all be careful to dispose of them responsibly in a specifically designated way – either using a collection scheme or into the correctly labelled civic amenity (NOT into general waste) – this will help your local authority to arrange to recycle or dispose of them in the appropriate manner.

WARNING! CHOKING HAZARD -
Not suitable for children under 3 years of age due to small parts. To be used under the direct supervision of an adult.



Please retain the information on this manual for future reference.

Colour, designs and decorations may vary from those shown in the photographs.

Printed in China.

Trends UK LTD,
Greatworth Hall,
Banbury, OX17 2DH. UK
Email: trends@jgdirect.net


DiscoveryKIDS.com

© 2017 Discovery Communications LLC. Discovery kids and the Discovery Kids logo are trademarks of Discovery Communications, LLC, used under license. All Rights Reserved. discoverykids.com



www.trendsuk.co.uk

Item no. **TDK27**

 **Customer Services:**
+44 (0)1702 208175

Digital Walkie Talkies

Instruction Manual

Components



3 CHANNELS WITH LED DISPLAY

Walkie talkies have been used for many years. They were first widely used by the military and early models were heavy and bulky. Nowadays they are much smaller and lightweight. Their use spread to the police and fire service and now are used by many people for work or just fun!

Battery Installation


Adults please take note!

1. Release the locking clip and slide the belt clip vertically from the back of the walkie talkie body.
2. Remove the battery compartment door.
3. Insert 3 x AAA 1.5V batteries, taking care to ensure the + and - markings on the batteries match the markings in the product.
4. Replace cover and belt clip, ensuring that they are secure.

Always remove all old batteries before replacing with new batteries, and follow instructions above.

Always remove the batteries if the product is not to be used for a long period of time.

Walkie talkies work using radio waves; they are essentially two-way radios. The radios you listen to at home only receive signals, but your walkie talkies receive and send out signals.

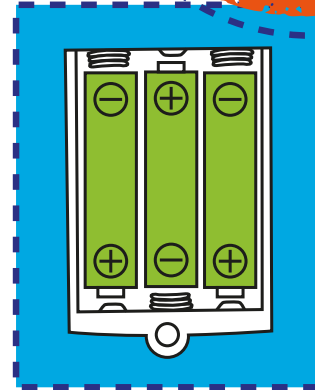

How To Use Your Walkie Talkies

1. To power on, press the ON/OFF button (the walkie talkies will also switch on automatically when the batteries are installed). They will beep and the display will show the current channel number.
2. Press the CALL button once to send a ringing sound (like a phone) to the other walkie talkie. This alerts the recipient that you want to talk.
3. To speak press the TALK button while holding the walkie talkie approximately 4-5cm from your mouth. Do not hold the walkie talkie any closer, or speak loudly, as this will cause distortion and make it difficult for the other person to understand what you are saying. Release the TALK button once you have finished speaking.
4. Press the TORCH button to switch on the LED torch on the top of the walkie talkie. Press it again to turn it off.
5. Press the CHANNEL SELECTOR button for 2-3 seconds to change to another channel. The display will change sequentially from 1 to 2 to 3.

IMPORTANT INFORMATION

- Your walkie talkies should work up to 3km apart. However, please note that they will work best in an open area. Adverse weather conditions and the environment in which they are being used can affect the range.
- Avoid getting your walkie talkies wet, as water and damp can affect or damage the electronics.
- Avoid hitting or dropping your walkie talkies against a hard surface, as this can dislodge electrical components.
- Your walkie talkies have been fully adjusted prior to leaving the factory. Do not touch or attempt to modify/adjust the internal components.
- If the sound becomes weak, try changing the batteries, or check the troubleshooting guide below.
- Remember to turn off by pressing the ON/OFF button for 2-3 seconds (until the display goes blank).
- Keep or store your walkie talkies in a dry, clean place.



Troubleshooting Guide

Problem	Solution
Interference or fading message	<p>Move away from any buildings, large structures, street lights or overhead power lines, as these can cause interference.</p> <p>Make sure the antenna is pointing up.</p> <p>Move closer together; you may be out of range.</p> <p>Make sure walkie talkie is at least 4-5 cm from your mouth.</p>
No message is being received	<p>Make sure both handsets are switched on.</p> <p>Make sure that the batteries are inserted properly and that they aren't low on power; replace if necessary.</p> <p>Check that the person receiving isn't pressing the TALK button.</p> <p>Make sure that the person sending is pressing the TALK button.</p>

IMPORTANT INFORMATION

- Safe Battery Usage

- Only adults should replace batteries.
- Do not mix battery types or old and new batteries.
- Do not use rechargeable batteries.
- Nonrechargeable batteries are not to be recharged.
- Batteries are to be inserted with the correct polarity.
- Do not short-circuit the supply terminals.
- Remove exhausted batteries from the walkie talkies.
- When walkie talkies are not in use, remove batteries to prevent possible leakage.
- Use only recommended or equivalent battery types.
- Do not dispose of batteries in fire: batteries may explode or leak.



Adventures!

These are great walkie talkies for outdoor adventures with friends and family. See how far apart you can be and still hear each other. But first do not forget to tell an adult where you are going! Take them when you go camping, on bike rides or long walks.

Play Games With Your Walkie Talkies

HIDE & SEEK

Each player has a walkie talkie. Take it in turns to hide. The 'seeker' presses the CALL button. By listening to where the sound is coming from (the 'hidiers' walkie talkie), the target should be easily located! You can limit the amount of times the CALL can be pressed to make it a more difficult game.

TREASURE HUNT

Ask an adult to hide something for the 'hunter' to find. It should be in an area where you can both see each other, but at a distance apart where you would normally need to shout to talk. The adult calls out clues using the walkie talkie that guide the 'hunter' to the treasure; 'to the left', 'above your head', 'under the leaves' or 'look behind the tree' etc. Older children can play this without an adult supervising.

PRETEND PLAY

Using just your imagination, it's fun to pretend you are in the jungle or halfway up a mountain! Tell headquarters (HQ) what you are doing and where you are. Where else could you be using your walkie talkie?

SECRET CODES

Make up secret codes so that only the person on the other walkie talkie knows what you are talking about! Have fun by changing names and places with your own code words. For example, Mum could be called 'V' or 'target one', Dad could be called 'W' or 'target two' and a neighbour could be called 'X' or 'target three'. As long as both you and your friend understand the rules it will be easy to talk in code. You can also create substitute versions of everyday words. For example, you could substitute the words 'birthday' with OLD, 'present' with DONKEY, and 'party' with DANCE. So, you might say (in code) 'I am going to take the OLD DONKEY to the DANCE!' If only a few people know the substituted words, it can be a good way to keep your communication secret. Do not forget to write your code words down so you do not forget them!



Code Words
