

FLUKE®

6200
Appliance Tester

Users Manual

PN 2141161

April 2005, Rev.1, 6/05

© 2005 Fluke Corporation, All rights reserved. Printed in UK.

All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is two years and begins on the date of shipment. Parts, product repairs, and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries, or to any product which, in Fluke's opinion, has been misused, altered, neglected, contaminated, or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available only if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that service center, with a description of the difficulty, postage and insurance prepaid (FOB Destination). Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that failure was caused by neglect, misuse, contamination, alteration, accident, or abnormal condition of operation or handling, including overvoltage failures caused by use outside the product's specified rating, or normal wear and tear of mechanical components, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court or other decision-maker of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

Fluke Corporation, P.O. Box 9090, Everett, WA 98206-9090, U.S.A.

Fluke Europe B.V., P.O. Box 1186, 5602 BD Eindhoven, The Netherlands.

Table of Contents

Title	Page
Introduction	1
Contacting Fluke	1
Unpacking the Tester	2
Safety Information	2
Operating Features	4
Front panel description	4
Understanding the Pushbuttons	5
Understanding the Beeper Sounds.....	5
Understanding the Display	6
Powering the Tester	9
Power-up & Warning Display Messages	9
Setting Up the Tester	10
Zeroing the Earth Bond Test.....	10
Testing Appliances	12
Testing Safely.....	12
Test Modes: Single or Continuous.....	12
Single Test Mode.....	12

Continuous Test Mode	13
Aborting a Test.....	13
Saving the Test Results	13
Visual Inspection	13
Bond Test 25 A / 200 mA (R _{PE}).....	14
Insulation Test (R	

Load/Leakage Test: Load Power	31
Load/Leakage Test: Leakage Current (I_{PE})	31
PELV Test.....	32
Test Limits for PASS result.....	32
Influence Factor Errors	32

6200 Appliance Tester Users Manual

Introduction

The Fluke model 6200 Appliance Tester (hereafter referred to as ‘the tester’) is designed to carry out the following tests to ensure the integrity of electrical equipment / portable appliances:

- L N Mains Volts and Mains Wiring test.
- Insulation test (500 V dc).
- Earth Bond test 200 mA and 25 A with test lead zero facility.
- Substitute Leakage Current test.
- Touch Current test.
- IEC Lead test.
- Leakage test.
- Appliance Power and Load Current test.
- PELV test

Contacting Fluke

To contact Fluke for product information, operating assistance, service, or to get the location of the nearest Fluke distributor or Service Centre, call:

- +31-402-678-200 in Europe

Visit Fluke’s web site at: www.fluke.com

Register your Tester at: register.fluke.com

Unpacking the Tester

The tester comes with the items listed in Table 1. If the tester is damaged or an item is missing, contact the place of purchase immediately.






Table 1. Shipment Box Contents

6200 Appliance Tester
Crocodile Clip
Test Lead
Touch Current Probe
Hard Case
Users Manual (this manual)

Safety Information

The tester must only be used by a suitably trained and competent person.

Carefully read the following safety information before using the tester.

Definitions of symbols used	
	Caution! Risk of Danger. Refer to Manual.
	Caution! Risk of Electric Shock.
	Conforms to Relevant European Standard.
	Double Insulated (Class II) Equipment.
	Earth Ground.

  **Warnings: Read Before Using**

To avoid possible electric shock or personal injury, follow these guidelines:

- If the tester does not power up immediately after connecting it to the mains outlet disconnect and verify that the mains outlet is correctly wired.
- Use the tester only as specified in this manual, or the protection provided by the tester might be impaired.
- The tester shall not be used for measurements in electrical installations.
- When conducting tests do not touch the appliance as some tests involve high voltages and high currents.
- Do not use the tester around explosive gas, vapour or dust, or in wet environments.
- Inspect the tester before using it. Do not use the tester if abnormal conditions of any sort are noted (such as a faulty display, broken case, etc.).
- Use only test leads and probes supplied with the tester, or indicated by Fluke as suitable for the tester.
- Inspect the test leads for damaged insulation or exposed metal. Check test lead continuity. Replace damaged leads before using the tester.
- When testing, always be sure to keep your fingers behind the safety barriers on the test leads.
- Never open the tester's case because dangerous voltages are present. There are no user replaceable parts in the tester.
- Have the tester serviced only by qualified personnel.
- The tester must be properly earthed. Only use a supply socket that has a protective earth contact. If there is any doubt as to the effectiveness of the supply socket earth, do not connect the tester. Do not use a two-conductor adapter or extension cord; this will break the protective ground connection.
- The tester has been set for a nominal 230 V ac – 50 Hz operation, it must never be connected to a higher voltage.
- The tester may only be connected to a correctly wired mains socket protected for a maximum current rating of 13 A.
- The mains supply is never to be connected to the IEC lead test connector.
- When carrying out Earth Bond tests, regularly zero the earth bond test lead.
- Under certain test conditions the test socket may have mains potential with a maximum current of 13 A.
- If the tester continuously emits a two tone sound, you should unplug it immediately as this indicates a dangerous condition.

Operating Features

Front panel description

The connectors, controls and indicators of the tester are shown and listed below.













Figure 1. Fluke 6200

No.	Description
1	Liquid Crystal Display (LCD).
2	Earthed bar to zero the Earth Bond test lead.
3	Socket to connect IEC lead for IEC Lead test .
4	Serial RS-232 Port to connect the Fluke printer.
5	Socket to connect test lead and crocodile clip for Earth Bond test.
6	Socket to connect test probe for Insulation test, Touch Current test, Substitute Leakage test and PELV test.
7	Socket to connect the appliance to be tested.

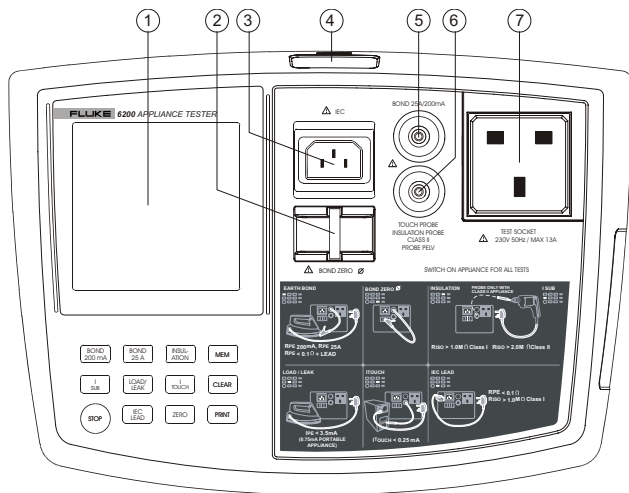Understanding the Pushbuttons

Use the pushbuttons to control operation of the tester.

Button	Function
	Stop the current action and return to Idle screen.
	Start the Insulation test.
	Start the 200 mA Earth Bond test.
	Start the 25 A Earth Bond test.
	Start zeroing the Earth Bond test.
	Start the Substitute Leakage Current test.
	Start the Touch Current test.
	Start the combined Load/Earth Leakage Current test.
	MEM Store test results.

Understanding the Display

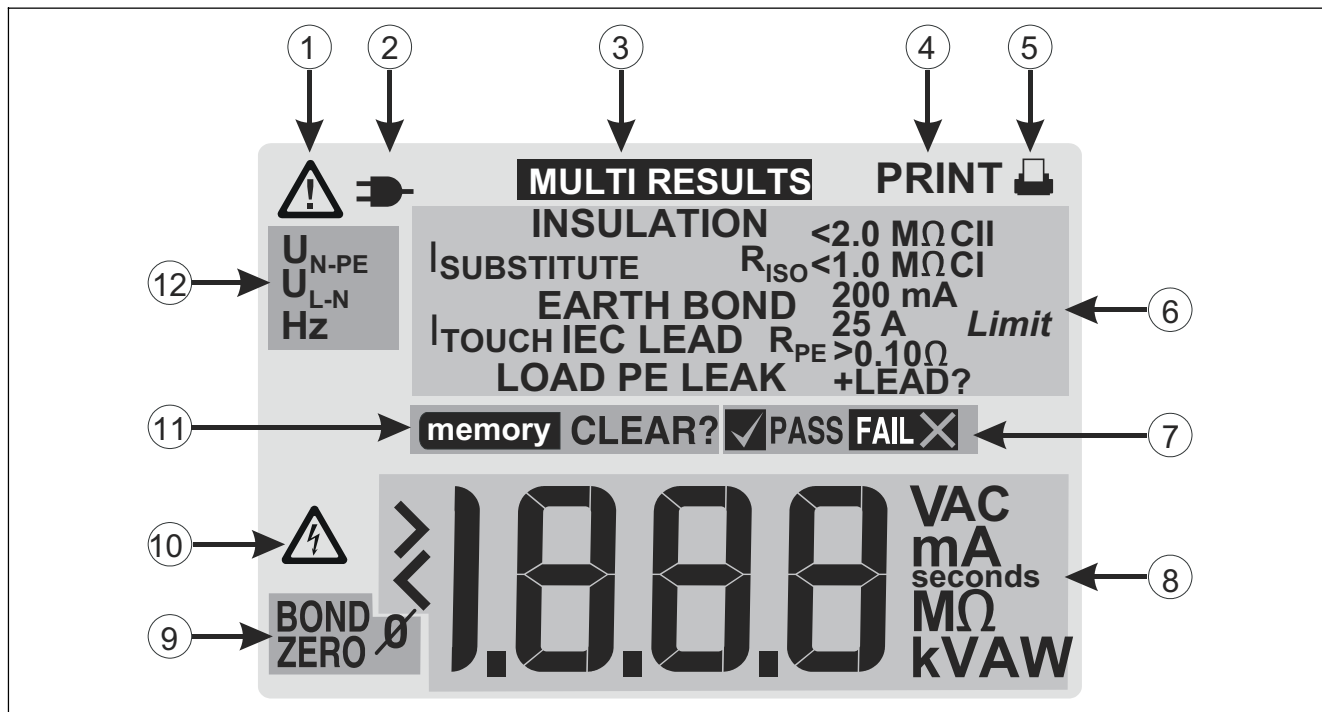









Figure 2. Display Features

No	Annunciator	Meaning
1		Caution! Risk of Danger. Refer to Manual.
2		Please check the mains polarity or the IEC-Lead polarity.
3	MULTI RESULTS	Multiple test results will be displayed in succession.
4	PRINT	Printing results.
5		SP1000 printer is connected.
6	INSULATION $R_{ISO} < 2.0 \text{ M}\Omega \text{ CII}$ $< 1.0 \text{ M}\Omega \text{ CI}$	Insulation test. Lights up if the recommended insulation resistance (R_{ISO}) limit is exceeded (Class II $< 2.0 \text{ M}\Omega$, Class I $< 1.0 \text{ M}\Omega$).
	I _{SUBSTITUTE}	Substitute leakage test.
	EARTH BOND 200 mA 25 A $R_{PE} > 0.10\Omega$ +LEAD?	Earth Bond test 200 mA or 25 A. Lights up if the recommended protective earth conductor resistance (R_{PE}) limit is exceeded. Notice that a long connection lead can add extra resistance.
	I _{TOUCH}	Touch current test
	IEC LEAD	IEC lead test.
	LOAD PE LEAK	Load/Leakage Current test
	<i>Limit</i>	The test result should be checked against the limit allowed for the appliance.

No	Annunciator	Meaning
7		IEC lead fuse/L-N pass or fail.
8		Readings and measurement units field, error message field. > result overflow < or underflow
9	BOND ZERO 	Bond test zero function. Ø lights up if the bond test has been zeroed.
10		Caution! Risk of Electric Shock.
11	memory CLEAR?	Appears when storing results. Appears when clearing results.
12	U_{N-PE} U_{L-N} Hz	Neutral-Protective Earth voltage too high. Mains voltage out of limits. Mains frequency out of limits.

Powering the Tester

The tester will power up when you connect it to the mains supply.

Disconnect the mains plug to power the tester down.



Warning

Read the safety information on page 2 before powering the tester.




Power-up & Warning Display Messages





At power up the tester performs a selftest and shows the software version.

If all is well the display will indicate the mains supply voltage, this screen is referred to as the IDLE screen.

If the tester detects special conditions at power up, for example a dangerous condition, a warning message will indicate the nature of the condition.

The adjacent table shows the messages that can be shown when you power up the tester. The values are examples and can differ from the displayed values.

DISPLAY	EXPLANATION
5t	Selftest.
1.00	Software version, shown after power on.
230 VAC	Mains supply voltage, IDLE screen.
$U_{N-PE} > 50 \text{ VAC}$	Mains problem, unplug unit! No testing possible.
$U_{L-N} < 195 \text{ VAC}$	Mains voltage too low. No testing possible.
$U_{L-N} > 253 \text{ VAC}$	Mains voltage too high. No testing possible.
$< 48 \text{ Hz}$	Mains frequency too low. No testing possible.
$> 52 \text{ Hz}$	Mains frequency too high. No testing possible.
 memory >	Memory full.
 memory > 75	Memory nearly full (>75%).
 + number	Tester failure, contact Fluke.


DISPLAY	
 + number	Danger test
 U _{N-PE}	
 	

Up the Tester

Requirement to set up the tester, is to zero the test.

Zero Earth Bond Test

For earth bond test results you must zero the test lead to eliminate its resistance:

When setting up your new tester. Earth bond tests are not accurate unless the bond zero icon  is on. Additionally, dependent on the condition of the bond test lead, if the test lead plug a dirty plug/socket can cause a significant contact resistance.

When using the test lead, do the following:

Attach the crocodile clip to the test lead and insert the test lead plug into the BOND 25A/200mA socket, see Figure 3.

Firmly attach the crocodile clip to the BOND ZERO bar on the tester.

Press zero. The display shows the test progress, see the table on

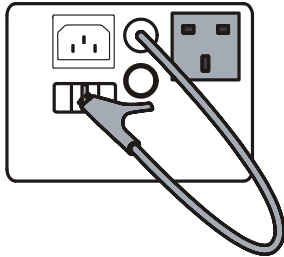


Figure 3. Bond Zero Connections

The tester saves the zero value so you will not need to repeat the operation every time you use the tester.

If the Earth Bond test has been zeroed, the idle screen and subsequent earth bond test results will be marked with Ø, for example:

Ø 0.09 Ω

DISPLAY	EXPLANATION
BOND ZERO	The earth bond test lead zeroing function has been selected.
3 seconds	The test time is counted down
0.09 Ω	Zeroing completed, the tester shows the resistance value of the test lead (zero value). It will subtract this value from the bond test results.
> 1.99 Ω	The lead resistance is higher than 1.99 Ω , it cannot be compensated for. The zero value is set to the factory default of 0 Ω now. Earth Bond test will be locked out.

Testing Appliances

Testing Safely



Warnings

- Before commencing any testing you are strongly advised to make reference to the Electricity at Work Regulations 1989 and any relevant publications from the Health and Safety Executive.
- The appliance must be switched on for all tests.
- When conducting tests do not touch the appliance as some tests involve high voltages and high currents.
- The tests should only be performed by competent persons who are familiar with the requirements of the type of tests suitable for portable appliances.
- It is potentially hazardous for both user and appliance should the wrong type of tests be undertaken or if testing is carried out in an incorrect sequence.
- It is important that you fully understand the various tests required and how they should be performed.
- The appliance must have passed the visual inspection, the earth bond test (Class I), and the insulation test (in this sequence) prior to any other test. If any of these tests fail further testing must be stopped and any faults must be rectified.
- During the load/leakage test and the touch current test, the appliance will be energized at mains voltage. For this purpose, switch on the appliance. Appliances driven by motors or equipped with heating units may present a danger for the person testing (comply with appliance instruction manual!). Ensure that the appliance is in a safe condition to run. Please secure it prior to the test.

Test Modes: Single or Continuous

You can run tests in a single test mode or in a continuous test mode.

Single Test Mode

To run a single **non-live** test press the test button and then release it.

To run a single **live** test (load/leakage and touch current) hold down the test button and release it after the second beep, before you hear a third long beep.

The tester connects the test supply, performs one test, disconnects the test supply and holds the result on the display.

Continuous Test Mode

To start a continuous **non-live** test hold down the test button for at least 2 seconds. You will hear a long beep indicating the tester is in the continuous mode.

To start a continuous **live** test (load/leakage and touch current) hold down the test button until you hear two beeps followed by a third beep.


The tester connects the test supply, makes the first test and displays the first result. Then the tester continues measuring and displaying results without disconnecting the test supply. The maximum run time is 8 minutes. After this time the test stops.

To stop a continuous test run, press the test button again. The tester disconnects the test supply and holds the last test result on the display.

Note


The IEC-Lead test cannot be run in the continuous test mode.


Aborting a Test

Pressing  immediately aborts whatever test is in progress, makes the tester safe and then shows the IDLE screen. Test results will not be displayed.

Saving the Test Results

To save the result after completing a test, do the following:

- 1  Press MEM. The actual test result is saved into memory. The display shows the number that has been assigned to the record, for example:

 5

For detailed information refer to Using the Memory on page 25.

Visual Inspection

Before performing any test check the appliance for the following:

- condition of the appliance cables, i.e. no cuts, cracks or any physical damage to the outer insulation layer.
- condition of the plug, cable securely attached, no signs of overheating and that the correct value of fuse is fitted.
- any signs of damage, and that any mains or control switches will physically switch on and off.
- any sockets for signs of overheating or physical damage.


Bond Test 25 A / 200 mA (R_{PE})

The test checks the resistance between the earth pin of the appliance cable plug and the exposed metalwork on the appliance. The test applies to Class I appliances.

Remarks:


- To enable the bond test and to obtain correct bond test results you must have zeroed the test lead, see page 10.
- Continuous 25 A bond test will periodically drop back to 200 mA test to prevent the tester from being overheated.
- You should use the 200 mA test current for certain appliances. Please refer to the appliance test standards and guidance material.

To perform the Earth Bond test, do the following:

- 1  Connect the appliance and the earth bond test lead as indicated on the tester, see also Figure 4.


Connect the crocodile clip to an exposed conductive part on the appliance that requires testing.


Do not use the probe for the 25 A bond test. The probe is only rated for 10 A!

- 2  Start the 200 mA test or the 25 A test:


 **Single test** - press momentarily
Continuous test - hold down > 2 seconds


The display shows the test progress, see the table on the next page.

- 3  During the measurement flex the flexible cord along its length to help find any broken conductors or poor quality joints.

- 4  **Continuous test only:** stop the test.



- 5  When the test is finished remove the earth bond lead from the appliance.

- 6  Store the test result, if required.





Note

If a double beep sounds the earth bond test lead has not been zeroed (no Ø symbol on the LCD). You must zero the test lead, see page 10.

Note

The insulation test may be not suitable for some types of appliances. For these appliances an alternative test may be conducted such as a touch current, leakage current, or suitable leakage current test. It is essential to refer to standards and/or reference material for the safe applicability of these alternative tests.

To perform the Insulation test, do the following:

- 1  Connect the appliance and the probe as indicated on the tester, see also Figure 5. For Class I appliances no probe is required. For Class II appliances apply the probe to any exposed metalwork on the appliance.
- 2  Start the test:
 - Single test** - press momentarily
 - Continuous test** - hold down > 2 seconds
 The display shows the test progress, see the adjacent table.
- 3  Continuous test only: stop the test.
- 4  Store the test result, if required.
- 5 For Class II continue the test for all exposed metal parts on the appliance.

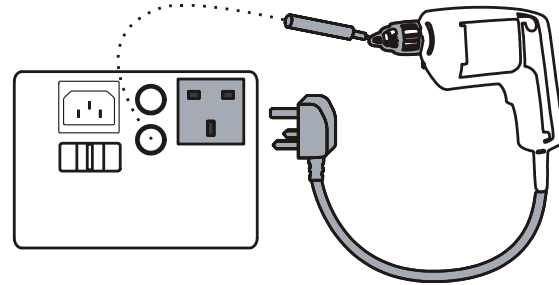


Figure 5. Insulation Test Connections

DISPLAY	EXPLANATION
INSULATION R_{ISO}	The insulation test has been selected.
5 seconds	The test time is counted down.
195 M Ω	R_{ISO} is 195 M Ω .
> 299 M Ω	R_{ISO} overrange.
Limit	The test result is below one of the recommended limits.
<2.0 M Ω CII	R_{iso} is lower than 2 M Ω (Class II)
<1.0 M Ω CI	R_{iso} is lower than 1 M Ω (Class I)

Substitute Leakage Current Test ($I_{SUBSTITUTE}$)


The test measures the leakage current between

- the earth pin of the appliance cable plug (Class I) or
- the test probe attached to the appliance under test (Class II).

and the Live and Neutral pins of the appliance (pins are connected together within the tester for this test).





It is essential to refer to standards and/or guidance material for the safe applicability of this test.

To perform the Substitute Leakage Current test, do the following:

- 1**  Connect the appliance and the probe as indicated on the tester, see also Figure 6.

For Class I appliances no probe is required.

For Class II appliances apply the probe to any exposed metalwork on the appliance.

- 2**  Start the test:
Single test - press momentarily
Continuous test - hold down > 2 seconds
The display shows the test progress, see the table on the next page.
- 3**  Continuous test only: stop the test.
- 4**  Store the test result, if required.
- 5**  For Class II continue the test for all exposed metal parts on the appliance.

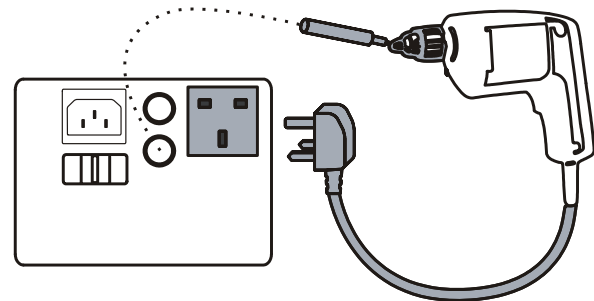


Figure 6. Substitute Leakage Current Connections

DISPLAY	EXPLANATION
$I_{\text{SUBSTITUTE}}$	The substitute leakage current test has been selected.
3 seconds	The test time is counted down.
0.13 mA	$I_{\text{SUBSTITUTE}}$ is 0.13 mA.
> 19.99 mA	$I_{\text{SUBSTITUTE}}$ overrange.
Limit	The acceptable test limit may have been exceeded. Refer to standards and/or guidance materials.

Touch Current Test (I_{TOUCH})



Warning

NEVER carry out this test unless you have first carried out a thorough visual inspection, followed by a test of the earthing (Class I appliances), and then a test of the insulation. You must verify that these tests are passed before engaging this test.




Caution

Live test! The appliance will be energized at mains voltage. For this purpose, switch on the appliance. Appliances driven by motors or equipped with heating units may present a danger for the person testing (comply with the appliance instruction manual!). Ensure that the appliance is in a safe condition to run. Please secure it prior to the test.


The Touch Current test consists of:




- a fuse and L-N loop pre-test
- a leakage current measurement with approximately 2 k Ω resistance connected between earth and exposed conductive parts on the appliance via the test probe. The measurement is performed by the direct measurement method.

To perform the Touch Current test, do the following:

- 1  Connect the appliance and the test probe as indicated on the tester, see also Figure 7.

For Class II appliances apply the probe to any exposed metalwork on the appliance.

For Class I appliances apply the probe to any exposed metalwork on the appliance that is not connected to earth.
- 2  Start the test:
Single test - hold down the button and release it after the second beep, before you hear a third long beep.
Continuous test - hold down the button and release it after you hear a third long beep.

The display shows the test progress, see the adjacent table.
- 3  **Continuous test only:** stop the test.
- 4  Store the test result, if required.
- 5  Continue the test for all exposed metal parts on the appliance.

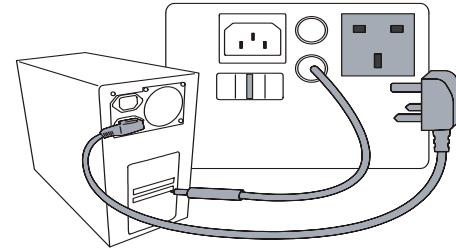



Figure 7. Touch Current Connections

DISPLAY	EXPLANATION
I TOUCH	The touch current test has been selected.
---	The live test delay period is in progress
	WARNING, this is a live test!
5 seconds	The test time is counted down.
0.13 mA	I _{TOUCH} is 0.13 mA
> 1.99 mA	Touch current overrange.
Limit	The acceptable test limit may have been exceeded. Refer to standards and/or guidance material.

DISPLAY	EXPLANATION
FAIL X	The Fuse/L-N Loop pre-test failed. Check that the appliance power switch is on. See also Fuse/L-N Loop Pre-test below.

Fuse/L-N Loop Pre-test

The pre-test verifies the fuse and lead continuity by applying a low voltage signal across the appliances phase and neutral pins.

Very low power appliances, or appliances with electronically controlled on/off switches or with an inductance may fail this test. To enable you to test these appliances you can skip the Fuse/L-N Loop Pre-test.

To perform the test on appliances that fail the Fuse/L-N Loop Pre-test do the following:

release



Load/ Leakage Current Test



Warning

NEVER carry out this test unless you have first carried out a thorough visual inspection, followed by a test of the earthing (Class I appliances), and then a test of the insulation. You must verify that these tests are passed before engaging this test.



Caution





Live test! The appliance will be energized at mains voltage. For this purpose, switch on the appliance. Appliances driven by motors or equipped with heating units may present a danger for the person testing (comply with the appliance instruction manual!). Ensure that the appliance is in a safe condition to run. Please secure it prior to the test.

The Load/PE Leakage test consists of:

- a fuse and L-N loop pre-test
- measurements of the appliance power consumption and load current at full mains voltage
- measurement of the earth leakage current (differential measurement) at full mains voltage.

The measurements are performed in one test sequence.

To perform the Load/PE Leakage test do the following:

- 1  Connect the appliance and the test lead as indicated on the tester, see also Figure 8.
- 2  Start the test:
Single test - hold down the button and release it after the second beep, before you hear a third long beep.
Continuous test - hold down the button and release it after you hear a third long beep.
The display shows the test progress, see the table on the next page.
- 3  Continuous test only: stop the test.
- 4  Store the test result, if required.

Note

Accidental measurement of a defective unit may trip a RCCB (residual current circuit breaker).

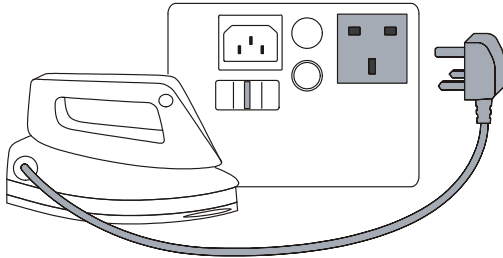


Figure 8. Load/Leakage Connections

DISPLAY	EXPLANATION
LOAD	The Load/Leak test has been selected.
---	The live test delay period is in progress
	WARNING , a live test is going on!
5 seconds	The test time is counted down.
MULTI RESULTS	The results are being cycled through the display. In continuous test mode the results are updated for each new measurement.



LOAD	0,2 A	The load current is 0.2 A.
>	12,9 A	Load current overrange detected.
	50 VA	The load power is 50 VA.
>	3,2 kVA	Load power overrange detected.
>		Excess load surge condition detected.
PE LEAK	0,2 mA	The leakage current is 0.2 mA
>	19,99 mA	Leakage current overrange.
>		Excess leakage current surge condition detected.
Limit		The acceptable test limit may have been exceeded. Refer to standards and/or guidance material.
FAIL X		The Fuse/L-N Loop pre-test tailed. Check that the appliance power switch is on. See also Fuse/L-N Loop Pre-test below.

Fuse/L-N Loop Pre-test

The pre-test verifies the fuse and lead continuity by applying a low voltage signal across the appliances phase and neutral pins.

Very low power appliances, or appliances with electronically controlled on/off switches or with an inductance may fail this test. To enable you to test these appliances you can skip the Fuse/L-N Loop Pre-test.


To perform the test on appliances that fail the Fuse/L-N Loop Pre-test do the following:

release  and press it again before the  indication is removed from the display, (press as described at step 2 of the test procedure).

IEC Lead Test




The IEC lead test tests the IEC lead for:

- Earth bond resistance and insulation.
- Live-Neutral lead/fuse continuity and polarity.

If there is a swapped polarity condition and a continuity failure in the same test, a failed polarity message  will be displayed.

You can use the adapter EXTL100 (optional accessory) to test extension leads.

To perform the IEC Lead test, do the following:

- 1  Connect the IEC lead as indicated on the tester, see also Figure 9.
- 2  Start the test.
The IEC Lead test runs only in the single test mode.
The display shows the test progress, see the table on the next page.
- 3  Store the test result, if required.





9.9.11
> 0.10 Ω
+ LEAD?
ON

R_{PE} has ex
possibly because of

PELV Test

The PELV (Protective Extra Low Voltage) test measures the voltage on the **PROBE PELV** input when the idle screen is being displayed..

To perform the PELV test, do the following:

- 1  Revert to the idle screen if it is not already being displayed.
- 2  Connect the test probe to the tester PROBE PELV input and connect the appliance to a mains supply socket.
- 3  Apply the test probe to the test point.
The display shows the test result, see the table below.
- 4  Store the test result, if required.

DISPLAY	EXPLANATION
> PEL VAC	The PELV is above the acceptable limit.
230 VAC	The PELV is below the acceptable limit, the display shows the IDLE screen.

Using the Memory

The tester has a non-volatile memory to save a minimum of 100 test results. The power-on screen shows a message if the memory is full or nearly full:

memory > 75 : the store is nearly full (>75%)



memory > : the store is completely full



If one of these messages is shown you should print the stored test results (see page 26), and then clear the store (see page 26).




Printing Test Results

The print function prints all the stored results from the earliest to the latest using the optional Fluke SP1000 printer. Printing is disabled when any appliance test is running.

To print the results, do the following:

- 1  Connect the printer to the tester RS232 port.
- 2  Start printing, the display shows the progress, see the table below.

DISPLAY	EXPLANATION
	The printer is connected and turned on.
MULTI RESULTS	All records will be printed
PRINT 12	Record 12 is in progress.
PRINT 	Printing has finished or there are no results in the memory, the display reverts to the idle screen.

If the beeper sounds, and the  icon is turned off when you press , the tester could not detect the printer. In this case also the idle screen will not show the  icon.

If printing fails, do the following:

- verify that the SP1000 printer is connected to the tester and that the printer power is on.
- verify that you use the correct cable.
- Verify that the printer dip-switch settings are in the default position (see SP1000 User Guide).

Maintaining the Tester

Cleaning

Periodically wipe the case with a damp cloth and mild detergent. Do not use abrasives or solvents.

Dirt or moisture on the earth bond test lead plug can result in a contact resistance that affects the readings. Therefore periodically zero the earth bond test (see page 10).

Calibration

To ensure the accuracy of the tester is maintained at high level it is recommended that the tester is calibrated at least once every 12 months. Calibration must be carried out by qualified personnel. Contact your local Fluke representative for calibration (see Contacting Fluke on page 1).

Accessories

Table 2 and Table 3 list the part numbers of the accessories.

To order the accessories contact your local Fluke representative (see Contacting Fluke on page 1).

Table 2. Standard Accessories

Item	Part Number
Crocodile Clip	532269474055
Test Lead	532269474056
Touch Current Probe	1276841
Users Manual (this manual)	¹⁾

¹⁾ Can be downloaded from your regional Fluke website, start at www.fluke.com .

Table 3. Optional Accessories

Item	Part Number
SP1000 Mini Printer	1597281
EXTL100 Extension Lead Test Adapter	2414348
TA700 Appliance Adapter for 110V Tools	2389678
Fluke PowerPAT Plus Appliance Testing Software	2143155

Specifications

General Specifications

Size 200 mm (L) x 275 mm (W) x 100 mm (H)
Weight 3.0 kg
Power Supply 230 V + 10 % - 15 %, 50 Hz ± 2 %
Power consumption (Tester) 13 W typical (idle)
60 W max. during 25 A Bond Test
Operating temperature 0 to +40 °C
Storage Temperature -10 to +60 °C
Relative Humidity
..... non condensing < +10 °C
..... 95% from +10 to +30 °C
..... 75% from +30 to +40 °C

Operating Altitude 0 up to 2000 m
Sealing IP-40 (enclosure), IP-20 (connectors)
EMC complies with EN61326-1, criteria B
EMI Immunity 3 V/m
Safety Complies with EN61010-1 2nd edition
DIN VDE0404-1 and DIN VDE0404-2
CAT II, 300 V, pol 2

Printer – PC RS232 Interface

Baud rate factory default 9600
Data bits 8
Stop bits 1
Parity no

Touch Current Test (I_{TOUCH})

Operational Error Measurement Range 0.1 to 1.99 mA
Operational Error 6.0%
Accuracy \pm (4% + 2 counts)
Display Range 0 to 1.99 mA ac
Resolution 0.01 mA
Internal Resistance (via probe) 2 k Ω
Measuring method Probe
The appliance under test is energized at mains potential.

Substitute Leakage Current Test (I_{SUB})

Operational Error Measurement Range ...0.25 to 19.00 mA
Operational Error 10%
Accuracy \pm (5% + 5 counts)
Display Range 0 to 19.99 mA ac
Resolution 0.01 mA
Test Voltage 35 V ac \pm 20%

Load/ Leakage Test: Load Current

Display Range 0 to 13 A
Accuracy \pm (4% + 2 counts)
Resolution 0.1 A
The appliance under test is energized at mains potential.

Load/Leakage Test: Load Power

Display Range 0 to 999 VA
1.0 kVA to 3.2 kVA
Accuracy \pm (5% + 3 counts)
Resolution 1 VA (0 to 999 VA)
0.1 kVA (1.0 kVA to 3.2 kVA)

The appliance under test is energized at mains potential.

Load/Leakage Test: Leakage Current (I_{PE})

Operational Error Measurement Range .. 0.25 to 19.00 mA
Operational error 12.0%
Accuracy \pm (4% + 5 counts)
Display Range 0.25 to 19.99 mA
Resolution 0.01 mA
The appliance under test is energized at mains potential.

