

Cable Mounting Instructions





SMA, Straight Clamp Type Connector

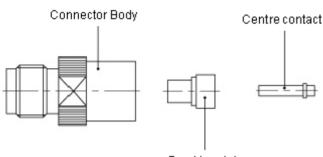


Front Insulator



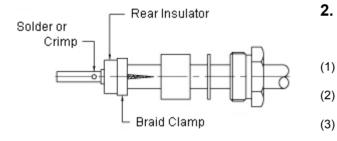






Part Number Table

Description	Part Number
Plug, SMA, Straight, Clamp, RG58	19-01F-3-TGG

Important Notice : This data sheet and its contents (the "Information") belong to the members of the Premier Famell group of companies (the "Group") or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but the Group assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information or use of it (including liability resulting from negligence or where the Group was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict the Group's liability for death or personal injury resulting from its negligence. Multicomp is the registered trademark of the Group. © Premier Farnell plc 2011.

www.element14.com www.farnell.com www.newark.com

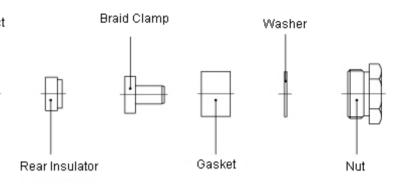

Preparation of Cable

- Slide nut, washer and gasket onto cable
- Strip cable to recommended dimensions shown in catalogue
- Slit cable jacket in two places, 180°C apart

Soldering Centre Contact to Cable Centre Conductor

Flare slightly end of cable braid to facilitate insertion of braid clamp

- Slide braid clamp onto cable until braid clamp shoulder rest against cable jacket
- Slide rear insulator and centre contact onto cable to rest firmly against each other
- (4) Solder (or crimp) centre contact to cable centre conductor

3. Insulator onto Centre Conductor

Insert front insulator onto centre contact

4. Final Assembly

(1)

(1) (2) Insert cable assembly and hardware into connector body Screw and tighten nut on

