


# DeluxZ WOOD SHELL RACK KITS

## ASSEMBLY INSTRUCTIONS FOR ALL SIZES




Your fixing kit has

- 12 x M6 'U' Spring Nuts
- 12 x M6/30 FBE Bolts
- 8 x No4 12mm Screws
- 1 x 4mm Allen Key

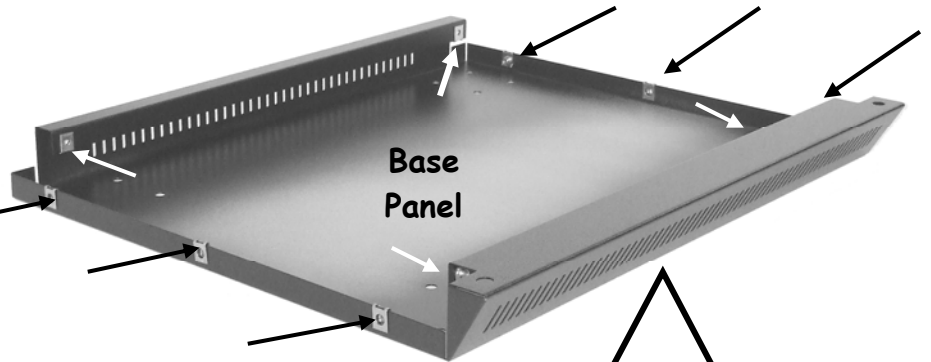

1

Push on the four **M4** 'U' spring nuts with the **flat side outwards** on the inside corners (**White Arrows**) Then fit the six **M6** 'U' spring nuts onto the side returns (**Black Arrows**) & repeat this with the top panel

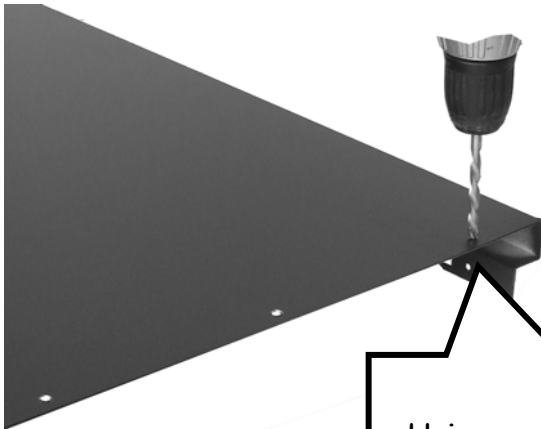


2

Using a sharp **6.5mm** Drill Open out the 6 holes in Each of the 2 Side panels




Then assemble the rack using the 8 corner fixing points as shown here

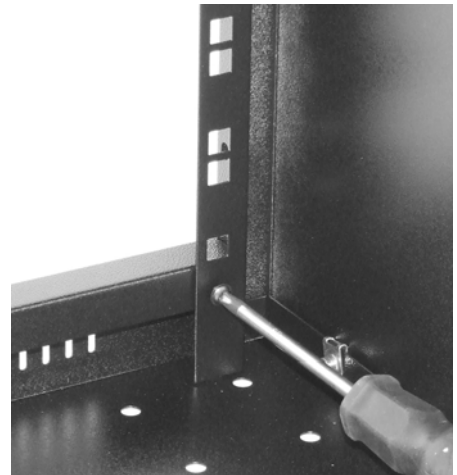



**5**  
 Now fit the the 1<sup>st</sup> wood side panel -  
 Make sure the panels front holes are  
 92mm from the racks leading edge  
**DO NOT FULLY TIGHTEN**

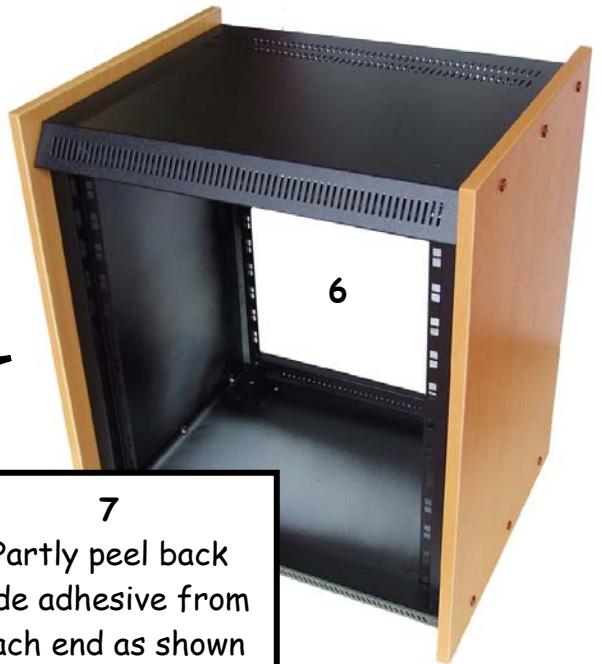

**6**  
 Now fit the 2<sup>nd</sup> side panel  
 as shown below  
**DO NOT FULLY TIGHTEN**

**7**  
 Partly peel back  
 side adhesive from  
 each end as shown



**8**  
 Position the top panel centrally on the  
 rack 3mm from the front & back edges  
 Then peel away the release strips and  
 tighten up the side screws - Then repeat  
 this operation for the base panel



**9**  
 Finally using the 12mm screws  
 secure the top & bottom panels  
 through holes the metalwork

