


The fitting kit for the 5100 Display includes parts for underpanel fitting and ¼ DIN cutout.

Rubber Seal for ¼ DIN, Foam Gasket for Underpanel

Qty 4 Moulded Bracket
Qty 4 M4 screw with nut
Qty 4 M3 screw

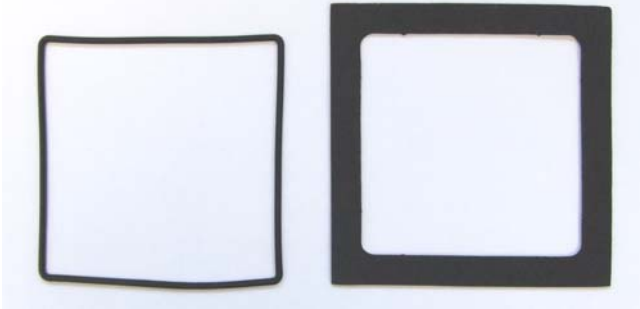

¼ DIN Fitting

Prepare the panel – see drawing in Engineering Manual.

Fit the M4 nuts and screws to the brackets.



Allow the screw to protrude to touch the panel

Fit the unit into the panel using 4 brackets

Tighten the M3 screws (#1 PZ) to attach each bracket to the rear of the unit.

Tighten the M4 screws (#2 PZ) to pull the unit down to the panel surface

View of Installed Unit

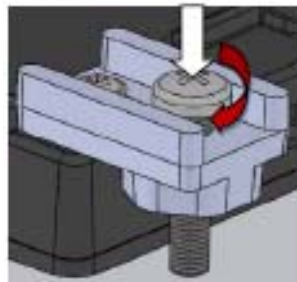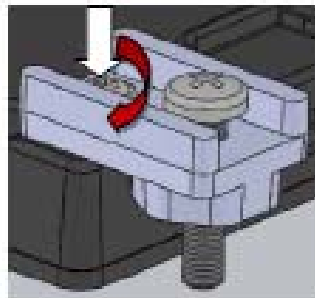

Underpanel Fitting

Prepare the panel – see drawing in Engineering Manual

Place the foam gasket on the display front

Fit the unit into the panel

Place one bracket over each weld stud

Fit a nut over each weld stud (nut size to suit weld stud used) and tighten down.

View of Installed Unit

