


## C320KG INTERLOCKS

### AUXILIARY INTERLOCK INSTALLATION

1. Disconnect all power to the contactor.
2. Insert the interlock drive hook into the contactor drive bar.
3. Pull interlock up and insert the mounting hooks into the notches on the top of the contactor.
4. Push the interlock into the notches until tab A locks into place.

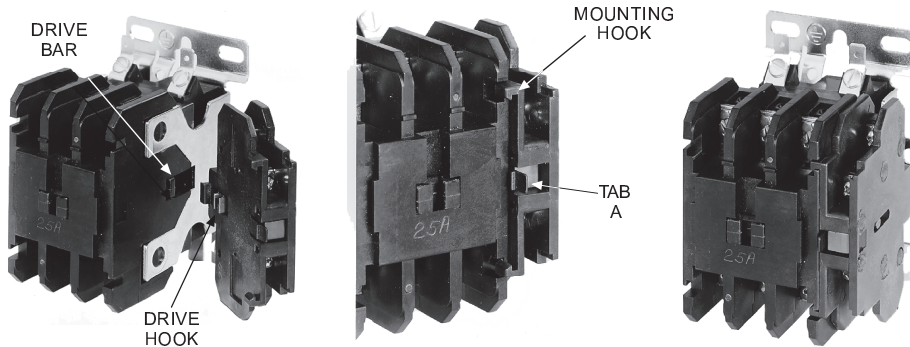

WIRING TERMINAL CAPACITY	AUXILIARY INTERLOCKS			
	With Pressure Plate Terminals		With Quick-Connect Terminals	
	Contacts	Catalog No.	Contacts	Catalog No.
2 Wires - #12 - #14 AWG, Stranded or Solid 2 Wires - #16 AWG, Stranded COPPER WIRE ONLY	N.O.	C320KG1	N.O.	C320KG11
	N.C.	C320KG2	N.C.	C320KG12
	N.O./N.C.	C320KG3	N.O./N.C.	C320KG13
	N.O./N.O.	C320KG4	N.O./N.O.	C320KG14
	N.C./N.C.	C320KG5	N.C./N.C.	C320KG15