


For Installation in Drywall

For other wall types please use our Simple Mount TV Hanger (S2060-SF).

STEP 1: INSTALL TV MOUNTING BRACKET

Place the TV face down on a soft surface where it is secure and stable. If your TV is already attached to a base, it must be removed before beginning the installation. The VESA holes on the back of the TV are either 4mm, 5mm, 6mm, 8mm depending on the brand of the TV. This kit includes all sizes.

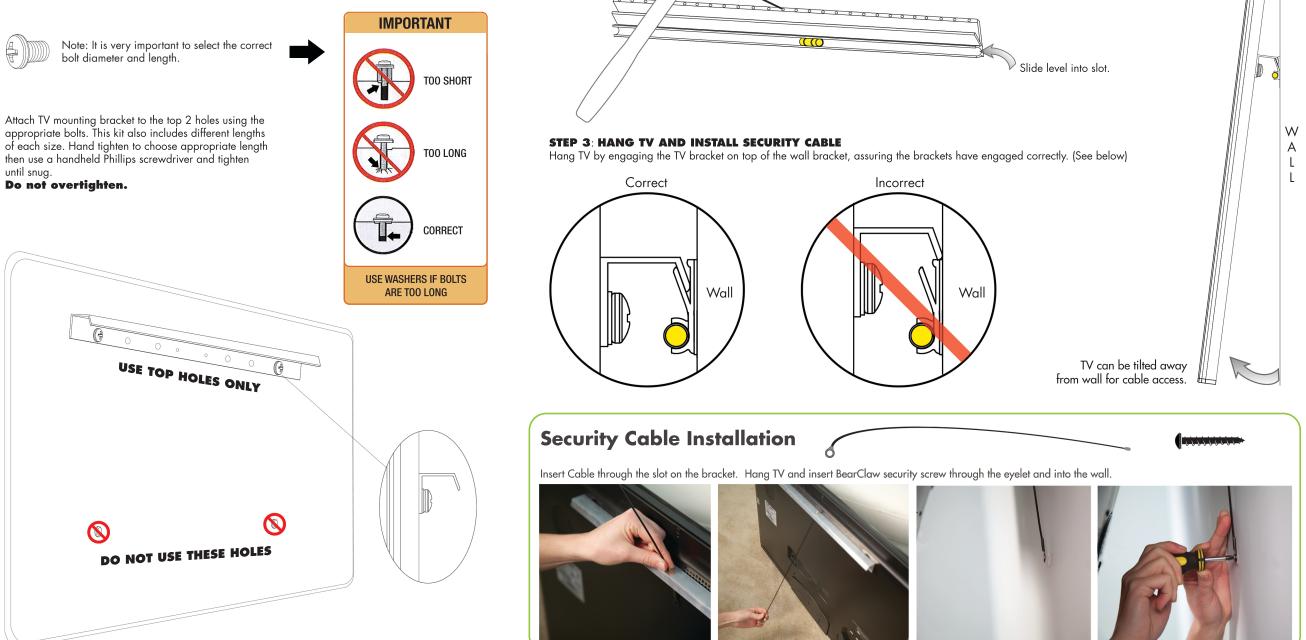

STEP 2: INSTALL WALL BRACKET

Hold the wall bracket in place and install center nail first. This will allow you to easily adjust the bracket rotation.

(Each nail holds 10 lbs.)

Insert level into slot and make sure it is level before installing the remaining nails.