



# UTP Patch Panel Installation Instructions




- 1) Strip around 1.5 inch(3.8cm) off the jacket from the end of the cable.

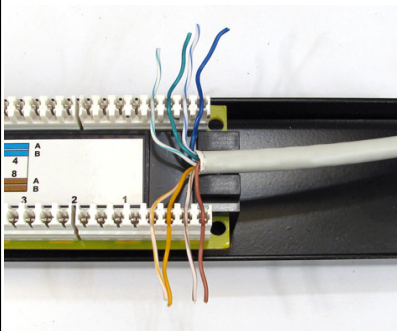


- 2) Untwist the pairs and place the wires on the IDC block in the correct configuration for either T568A or T568B.

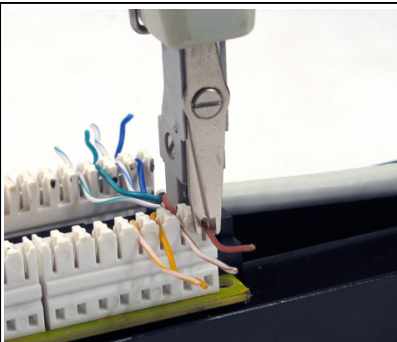

- 3) Using a suitable punch down tool, punch the wires down into position.

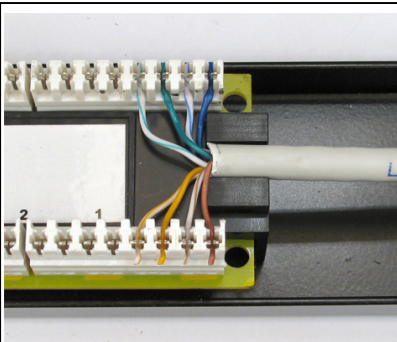

- 4) If the punch down tool does not cut excess wire, trim the excess wire off.

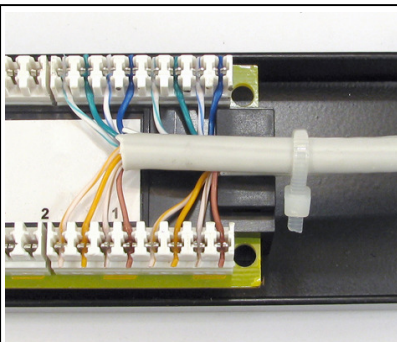

- 5) Repeat steps 1 to 4 for the required amount of cables and tidy them using cable ties.